

Power-Operated Convertible Top

The power-operated convertible top and rear quarter windows are controlled by the switch marked 'ROOF' which is located just above the gear selector 'J' gate. The top latches and unlatches automatically. It should not be opened or closed when the vehicle is being driven, however, for convenience it may be operated at low speeds below 10 mph (16 km/h).

For the operating mechanism to function the ignition key must be in position 'I' or 'II'.



WARNING:

Before opening or closing the convertible top ensure that all occupants have moved their hands, fingers, hair, etc. from the hood linkage area, windscreen frame, door windows and rear quarter windows.

Caution:

1. **Before opening the convertible top, check that there is nothing on the rear area which could interfere with the top when folded down, especially considering the heated rear window.**
2. **Do not attempt to operate the convertible top at temperatures below 5°F (-15°C). This may cause damage to the fabric.**
3. **The hood may be opened or closed at speeds below 10 mph (16 km/h). If this speed is exceeded when opening, the top will continue to move to its open position. If this speed is exceeded when closing the top, movement will stop and it will return to the open position.**

Note: When starting a journey with the convertible top open, remove the cover if there is a possibility that whilst driving it might be necessary to close the top.

To open the convertible top:

If parked:



1. Turn ignition key to position 'I' or 'II'.

If parked or driving at less than 10 mph (16 km/h):

2. Press and hold the rear of the ROOF switch. (Do not release the switch until the top is fully open.)
3. The rear quarter windows open, an audible warning sounds, and the top unlatches and starts to move. (If the front windows are fully closed they will open partially.)
4. When the top is fully open, the audible warning sounds again and the latch closes. (If the front windows were fully closed, they will return to the fully closed position.)
5. Release the ROOF switch.
6. When parked, refit the cover.

Note: The convertible top can also be opened or closed with the door key.

8-2 Exterior Features

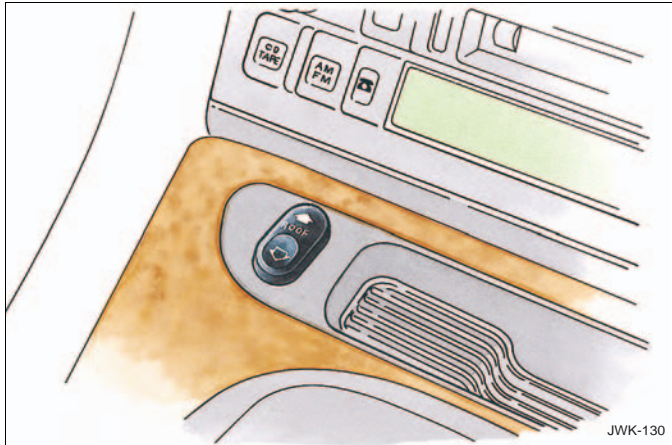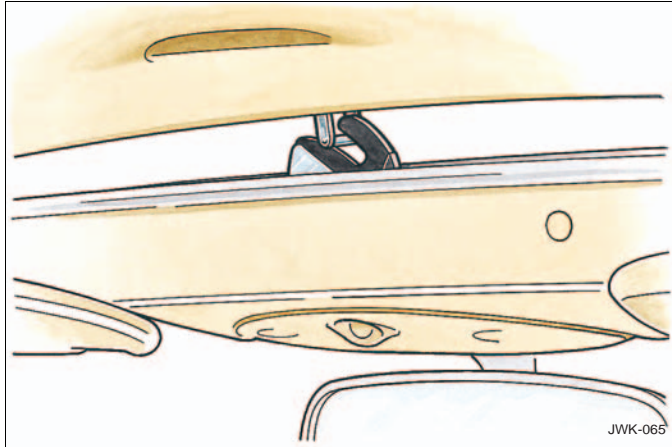

To close the convertible top:

If parked:

1. Remove the cover.
2. Turn ignition key to position 'I' or 'II'.

If parked or driving at less than 10 mph (16 km/h):

3. Press and hold the front of the ROOF switch. (Do not release the switch until the convertible top is fully closed and latched, and the rear quarter windows are fully closed.)
4. As the hood starts to move the audible warning will sound and the latch will open. (If the front windows are fully closed they will open partially.)
5. When the top is fully closed and latched, the audible warning sounds again and the rear quarter windows will close. (If the front windows were fully closed, they will return to the fully closed position.)
6. When the rear quarter windows are fully closed, release the ROOF switch.

Manual Closure

Should the convertible top mechanism fail to operate, contact your nearest Jaguar Dealer.



Caution: Do not attempt to open the convertible top manually, as damage to the linkage mechanism may occur.

If necessary, the convertible top can be closed manually, as follows:

1. The convertible top operating pump is located behind the right-hand side trim panel in the luggage compartment. Pull the trim panel from the top to access the pump.
2. Turn the pump tap fully anti-clockwise (approximately 3 1/2 turns).
3. Detach the Allen key clipped next to the pump body.
4. Remove the plug from the windscreen header trim panel and insert the Allen key into the screw socket.
5. If the latch is not in the raised position (see illustration), turn the screw fully clockwise using the Allen key.
6. Holding the convertible top by the header aperture, pull forwards until it is in the closed position.

Note: Ensure that the latch is correctly engaged with the convertible top.

7. With the Allen key, turn the screw in the header trim panel anti-clockwise, until the top is securely latched.
8. Replace the Allen key and turn the pump tap fully clockwise. Refit the trim panel and plug.

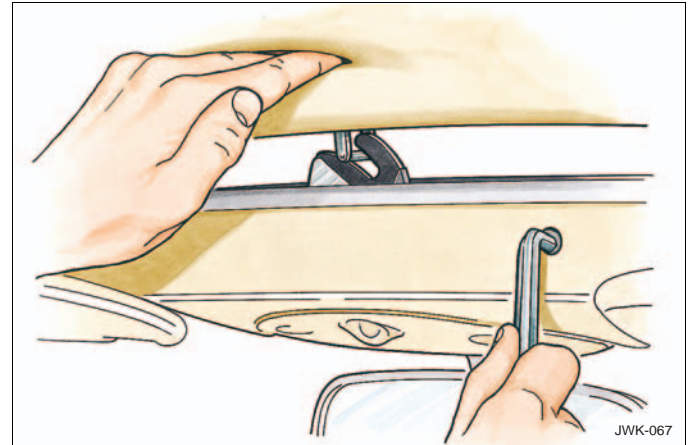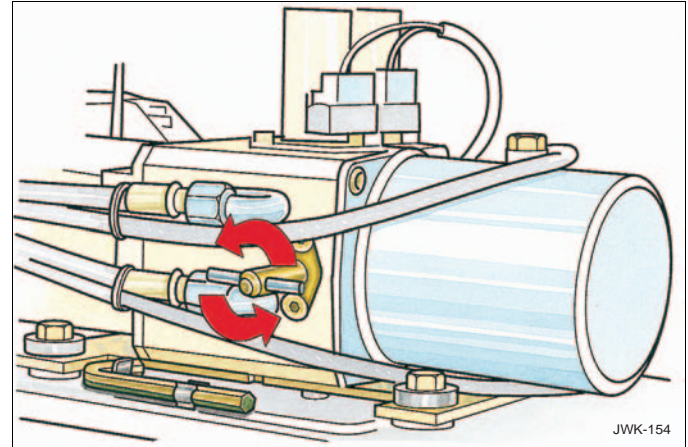

8-4 Exterior Features

Convertible Top Cover

Caution: When the convertible top is open, always fit the cover to prevent soiling and damage.

To fit the cover:


1. With the convertible top fully folded down, remove the cover from the protective bag located in the luggage compartment.
2. Place the cover in position as shown (A). Tuck the cover sides inside the body and the front edge behind the rear seat.
3. Secure the front of the cover to the trim panel with the two ring-pull fasteners. Push each fastener onto the protruding stud as shown (B) **but without pulling on the ring**; the fastener will click into place to secure the cover.

Caution: Ensure that the cover fasteners are fully engaged since a flapping cover could damage the bodywork.

4. Close the luggage compartment lid to trap the three rear cover straps (C).

To remove the cover:

1. Open the luggage compartment.
2. Undo the fasteners by pulling up the lifting rings (D).
3. Remove the cover and carefully roll it with the lining innermost. Stow in the bag provided. Avoid crushing or placing heavy objects on the cover as permanent damage may occur.

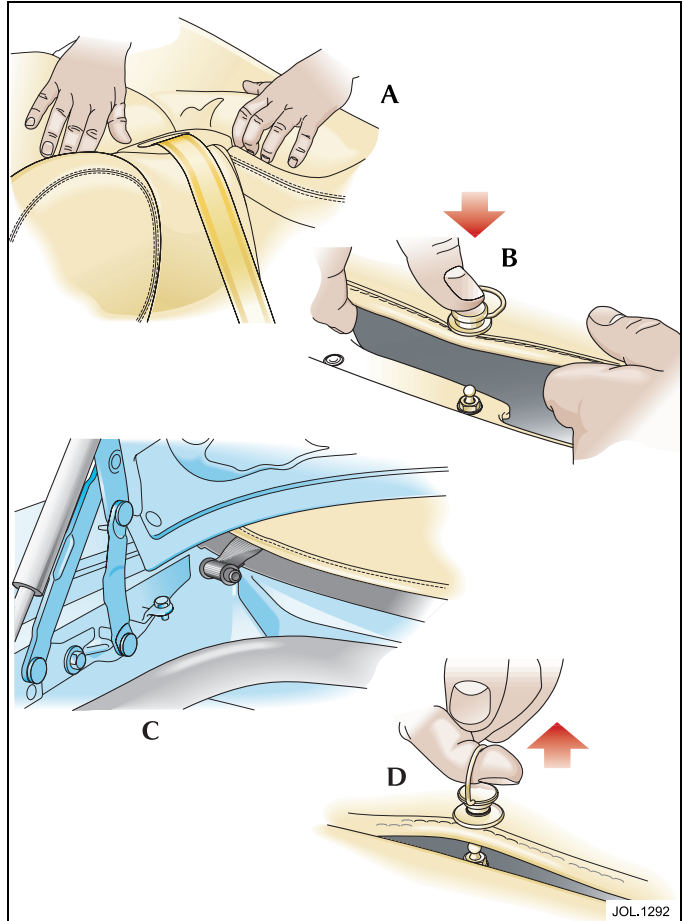

Adaptive Cruise Control (ACC)	3-21	Clock	3-2
Advanced Restraint System	4-20	Column Switch	
Air Conditioning – Climate Control	6-2	– Left-Hand	3-32
Air Distribution – Climate Control	6-4	– Right-Hand	3-37
Air Recirculation – Climate Control	6-3	Convertible Top	8-1
Airbags	4-18	Convertible Top Cover	8-4
Alarms and Audible Signals	2-10	Cruise (Speed) Control	3-19
– Audible signals	2-10	Cupholder	7-3
– Error tone	2-10		
– Full alarm	2-10	Defrost – Climate Control	6-2
Anti-lock Braking System (ABS plus)	5-3	Direction Indicators	3-34
– Braking Techniques	5-4	Door	
Ashtray and Cigar Lighter	7-3	– Guard Lights	3-36
Audible Warnings	3-40	– Locking System	2-2
Auto Headlamp	3-33	– Rear View Mirrors	4-5
Automatic Operation – Climate Control	6-2	Door locking/unlocking using key	2-2
Automatic Transmission	3-15	Drive-away Door Locking	2-7
		Driving Position Memory System	4-3
Battery Condition Indicator	3-2		
Battery Tampering Alarm and Restart Procedure	2-12	Emergency Release – Fuel Filler Flap	4-10
Brakes	5-3	Engine Coolant Temperature	3-1
Bulb Failure Monitoring	3-34	Engine Immobilisation	2-12
		Engine Oil Consumption	5-2
Centigrade/Fahrenheit Selection – Climate Control	6-3	Engine Starting Procedure	4-7
Centre Console Armrest	7-3	Entry/Exit Mode	4-4
Child Restraint Top Tether Anchorages	4-24	Exterior Lighting	3-32
Child Safety	4-22	External Temperature– Climate Control	6-4
Cigar Lighter	7-3	Fan Speed – Climate Control	6-3
Cleaning – Seat Belts	4-14	Fog Lamps	3-34
Clearing Messages	3-9	Fold-Back – Door Mirror	4-5
Climate Control	6-1	Footrest	4-28

Index

- Foreign Travel 5-6
- Front Screen Heater 6-3
- Front Seat Belt Fitting and Adjustment 4-15
- Front Seat Heaters 4-2
- Front Seats – Adjustment 4-1
- Fuel
 - Filling 4-10
 - Level Gauge 3-1
 - Tank Filling 4-11
- Fuel Cut-Off Switch 4-9

- Gear Selector Positions – Automatic Transmission 3-16
- General Driving Information 5-1
- General Information 1-1
- Global Locking 2-3
- Global Unlocking 2-3
- Glove Compartment 7-3

- Handbrake 3-36
- Hazard Warning Switch 3-34
- Headlamp
 - Main Beam 3-33
 - Powerwash 3-38
- Heated Front Screen 6-3
- Heated Rear Screen 6-3
- HomeLink® Universal Transceiver 4-30
- Horns 3-39
- Ignition/Starter Switch and Steering Lock 4-7
- Information Messages 3-9
- Instrument Illumination and Dimmer Switch 3-14
- Instruments - Controls 3-1

- Interior Door Lock Operation 2-7
- Interior Lighting 3-35
- Interior Rear View Mirror 4-6

- Jaguar
 - Diagnostic System 1-1
 - Parts and Accessories 1-1
- J-Gate Selector – Automatic Transmission 3-15

- Key Operation – Door Locking System 2-2
- Key-ring Transmitter 2-4
 - Battery Renewal 2-5
 - Button Functions 2-6
 - Care of 2-4
 - Loss of 2-4
 - Operation 2-4
- Kickdown – Automatic Transmission 3-17

- Language Selection 3-9
- LATCH Child Restraints 4-25
- Lighting
 - Exterior 3-32
 - Interior 3-35
- Limp Home Mode – Automatic Transmission 3-18
- Locking Wheel Nuts 1-2
- Luggage Compartment – Locking and Unlocking 2-8
- Luggage compartment emergency release 2-9

Message Centre	3-8	Security of Keys and Key-ring Transmitters	2-1
Messages	3-10	Security System Features	2-11
Mirror – Interior Rear View	4-6	Security System Radio Frequency	2-1
Mirrors – Door Rear View	4-5	Selecting Message Centre Functions	3-8
		Set Speed – Cruise Control	3-19
Occupant Protection – Seat Belts and Airbags	4-13	Snow Chains and Spikes Spiders	5-2
Odometer	3-1	Snow Tyres	5-2
Oil Pressure Gauge	3-2	Speedometer	3-1
		Sport Mode – Automatic Transmission	3-15
Panic Alarm	2-11	Steering Column Tilt and Reach Adjustment	4-4
Passenger airbag warning light	4-21	Steering Column Tilt Away – Entry/Exit Mode	4-4
Passive Arming	2-11	Steering Lock	
Perimeter Sensing	2-12	– Disengage	4-7
		– Ignition/Starter Switch	4-7
Rear Quarter Window Operation	3-31	Sun Visors	7-1
Rear Screen Heater	6-3	Sunglasses Stowage Compartment	7-3
Rear Seat Belt Fitting	4-17		
Rear View Mirrors	4-5	Tachometer	3-1
Regular Servicing	1-3	Temperature Selection – Climate Control	6-2
Remote Headlamp Convenience	2-11	Tilt Sensing Protection	2-12
Remote Release Switch – Luggage Compartment	2-8	Touring	5-6
Running-in for Brakes	5-3	Traction Control	3-28
		Trip Computer	3-12
Safety Precautions	1-5	Tyres–Winter	5-2
Seat Adjustment – Electrical	4-1		
Seat Back Tilt	4-2	Valet Key Locking	2-11
Seat Belts	4-13	Valet Switch	2-8
Seat Heaters – Front	4-2	Vanity Mirrors	7-1
Seat Memory – Driving Position	4-3	Vehicle Identification and Certification Label	1-8
Security Design Features	2-1	Vehicle Security	2-1
		Ventilation Airflow – Climate Control	6-4

Index

Warning Lights	3-3
Warning Messages	3-9
Warranties	1-3
Window Operation	3-29
– Automatic Drop for Door Opening	3-30
– Rear Quarter	3-31
– Re-programming after Power Disconnection	3-30
Windscreen Wipers and Washers	3-37
Winter Driving	5-2
Winter Tyres	5-2

JJM 18 02 14/20