

---

# **X-Type 2002MY NAS Driver's Handbook**

---



## Jaguar X-TYPE Driver's Handbook

JAGUAR CARS LIMITED, as manufacturer, is dedicated to the design and production of vehicles which meet the expectations of the world's most discerning purchasers.

This handbook forms part of the owner literature supplied with your vehicle. It is designed to complement the relevant features and systems of the vehicle, and make them easy to understand and operate.

The information contained in this handbook applies to a range of vehicles and not to a specific vehicle. For the specification of a particular vehicle, owners should consult their Jaguar Dealer.

The manufacturer reserves the right to vary its specifications with or without notice, and at such times and in such manner as it thinks fit. Major as well as minor changes may be involved in accordance with the Manufacturer's policy of constant product improvement.

To cover changes, it is sometimes necessary to issue one or more handbook supplements. When reading this handbook, check the owner literature for possible supplements.

For full details of the owner literature originally supplied with the vehicle, owners should consult their Jaguar Dealer.

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form, electronic, mechanical, photocopying, recording or other means without prior written permission from the Service Division of Jaguar Cars Limited.

# Contents

---

## 1. Owner information

General information . . . . .	1-1
Warnings, Cautions and Notes . . . . .	1-2
Health and safety . . . . .	1-3
Regular servicing. . . . .	1-4
Jaguar diagnostic system . . . . .	1-4
Vehicle identification . . . . .	1-5
Protect the environment. . . . .	1-6
Mobile/portable telephones . . . . .	1-6
Window tinting. . . . .	1-6
Touch-screen display . . . . .	1-7
JaguarNet Telematics system. . . . .	1-10
Before using the system. . . . .	1-10

## 2. Security and locks

Ignition switch . . . . .	2-1
Vehicle security. . . . .	2-2
Key transmitter . . . . .	2-3
Door locks and handles. . . . .	2-5
Vehicle locking and unlocking. . . . .	2-5
Child safety locks. . . . .	2-7
Alarms and audible signals . . . . .	2-10
Security features . . . . .	2-11
HomeLink® Universal Transceiver. . . . .	2-12

## 3. Before driving

Occupant protection . . . . .	3-1
Seat belts . . . . .	3-1
Advanced occupant restraint system . . . . .	3-4
Child safety . . . . .	3-10
Seat adjustment. . . . .	3-15
Steering column adjustment . . . . .	3-17
Door window operation . . . . .	3-18
Window anti-trap feature . . . . .	3-19
Mirrors . . . . .	3-20
Door rear view mirrors . . . . .	3-20
Interior rear view mirror . . . . .	3-21
Luggage compartment . . . . .	3-22

## 4. On the road

Instruments. . . . .	4-1
Warning lights . . . . .	4-2
Audible warnings . . . . .	4-8
Message centre . . . . .	4-9
Messages . . . . .	4-10
Trip computer . . . . .	4-13
Cruise (speed) control . . . . .	4-16
Exterior lighting. . . . .	4-18
Interior lighting . . . . .	4-21
Reverse park control . . . . .	4-23

## 4. On the road (continued)

Sunroof . . . . .	4-24
Wipers and washers . . . . .	4-25
Handbrake . . . . .	4-27
Horn . . . . .	4-27
Interior features . . . . .	4-28
Sun visors and vanity mirrors . . . . .	4-30
Cigar lighter and ashtray . . . . .	4-30
Rear centre armrest . . . . .	4-30
Glove compartment . . . . .	4-31
Rear sun blind . . . . .	4-32
Starting/stopping the vehicle . . . . .	4-33
Automatic transmission . . . . .	4-35
Gear-shift interlock . . . . .	4-35
Gear selector positions . . . . .	4-35
Sport mode . . . . .	4-37
Manual transmission . . . . .	4-37
Anti-lock braking system (ABS) . . . . .	4-38
Dynamic stability control (DSC) . . . . .	4-40
General driving information . . . . .	4-41
Winter driving . . . . .	4-42
Touring . . . . .	4-43
Towing a caravan or trailer . . . . .	4-44
Fuel and refuelling . . . . .	4-45

## 5. Climate control

Introduction . . . . .	5-1
Automatic climate control with LCD screen . . . . .	5-4
Automatic climate control with touch screen . . . . .	5-8

## 6. Roadside emergency

Inertia switch . . . . .	6-1
Emergency starting . . . . .	6-2
Wheel changing and jacking . . . . .	6-4
Vehicle recovery . . . . .	6-8
Bulb renewal . . . . .	6-11
Fuses and fuse boxes . . . . .	6-15
Fuse box locations . . . . .	6-16

## 7. Maintenance

General maintenance . . . . .	7-1
Hood release . . . . .	7-3
Regular checks . . . . .	7-4
Checking and topping up . . . . .	7-6
Battery . . . . .	7-14
Windscreen wipers . . . . .	7-17
Tyres . . . . .	7-18
Tyre pressures . . . . .	7-18
Vehicle care . . . . .	7-22
Interior care . . . . .	7-22
Exterior care . . . . .	7-23
Electrical accessories . . . . .	7-25

# Contents

---

## 8. Specifications

Vehicle data . . . . .	8-1
Weights (average/approximate) . . . . .	8-2
Roof-rack capacity and trailer weights . . . . .	8-3
Dimensions . . . . .	8-4
Wheels and tyres . . . . .	8-5
Tyre pressures . . . . .	8-6
Tow-bar fixing points . . . . .	8-7

A comprehensive index is located at the back of this Handbook.