


Garage Door Opener

INTRODUCTION

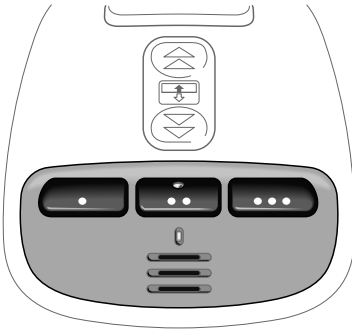

JOL2373

The garage door opener transceiver is located in the overhead console. The transceiver can be programmed to transmit the radio frequencies of up to three different transmitters used to activate garage doors, entry gates, home lighting, security systems, or other radio frequency operated devices.

Although this section mainly describes the procedures for the garage door opener, it also equally applies to the previously mentioned applications. In some countries this feature is also known as HomeLink® Universal Transceiver.



WARNING:

- **Do not use the transceiver with any garage door opener that lacks the safety stop and reverse feature as required by safety standards. A garage door opener which cannot detect an object, signalling the door to stop and reverse, does not meet current safety standards. Using a garage door opener without these features increases risk of serious injury or death.**
- **When programming the transceiver to a garage door opener or entry gate, make sure that people, the vehicle and objects are out of the way to prevent potential harm or damage as the gate or garage door will activate during the programming.**
- **This device may suffer from interference if operated in the vicinity of a mobile or fixed station transmitter. This interference is likely to affect the hand-held transmitter as well as the in-car transceiver.**

For information, or for assistance, contact your Jaguar Dealer or the supplier by phone or via the internet (see page 55).

Garage Door Opener

BEFORE PROGRAMMING

Caution: When programming a garage door opener or entry gate that may require you to press and re-press the hand-held transmitter (cycle), unplug the device during the cycling process to prevent possible motor failure.

It is recommended that for best results, fit a new battery to the hand-held transmitter of the garage door opener (or other device) before programming. If your garage door opener receiver (located in the garage) is equipped with an antenna, ensure that the antenna is hanging straight down.

TO ERASE ALL PROGRAMMING

For first time programming, ensure that the engine is switched off:

1. Turn the ignition switch to position I.
2. Press and hold the two outer buttons on the garage door opener in the overhead console. Keep the buttons pressed, the indicator light will illuminate. The indicator light is part of the middle button in the garage door opener in the overhead console.
3. Release the buttons when the lights begin to flash (this will take approximately 20 seconds).

All memories in the garage door opener have now been cleared.

Note: Do not perform this procedure when programming the additional garage door opener buttons.

PROGRAMMING THE VEHICLE



JOL2767

Ensuring that the engine is switched off:

1. Turn the ignition switch to position I.
2. Hold the end of the original garage door opener hand-held transmitter approximately 5 cm to 15 cm (2 to 6 inches) away from the transceiver in the overhead console, keeping the indicator light in view.
3. Using both hands, simultaneously press and hold both the desired garage door opener button on the overhead console and the hand-held transmitter button. Keep both buttons pressed. The light will flash, slowly at first and then change to a fast flash. When the indicator light flashes rapidly, release both buttons. The rapid flashing light indicates successful programming.

Garage Door Opener

4. If, after 60 seconds, the indicator light does not flash rapidly, release both the transceiver and the hand-held transmitter buttons and repeat the procedure starting with Step 2. However, position the hand-held transmitter at a different angle and/or distance.
5. Press and hold the programmed overhead console garage door opener button and observe the indicator light:
 - If the indicator light is solid/continuous, programming is complete. Your device should activate when the garage door opener button is pressed and held for 1 to 2 seconds and then released.
 - If the indicator light blinks rapidly for 2 seconds and then turns a solid/continuous light, proceed with the following programming instructions for rolling code device equipment.

Note: To programme additional garage door opener buttons, begin at Step 2.

Rolling code device equipment programming

Note: A second person may make the following steps quicker and easier as once the button has been pressed there are 30 seconds only in which to complete Step 3.

1. At the garage door opener receiver (motor head unit) in the garage, locate the learn or smart button/switch. The name of the button/switch may vary between manufacturers.
2. Press and release the learn or smart button.
3. Return to the vehicle and firmly press and hold the programmed garage door opener button for 2 seconds and release.
4. Repeat the press/hold/release sequence 3 times to complete the learning/training process.

The garage door opener in the overhead console should now activate the 'rolling code' device.

Reprogramming a single garage door opener button

To programme a device to a previously trained button:

1. Press and hold the desired pre-programmed garage door opener button for at least 20 seconds, but no longer than 30 seconds, until the indicator light begins to flash.
2. Without releasing the overhead console button, position the hand-held transmitter approximately 5 cm to 15 cm (2 to 6 inches) away from the transceiver in the overhead console, keeping the indicator light in view.
3. Carry out Step 3 of programming the vehicle, see page 53.

Entry gate/Canadian programming

The technology of some entry gates requires you to press and re-press (cycle) the hand-held transmitter every 2 seconds during programming.

Continue to press and hold the desired overhead console button while you cycle your hand-held transmitter until the indicator light flashes rapidly.

Garage Door Opener

INFORMATION AND ASSISTANCE

For information on the range of available compatible products or accessories, or for assistance, contact your Jaguar Dealer.

You can also contact the supplier's helpline on 1-800-355-3515 or the website address for Homelink™ is www.homelink.jci.com.

Note: *Keep the original transmitter for future use or programming procedures if, for example, you purchase a new vehicle.*

Caution: It is recommended that when you sell or dispose of the vehicle, the programmed transceiver buttons be erased for security purposes.



WARNING:

The manufacturer is not responsible for any radio or TV interference caused by unauthorised modifications to this equipment. Such modifications could void the user's authority to operate the equipment.