



Hands-free Operation

RECEIVING A CALL



An incoming call automatically switches the sound system into the Phone Mode. The audio panel display will show **Call** and the phone will ring through the vehicle's audio system.

If automatic answer has been programmed the call will automatically answer after two rings.

To answer:

Press  on the steering wheel or; press  on the audio panel.

To end:

Press  on the steering wheel or; press  on the audio panel.

Call Line Ident

If the caller has the Call Line Ident (CLI) feature, **Call** is shown on the audio panel display, followed by the caller's phone number and name (when available). The display may truncate lengthy names.

Hands-free Operation


MAKING A CALL

When making a call, there are three methods of dialling: keypad, memory search and last number redial.

Keypad dialling

To dial:


Press and hold  on the steering wheel or;


press  on the audio panel.

Phone will be displayed.

Key in the phone number on the audio panel keypad. The number will be displayed.


To connect:


Press  on the steering wheel or;

press  on the audio panel.

The display will show **Calling**.

To end:


Press  on the steering wheel or;


press  on the audio panel.

Speed dialling

Note: *Speed dialling selects the first nine locations stored in your phone's address book.*

To dial:

Press and hold  on the steering wheel or;


press  on the audio panel.


Phone will be displayed.

On the audio panel keypad, press and hold the required speed dialling memory location number **1 to 9, which corresponds with locations 1 to 9 in your mobile phone's address book.**

After 3 seconds, **Calling** will be displayed.

To end:

Press  on the steering wheel or;


press  on the audio panel.

Note: *Speed dialling can only be used once your mobile phone's address book has been transferred to the vehicle's phone system. For more information, refer to page 27.*

Hands-free Operation

MEMORY RECALL DIALLING

Using audio panel

Press  on the audio panel.

Phone will be displayed.



Press the **MR** button.

Location will be displayed.

On the audio panel keypad, press required memory number **1** to **499**.



Note: *The location number of phone book entries stored on your mobile phone may vary from those stored in the vehicle phone book.*

To connect:

Press  on the steering wheel or; press  on the audio panel.

The display will show **Calling**.

To end:

Press  on the steering wheel or; press  on the audio panel.



Using steering wheel controls

Press and hold button **3**, see page 30.

Phone will be displayed.



On the audio panel keypad, press required memory number **1** to **749**.

To connect:

Press  on the steering wheel or; press  on the audio panel.

The display will show **Calling**.

To end:



Press  on the steering wheel or; press  on the audio panel.

LAST NUMBER REDIAL

Note: *Last number redial recalls the phone number of the last call made since the ignition was switched on.*

When the ignition is switched off, the last number called may be lost from the system memory.

To dial:



Press  on the steering wheel or; press  on the audio panel.

Phone will be displayed.

On the audio panel, press and hold the **MR** button. The display will show the last number called.



Note: *If the last number was dialled using the audio panel keypad, you can change the number by pressing **CANCEL**.*

To connect:

Press  on the steering wheel or; press  on the audio panel.

The display will show **Calling**.


To end:

Press  on the steering wheel or; press  on the audio panel.


Hands-free Operation

MULTIZONE VOICE


(The XJ only, if fitted)

To transfer control of the phone from the rear of the vehicle to the front, when not on a call, press  once.

The display will show **Phone In Use**.

Press  a second time and the display will show **Phone**.

The rear system is now out of Phone Mode and the front occupants have full, hands-free control.

To transfer control of the phone during a call, press .

For more detailed information, please refer to the rear multimedia system handbook.