

ISOFIX ANCHOR POINTS

(not Australia)

WARNINGS



If the restraint is not correctly anchored, there is a significant risk of injury to the child in the event of a collision or emergency braking.



Child restraint anchorages are designed to withstand only those loads imposed by correctly fitted child restraints. Under no circumstances are they to be used for adult seat belts, harnesses or for attaching other equipment or items to the vehicle.



If removing a head restraint in order to fit a child restraint, always secure the head restraint when storing it. If left loose in the vehicle it may cause death or serious injury during sudden braking or an impact.

The rear seats of your vehicle are fitted with anchor bars that comply with International Standard Organisation regulations (ISO). They allow the ISOFIX child seats to be secured directly and easily to the vehicle body without the use of adult seat belts.

The ISOFIX system reduces the likelihood of incorrect fitting and is also quicker and simpler to use.

When installing either a front or rear facing ISOFIX child seat in the rear seats, the seat directly in front of the rear seat being used, must be set in its most forward position and with the seat in its most upright position. Therefore, it is not recommended that the front seat is occupied while using an ISOFIX child seat.

ISOFIX child seat positioning

Mass group*	Size classes	Fixtures	Vehicle ISOFIX positions
			Rear seats
Carrycot	F/G	ISO L1/L2	X
0 = Up to 10 kg (26.8 lb.)	E	ISO R1	IL*
0+ = Up to 13 kg (34.8 lb.)	E	ISO R1	IL*
0+ = Up to 13 kg (34.8 lb.)	C/D	ISO R2/R3	X
I = 9 kg to 18 kg (24 lb. to 48 lb.)	C/D	ISO R2	X
	A/B	ISO F2/F3	X
	B1	ISO F2X	IL*
II = 15 kg to 25 kg (40.2 lb. to 67 lb.)	-	Not Applicable	Not Applicable
III = 22 kg to 36 kg (59 lb. to 96.5 lb.)	-	Not Applicable	Not Applicable

- **IL** = Suitable for particular ISOFIX child restraint systems (CRS) given in the attached list*. These ISOFIX CRS are those of the specific vehicle, restricted, or semi-universal categories.
- **X** = ISOFIX positions not suitable for ISOFIX child restraint systems in this mass group and/or this size class.
- ***** = Child seats recommended for use in these locations are Britax or Roemer Duo Plus Isofix, Britax Cosy-tot Isofix or Roemer Baby-safe Isofix.

Note: ISOFIX anchorages are provided for rear seats only. ISOFIX child restraints should be securely attached, following the manufacturer's instructions, at these locations only.


Child safety

Installing an ISOFIX child seat

CAUTION

- ⚠ Always follow the manufacturer's instructions supplied with the ISOFIX child seat.

The anchorage loops are accessible through two trimmed apertures at the back of the rear seat cushion.

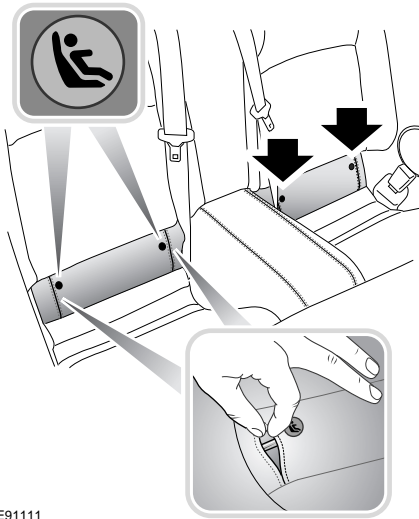


E91111

Their location is highlighted by the small tag labels with a child seat graphic. The anchorage loops are located approximately 60 mm (2.5 inches) below each label. Pull back the side of the trim to reveal the aperture and the anchorage loops.

Fit the seat as follows (the following is to be considered only as a guide):

1. Push the adult seat belt buckles into their stowage recesses, to ensure they do not interfere with the fitment of the child seat.

2. Make sure there is nothing obstructing the seat mounting mechanism at the anchorage points.
3. Fully extend the two attachment legs on the child seat. Ensure the hook at the end of each leg is open.

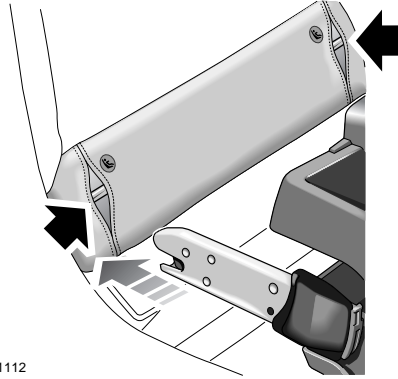

E91112

4. Position the attachment legs just in front of the trimmed apertures for the ISOFIX anchorage loops. Push the anchorage leg through the trimmed aperture to engage with the vehicle's anchorage loop. There should be an audible click.
5. Repeat Step 4 for the child seat's second anchorage leg.
6. Using firm and even pressure on both sides, push the child seat rearwards until it is secured firmly against the seat back. Make sure you do not trap the top tether strap behind the child seat.
7. If your vehicle is fitted with top tether anchorage brackets, make sure that the top tether strap is secured.
8. As a final check, firmly pull both sides of the seat to confirm that it is correctly locked into position.

Removing the ISOFIX seat

To remove the ISOFIX child seat, press the locking button on each side of the seat to release anchorage legs. If your vehicle is fitted with top tether anchorages, undo the top tether strap and lift the child seat from the vehicle.