

Deactivating the alarm when triggered

If the alarm has been triggered, it can be deactivated by any one of the following methods.

- Press the unlock button on the Jaguar Smart Key.
- Dock the Jaguar Smart Key into the starter control unit.
- Open a door using keyless entry.
- Press the START/STOP button with a valid Jaguar Smart Key present.

Battery-backed sounder

In certain markets a separate, self-contained, battery-backed sounder is fitted. This device will sound the full alarm if the vehicle alarm is activated or if the vehicle battery or the sounder is disconnected when the security system is armed.



The battery-backed sounder contains a battery and must be disposed of correctly, as it contains a number of harmful substances. Seek advice on disposal from your Dealer/Authorised Repairer and/or your local authority.

TILT SENSOR

The tilt sensor detects any change in the vehicle's inclination to the ground. When the alarm is armed and the vehicle double-locked, any change in the vehicle's inclination will activate the alarm. This feature protects against unauthorised towing away or jacking up of the vehicle.

The tilt alarm is disarmed when the vehicle security system is disarmed using the Jaguar Smart Key.

Note: If the vehicle is being transported by road, rail or sea, the vehicle should not be double-locked. Sensor override functionality should be used via the touch-screen. See **PROGRAMMING THE REMOTE CONTROL** (page 20). This prevents the tilt sensor from being activated and sounding the alarm as the vehicle pitches and rolls.

INTRUSION SENSOR

When the alarm is armed and the vehicle double-locked, any movement detected inside the cabin will activate the alarm.

The luggage compartment can still be unlocked using the Jaguar Smart Key, without sounding the alarm.

On convertible vehicles, the intrusion sensor will be automatically disabled if the roof is left open when the alarm is armed and the vehicle double-locked.

Note: It takes approximately 30 seconds after the alarm is armed, for the sensor to create a profile of the cabin and be fully armed.

Note: Ensure all windows are closed prior to setting the intrusion sensor. Failure to do so may result in false alarms being sounded.

SENSOR FAULTS

If the security system detects a fault with one of the security sensors, it will indicate this condition by emitting two error tones from the alarm siren, after the vehicle is unlocked and disarmed. If this condition occurs, consult your Dealer/Authorised Repairer, to have the fault rectified.