

FUSE SPECIFICATION CHARTS

Engine compartment fuse box

Fuse No	Rating (amps)	Fuse Colour	Circuit
F1	-	-	Not used.
F2	5A	Tan	Adaptive front lighting system - LH.
F3	5A	Tan	DSC ECU.
F4	30A	Green	Powerwash pump.
F5	-	-	Not used.
F6	5A	Tan	Adaptive cruise control.
F7	40A	Orange	Front left screen heater.
F8	-	-	Not used.
F9	15A	Blue	Cigar lighter.
F10	15A	Blue	Horn.
F11	-	-	Not used.
F12	10A	Red	Cluster VAPS.
F13	5A	Tan	Adaptive front lighting system - RH.
F14	15A	Blue	Ignition coils.
F15	-	-	Not used.
F16	-	-	Not used.
F17	15A	Blue	ECM, TCM memory.
F18	20A	Yellow	EMS main, EMS secondary control.
F19	30A	Green	Starter.
F20	40A	Orange	DSC pump.
F21	-	-	Not used.
F22	20A	Yellow	DSC valves.
F23	-	-	Not used.
F24	15A	Blue	Intercooler water pump (Supercharged engines only).
F25	-	-	Not used.
F26	40A	Orange	Wiper motor.
F27	-	-	Not used.
F28	15A	Blue	VVT diode.
F29	5A	Tan	Oil temperature.

Fuse No	Rating (amps)	Fuse Colour	Circuit
F30	10A	Red	Throttle motor.
F31	10A	Red	Radiator fan, ECM cooling fan.
F32	40A	Orange	Front right screen heater.
F33	20A	Yellow	UHEGO - A bank heaters.
F34	15A	Blue	UHEGO - B bank heaters.
F35	80A	Black	Radiator fan - Normally aspirated engines.
	100A	Black	Radiator fan - Supercharged engines.

Rear seat compartment fuse box

Fuse No	Rating (amps)	Fuse Colour	Circuit
F1	25A	Clear	Passenger door zone ECM.
F2	5A	Tan	Tyre Pressure Monitoring System.
F3	-	-	Not used.
F4	-	-	Not used.
F5	-	-	Not used.
F6	-	-	Not used.
F7	-	-	Not used.
F8	5A	Tan	Power roof logic.
F9	-	-	Not used.
F10	10A	Red	Accessory connector B+.
F11	-	-	Not used.
F12	-	-	Not used.
F13	25A	Clear	Driver's door zone ECM, OBD2.
F14	10A	Red	Navigation, VICS, power.
F15	-	-	Not used.
F16	-	-	Not used.
F17	10A	Red	Restraints control module, Instrument pack, Occupancy classification sensor.
F18	30A	Green	Electric Parking Brake (EPB).
F19	10A	Red	Supercharged active exhaust.
F20	-	-	Not used.

Fuses

Fuse No	Rating (amps)	Fuse Colour	Circuit
F21	15A	Blue	IHU, supply (IAV, ICM, ICP).
F22	5A	Tan	Phone, VEMS, power.
F23	30A	Green	Heated rear screen.
F24	10A	Red	AUU.
F25	10A	Red	DVD, power.
F26	-	-	Not used.
F27	10A	Red	Pedestrian impact sensor.
F28	40A	Orange	E-Diff.
F29	-	-	Not used.
F30	40A	Orange	Power roof rear quarters.
F31	30A	Green	Power Amp supply.
F32	40A	Orange	Power roof supply.
F33	30A	Green	Fuel pump module.
F34	40A	Orange	Blower motor.

Passenger compartment fuse box

Fuse No	Rating (amps)	Fuse Colour	Circuit
F1	20A	Yellow	Climate seats.
F2	10A	Red	ETS, Electric Parking Brake logic.
F3	20A	Yellow	Keyless vehicle module.
F4	20A	Yellow	Climate seats.
F5	5A	Tan	Instrument panel logic.
F6	15A	Blue	Air conditioning.
F7	5A	Tan	Passive Anti-Theft System (PATS) transmitter/receiver.
F8	5A	Tan	Foot brake switch.
F9	5A	Tan	Passenger seat memory switch, Passenger seat module, Sunload sensor.
F10	15A	Blue	Instrument panel (column adjust).
F11	-	-	Not used.
F12	10A	Red	Interior lamp switched power comprises - map, courtesy, footwell, sun visor, glove box. In-car aspirator.

Fuse No	Rating (amps)	Fuse Colour	Circuit
F13	-	-	Not used.
F14	15A	Blue	Adaptive dynamic ride control power.
F15	-	-	Not used.
F16	15A	Blue	Front power point, premium audio amplifier, cooling fan.
F17	5A	Tan	OBD II.
F18	5A	Tan	Driver's seat module, Singapore Road Pricing, Driver's seat memory, Driver's window and mirror switchpack.
F19	5A	Tan	RF receiver.
F20	-	-	Not used.
F21	-	-	Not used.
F22	-	-	Not used.
F23	10A	Red	Cabin accessory power.
F24	-	-	Not used.
F25	-	-	Not used.
F26	-	-	Not used.
F27	-	-	Not used.
F28	30A	Green	Passenger seat motor (2).
F29	30A	Green	Passenger seat motor (1).
F30	30A	Green	Driver's seat module (1).
F31	-	-	Not used.
F32	30A	Green	Driver's seat module (2).
F33	-	-	Not used.
F34	-	-	Not used.
F35	-	-	Not used.