

Exterior lights

To manually override to low beam from High beam assist, pull the lighting control to the flash position. High beam assist will be cancelled. To return to High beam assist, push the lighting control to the high beam position and then return it to the central position.

When High beam assist is enabled, the warning lamp will illuminate. See **53, WARNING**

LAMPS AND INDICATORS

Note: *The following may affect the operation of High beam assist:-*

- Highly reflective road signs.
- Vehicles with dim headlamps.
- Adverse weather conditions.
- Dirty sensor.
- Dirty, damaged, or misted windscreen.

To turn off High beam assist, turn the rotary control from **AUTO** to headlamps on.

High beam assist can be disabled/ enabled via the security/ vehicle settings menu of the touch screen. See **61, TOUCH SCREEN SETUP**.

Note: *Ensure that the forward facing sensor on the back of the rear view mirror is not blocked or obstructed.*

HEADLAMPS - DRIVING ABROAD

The headlamp beam pattern is suitable for driving on either side of the road. There is no need for any mechanical adjustment or external decals.

HEADLAMPS - CONDENSATION

In certain circumstances, misting may occur on the inside of a lamp lens. This is caused by natural changes in environmental conditions.

This misting is not detrimental to lamp performance and will clear during normal usage.