
INTERIOR LIGHTS

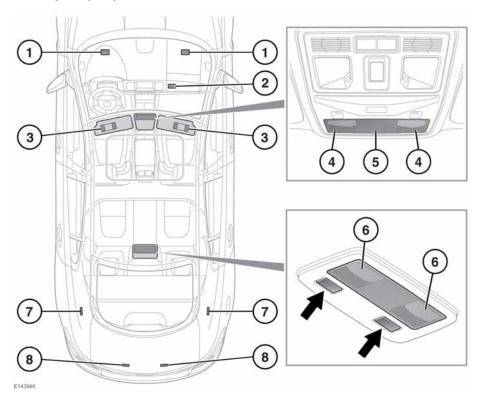

- 1. Front seat footwell illumination.
- 2. Glove box lamp.
- 3. Vanity mirror lamps.
- Front reading lamps: Touch the lens briefly to switch on/off.
- Front interior courtesy lamp: Illuminates when the doors are unlocked and extinguishes 30 seconds after all doors are closed or when the vehicle is locked.
- The lamps are operated by proximity sensors. Move your finger close to (or touch) the appropriate lens to switch on/ off. Touch the lens for 2 seconds to switch automatic illumination on/off (Manual mode or Auto mode is displayed in the message centre accordingly).
- 6. Rear interior and reading lamps: Switch on automatically when the doors are opened. Press the appropriate switch to activate a lamp manually
- 7. Luggage compartment lamp: Press the switch briefly to switch on/off.
- 8. Rear door lamps. Sportbrake only.