

Front seats

6. Height adjustment.
7. Forward and rearward adjustment.
8. Cushion front tilt adjustment.


To adjust the seats, the Smart Key must be in the vehicle and the ignition turned on.

If an obstruction is encountered while the seat is in motion, the seat will stop moving and further movement will be restricted until reset.

To reset the seat:

1. Remove the obstruction.
2. Adjust the seat to the point where movement is restricted.
3. Press and hold the switch for at least 2 seconds to override the restriction.

MANUAL SEATS

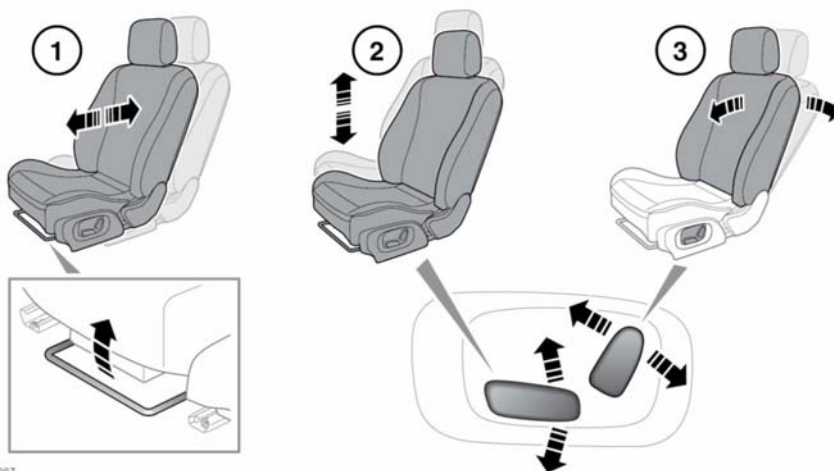

E134987



Do not adjust the seat while the vehicle is moving. Doing so could cause loss of vehicle control and personal injury.

1. Forward and rearward adjustment.
2. Height adjustment.
3. Seat back angle adjustment.