


## STEERING WHEEL CONTROLS

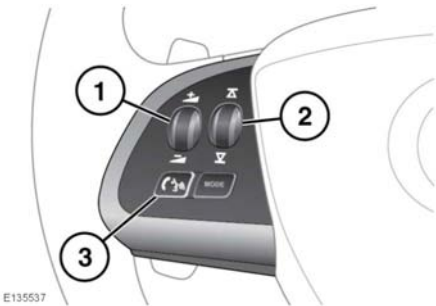

- 1. Volume control. Turn to increase/ decrease call volume.
- 2. Scroll control. Turn to scroll up/ down lists of calls or phonebook entries.
- 3. Phone/Voice control. Press and release to send, accept or end a call. If Voice control is not fitted, in addition to the above, press and release to access last 10 dialled list; press and hold to access the phonebook search view.

## CALL VOLUME

The phone call volume is operated by the audio system's volume control.

If the audio system is in use when a phone call is active, the audio system source is suppressed for the duration of the call.

## PHONEBOOK

Contacts stored in the memory of a paired phone can be automatically downloaded to the vehicle's Phonebook each time the phone is connected to the system. See **127**, **TELEPHONE COMPATIBILITY**.

Certain mobile phones store the Phonebook in two different areas, the SIM card and the phone memory. The vehicle system will access only those numbers stored in the phone memory.

To access contacts from the Phonebook:

- 1. From the Phone menu, select **Phonebook**.
- 2. Using the alpha keys, select the letter you wish to search under. Repeated selections of the same key, scrolls through the letters displayed on the keys.
- 3. Select **List** to view the Phonebook.
- 4. Identify the required contact from the displayed list and touch to call. If a contact has more than one number stored, select the required number from the list.

**Note:** It may be necessary to use the scroll bar to see the entire list.

There are also options to view more contact information, by selecting the corresponding **i** key.

If your phone supports contact type data, you will be able to see a contact type icon in the vehicle's Phonebook directory. These can be seen on the right-hand side of each contact in the directory and will indicate one of the following types:



Default.



Mobile.



Home.



Work.