
MAP SPLIT SCREEN

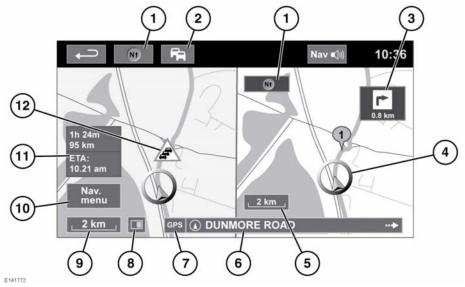

- 1. Compass. Press to select: north up, heading up or bird's eye map style.
- TMC (Traffic Message Channel) signal. Without a diagonal bar, a signal is being received; with a diagonal bar, a signal is not being received.
- Next direction display. When intersection map view has been switched off, touch icon to view again.
- 4. Current vehicle position and direction.
- 5. Right map view, scale/zoom setting.
- 6. Current location.
- 7. GPS signal indicator.
- 8. Screen selection.
- 9. Left map view, scale/zoom setting.
- **10.** Opens Navigation menu 1 of 2 screens.
- 11. Distance/time to destination.

12. TMC event (traffic congestion).



Touch to close the Intersection and Motorway junction view. The previously displayed map is shown after closing.

MAP AUTO ZOOM

Map zooms in automatically when approaching an intersection or motorway junction.

- 1. From the map screen, touch the left map view, scale/zoom soft key.
- Touch the Auto zoom soft key. The soft key will be highlighted when auto zoom is enabled.