

# Airbags

- The warning lamp fails to extinguish within 6 seconds of the START/STOP button being switched on.
- The warning lamp illuminates at any time other than during the bulb check.


## OCCUPANT SENSING

The front passenger seat is fitted with an occupancy sensor system.

An airbag status indicator lamp, is mounted in the roof console.



Whenever the airbag deactivation lamp is illuminated, the front passenger airbag will not be deployed in the event of an impact.

 **When checking the operational status of the front passenger airbag, ensure that the ignition is switched on.**


The system will adjust the passenger airbag status and operate the status indicator as follows:


Front passenger seat occupancy status	Front passenger airbag status	Status indicator active
Completely empty	Deactivated	No*
Low weight object/occupant	Deactivated	Yes**
Heavy object/occupant	Activated	No

\*It is possible to receive an intermittent indicator with an empty seat condition. This is part of the system's adaptive behaviour and does not affect the status of the passenger airbag. However, if the indicator becomes permanently illuminated when the seat is definitely empty, then contact your Jaguar Dealer/Authorised Repairer immediately.

\*\* In some cases, a small child placed in a child seat may not activate the status lamp. If this occurs, the front passenger airbag status will be as described for an empty seat.

The front passenger airbag is designed to provide supplementary protection to full sized adult occupants that are correctly seated and belted.

 **Crash statistics show that children are safest when properly restrained in a child restraint system appropriate for their age and weight and secured in a rear seating position.**

 **Extreme hazard! Do not use a rearward facing child restraint on a seat protected by an airbag in front of it.**