


# Exterior lights

## LIGHTING CONTROL

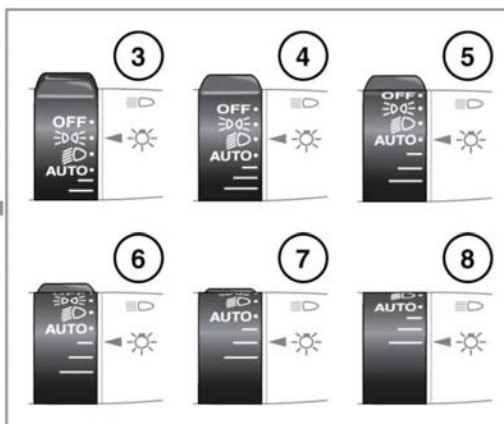

E 132401

1. With the headlamps on, push the switch away from the steering wheel to select high beam. The blue warning indicator on the instrument panel will illuminate.
2. Pull the switch towards the steering wheel and release to flash the high beam. The high beam will remain on for as long as the switch is held.
3. Side lamps.
4. Headlamps.

**Note:** If the rotary control is moved to the **OFF** position with high beam selected, high beam will illuminate when the headlamps are turned on again.

5. **AUTO.** With the ignition on, if ambient light fades the side lamps and headlamps will switch on automatically. If ambient light then increases, the side lamps and headlamps automatically go off.

**Note:** A light sensor on the front of the fascia monitors ambient light levels for autolamps operation. Keep the windscreen clean and ensure the sensor is not obscured. Obstructing the light in this area may lead to unwanted autolamps operation.

**Note:** If the **AUTO** lamps are turned off, but the light sensors detect low exterior light levels, the warning **LIGHTS ARE OFF** is displayed in the Message centre.

6. Exit delay of 30 seconds.
7. Exit delay of 60 seconds.
8. Exit delay of 120 seconds.

**Note:** Press the headlamp button on the Smart Key to switch off the headlamps during an exit delay period.

**Note:** The headlamp beam pattern is suitable for driving on either side of the road. There is no need for any mechanical adjustment or application of any external decals.