


## LIGHTING CONTROL

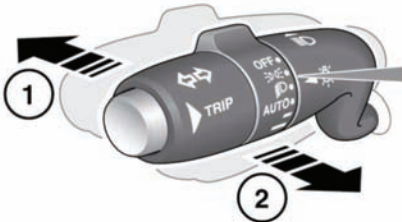


E132401

1. With the headlamps on, push the switch away from the steering wheel to select high beam. The blue warning indicator on the instrument panel will illuminate.
2. Pull the switch towards the steering wheel and release to flash the high beam on and off. The high beam will remain on for as long as the switch is held.
3. Side lamps.
4. Low beam.
5. **AUTO**: When ambient light fades the side lamps and headlamps will switch on automatically.
6. Exit delay of 30 seconds.
7. Exit delay of 60 seconds.
8. Exit delay of 120 seconds.

**Note:** If the rotary control is in the **AUTO** position there will be no exit delay and the headlamps will extinguish when the ignition system is turned off.

Press the headlamp button on the Smart Key to switch off the headlamps during an exit delay period.

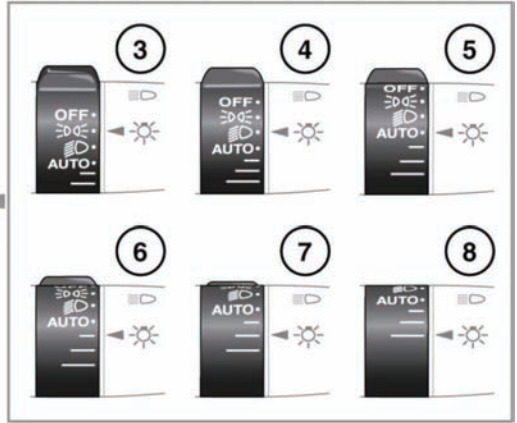

If the rotary control is moved to the **OFF** position, with high beam still activated, both low and high beam will be extinguished. Both low and high beam will illuminate when the headlamps are turned on again.

## DAYTIME RUNNING LAMPS

In some countries, with the rotary control in the **OFF** or **AUTO** position, low beam headlamps, side lamps, tail, number plate lamps and, where fitted, side marker lamps will switch on automatically with the following conditions:

- The ignition is on.
- The gear selector is out of park.
- The parking brake is not applied (is released) - market dependent.

## APPROACH LAMPS

The headlamps can be illuminated remotely for a programmed length of time, by pressing the headlamp button on the Smart key. See **5, UNLOCKING THE VEHICLE**. Press the button again to switch off.