


Heating and ventilation

FRONT CLIMATE CONTROL

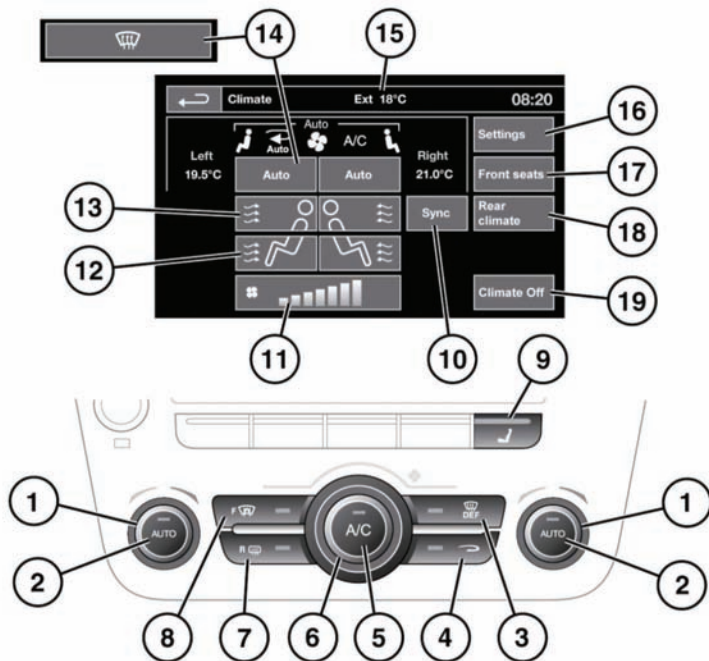

To access the front climate menu on the touch screen, select **Climate** from the home menu.

1. Temperature control: Rotate to adjust temperature (16°C - 28°C [59°F - 83°F]). The temperature is displayed on the touch screen.
2. **AUTO** control: Press to switch automatic operation on/off.

***Note:** AUTO mode should be used as the normal operating mode. The air conditioning, heating and ventilation controls automatically provide an optimum environment at the selected temperature.*
3. Defrost: Press to activate the blowers, air-conditioning, front and rear screen heaters and prohibit recirculation.

4. **Recirculation:** Select to recirculate air inside the vehicle.

Press briefly to select **timed** recirculation. Recirculation will switch off automatically after a set time (dependent on the ambient temperature).

Press and hold to select **latched** recirculation. Recirculation will remain on until the button is pressed again.

***Note:** Prolonged use at low temperatures may cause the windows to mist.*
5. **Air conditioning:** Press to switch on/off. The air conditioning system can be switched on/off independently of the other climate control functions.
6. **Blower speed:** Rotate to adjust blower speed.