


OPENING AND CLOSING THE LUGGAGE COMPARTMENT

❗ If the Smart Key is inadvertently left inside the luggage compartment and the vehicle is locked and the alarm set, an audible warning will sound and the luggage compartment will re-open after 3 seconds.


Note: If the Smart Key is inside a metal box, it will not be detected by the vehicle security system.

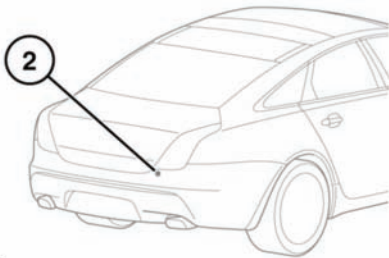

E142723

The luggage compartment can be opened using the appropriate button on the Smart Key (1), or via keyless entry. It can also be opened using the exterior release (2), provided the doors are unlocked and the gear selector is in Park (P).

Provided the vehicle is not locked or alarmed, the luggage compartment can also be opened using the interior release button, see 226, **DRIVER CONTROLS**.

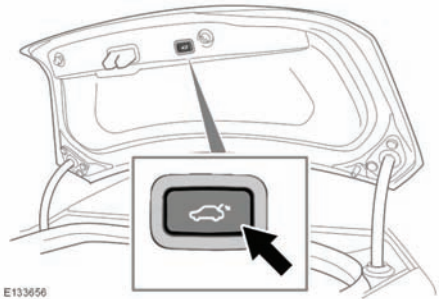

To close the luggage compartment, press the button on the closing edge of the luggage compartment lid.

Note: If any of the luggage compartment release/close buttons are pressed whilst the lid is closing, movement will stop. Check that there are no obstructions and press the close button again.

Object detection: If any object is detected that would interfere with the luggage compartment closing, lid movement will stop and reverse a short distance. Remove any obstructions and press the close button again.

LUGGAGE COMPARTMENT OPENING HEIGHT

It is possible to set the maximum height to which the luggage compartment lid will open. This is useful in parking areas with very low roofs or just for ease of use.

- Open the luggage compartment lid to the position which you want to set as the maximum height.
- Press and hold (for 10 seconds) the luggage compartment close button.
- Close the luggage compartment, then open again to check that it opens to the programmed height.

The maximum opening height is now set.