

Note: Other warnings normally associated with an engine shutdown, for example the ignition warning lamp, do not illuminate during an engine shutdown by the Intelligent Stop/Start system.

FORWARD ALERT (GREEN)



Illuminates when Forward alert is active.

DIRECTION INDICATORS (GREEN)



The appropriate warning lamp will flash when the direction indicators are operated.

If a direction indicator bulb fails, the audible ticking and warning lamp will sound and flash at twice the normal rate, when that direction indicator is selected.

CRUISE CONTROL (GREEN)



Illuminates when cruise control or Adaptive cruise control is active.