


Touch screen

TOUCH SCREEN HOME MENU

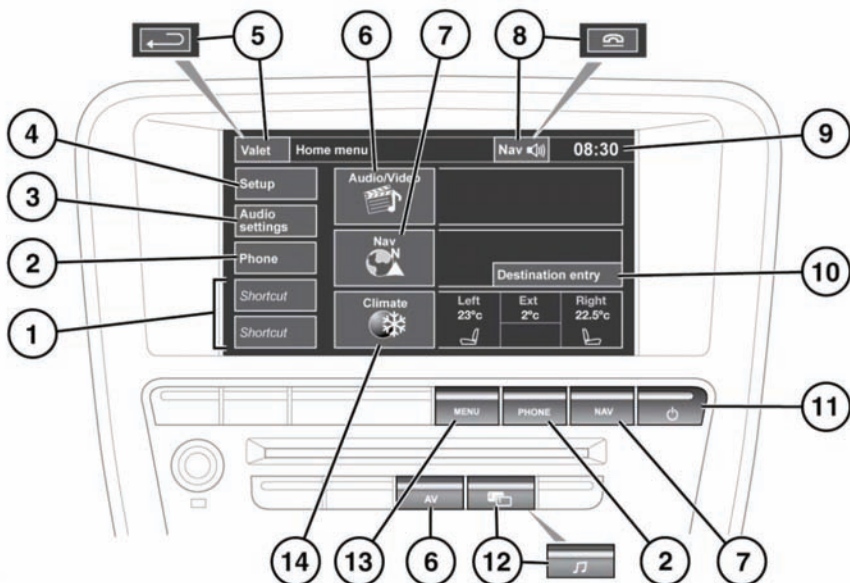

E142480



Do not adjust the touch screen controls, or allow the system to distract the driver, while the vehicle is moving. Driver distraction can lead to accidents, causing serious injury or death.



Always run the engine during prolonged use of the touch screen. Failure to do so may discharge the vehicle battery, preventing the engine from starting.



Avoid spilling or splashing liquids onto the touch screen.

1. Touch to select Home menu shortcuts. See **59, TOUCH SCREEN SETUP**.
2. Touch or press to select the **Phone** menu.
3. Touch to select the **Audio settings** menu.
4. Touch to select the touch screen **Setup** menu.
5. Touch to select **Valet** mode. During menu mode, the icon is changed to the back soft key, touch to return to the previous screen displayed.
6. Touch or press to select the **Audio/Video** menu. See **95, AUDIO/VIDEO CONTROLS**.
7. Touch or press to select the **Navigation** menu. Current set destination is displayed. See **130, MAIN MENU**.
8. While navigation is operating, touch to repeat the last given navigation instruction. During a phone call, the icon is changed. Touch to end the call.
9. Touch to adjust time/date.
10. Touch for shortcut to the **Destination entry** menu. See **132, SETTING A DESTINATION**.
11. Press to turn the touch screen on or off.