


# Automatic speed limiter (ASL)

## ASL CONTROLS

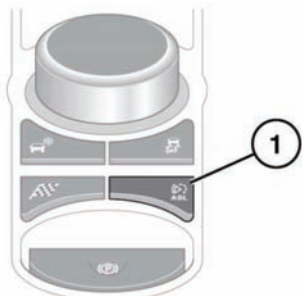

E143671



**In certain conditions, such as a steep downhill gradient, the vehicle speed may exceed the set speed limit. This is because engine braking is unable to maintain or reduce the vehicle speed.**


The ASL button switches between cruise control and ASL. The systems cannot be used simultaneously. The ASL can be set at any speed between 30 km/h (18 mph) and 240 km/h (150 mph).

**Note:** Although ASL only operates at speeds between 30 km/h (18 mph) and 240 km/h (150 mph), the maximum speed limit can be set while the vehicle is stationary.

1. ASL on/off. The ASL warning lamp will illuminate when ASL is active. See **52, AUTOMATIC SPEED LIMITER (AMBER)**.
2. Set/increase speed limit. The set speed limit will be displayed in the message centre.

When a speed has been set, the engine will respond normally up to the set speed. Further accelerator pressure will not increase the speed beyond the set speed unless sudden, rapid acceleration (kickdown) is applied. If kickdown is initiated, ASL will be suspended.

3. Decrease speed limit. The set speed limit will be displayed in the message centre.

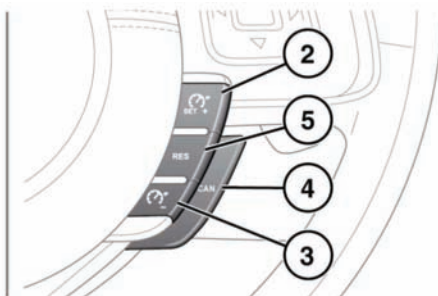

4. Suspend ASL assistance. ASL can also be suspended by applying sudden, rapid acceleration (kickdown).
5. Resume ASL assistance. ASL will only resume if the vehicle speed is less than the set speed and greater than 30 km/h (18 mph). If these criteria are not met, a message will be displayed in the message centre.