


## PORTABLE MEDIA CONTROLS

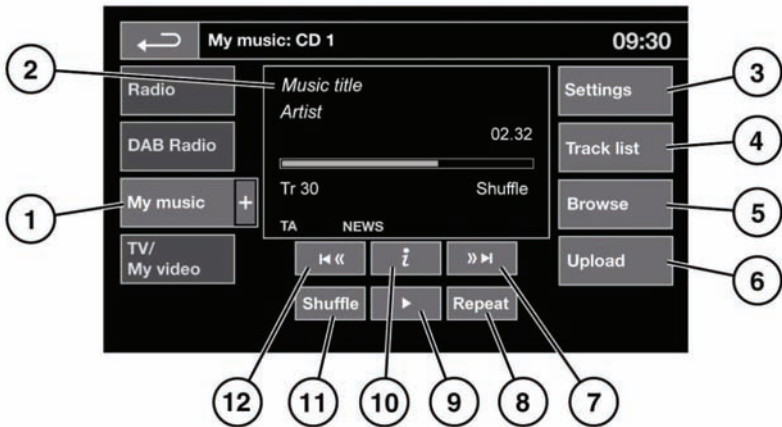

E142990

See **95, AUDIO/VIDEO CONTROLS**.

**My music** includes CD, iPod, USB, AUX and Bluetooth devices. The full infotainment system also includes Stored CD.

1. **My music:** Touch to display all portable media options. Select an option.

**Note:** Sound quality and volume levels available from devices connected to the auxiliary input may vary widely.

2. Display of information about the current track, including elapsed run-time. Some of this information is also displayed in the instrument panel.
3. **Settings:** Select to switch traffic and news announcements on or off. Additionally, for MP3 recorded media, you can select the number of list entries that are skipped when you use the page up/down arrows when navigating a list.
4. **Track list:** Select to view current CD or Stored CD track list. Select a track to start playback.

5. **Browse:** (iPod, USB and Stored CD modes only).

- Select to view the contents of the connected device which are displayed as dictated by the file structure.
- Select a file to start playback (Browse view will remain). Select a folder or subfolder to view their contents.
- To return to the Controls menu, touch the Back soft key.

**Note:** If an iPhone is connected via a USB cable so that audio can be played and it is also linked via Bluetooth® for other phone functions, the audio will only be delivered via the last connected USB port. This means that if the Bluetooth® is the last connection made to the iPhone, no audio will be heard through the speakers even though audio information is displayed on screen. To address this issue, disconnect and then reconnect the USB cable. Alternatively open the iPod application on the iPhone, press the Bluetooth® icon at the bottom of the

screen and select **Dock Connector** on the pop-up.

## 6. Upload: Applicable to Stored CD menu only.

Select to view and manage the CDs loaded onto the CD store.

- Select **Upload** alongside an empty slot to upload the current CD.
- If the CD store is full, select **Replace** to overwrite an existing CD.

In each case a confirmation pop-up will appear. Select **Yes** to continue.

**Note:** Loading time is dependent on content type. A % count up is displayed. Other features can be selected while upload is in progress.

## 7. Skip/Scan forward:

- Touch and release to skip to the next track.
- Touch and hold to scan forwards through the current track. Play will resume when the soft key is released.

## 8. Repeat.

In **CD** mode:

- Touch and release to repeat the current track continuously until Repeat mode is cancelled. **Repeat track** is displayed.
- Touch and release again to repeat the current Stored CD (or folder for MP3 discs) continuously until Repeat mode is cancelled. **Repeat disc** or **Repeat folder** is displayed.
- Touch and release a third time to cancel Repeat mode.

**Note:** Selecting **Shuffle (10)** will cancel Repeat mode, but **Repeat track** can be selected with Shuffle mode active (cancels the previously selected shuffle mode).

In **USB** or **iPod** mode:

- Select to repeat the current track.
- Select again to repeat the current folder (USB) or to cancel repeat mode (iPod). Select again to cancel repeat mode in USB.

**Note:** Repeat mode is not available for Bluetooth® devices.

**Note:** Selecting **Shuffle (10)** will cancel Repeat mode.

## 9. Pause/Play: Select to pause playback. Select again to resume playback.

## 10. Information. More information about the current track.

## 11. Shuffle:

- Touch and release once to play random tracks from the current CD, MP3 folder, USB folder or iPod playlist. A **Shuffle** message is displayed.
- Touch and release again to play random tracks from CD, MP3 disc, USB folders or tracks on the media device or tracks loaded onto the CD store. **Shuffle all** is displayed.
- Touch and release again to cancel Shuffle mode.

**Note:** Shuffle mode is not available for Bluetooth® devices.

## 12. Skip/Scan backward:

- Touch and release within 3 seconds of track playback to skip to the previous track.
- Touch and release after 3 seconds of track playback to skip to the beginning of the current track.
- Touch and hold to scan backwards through the current track. Playback will resume when the soft key is released.