

# Warning lamps

## AUDIBLE WARNINGS AND INDICATORS

| Hazard or Condition  | Chime or tone/remedy   |
|--|--|
| External lamps remain on when the driver's door is opened. | A chime will sound until the lamps are switched off or driver's door is closed (unless the lighting control is in <b>AUTO</b> position).   |
| Hazard warning indicators on.                              | A ticking will sound until the hazard indicators are switched off.   |
| Direction indicators on.                                   | A ticking will sound until the indicators are switched off.  |
| Memory 1 (2 or 3) settings saved.                          | A short tone as the memory selection is saved.   |
| Seat belt reminder.  | A chime will sound if a seat belt is unbuckled whilst the vehicle is moving. The warning will cease if the occupied seat's belt is re-buckled, the ignition is turned off or more than 3 minutes has elapsed.                  |
| Electric Parking Brake (EPB).                              | If the EPB is applied while the vehicle is moving a continuous chime will sound; release the EPB. If there is a fault with the system which would prevent the application of the EPB, a brief sequence of chimes is initiated. |
| Adaptive Cruise Control (ACC) driver intervene.            | Multiple chime. Apply the brakes.  |
| ACC low speed automatic switch off.                        | A chime will sound to indicate that the ACC system is no longer operating.   |
| Speed is over 15 km/h (9 mph) above the set limit speed.   | A short warning chime. Reduce speed.   |
| Gear selector is not in Park with ignition off.            | A chime will sound. Select Park.   |
| Entry delay warning (European markets only).               | Intermittent slow, low pitched chime. Disarm vehicle.  |
| The Smart Key cannot be detected.                          | A chime will sound. Hold the Smart Key close to the auxiliary switch pack. See <b>5, UNLOCKING THE VEHICLE</b> .   |
| DSC OFF  | A chime will sound.  |