


AUTOMATIC TRANSMISSION

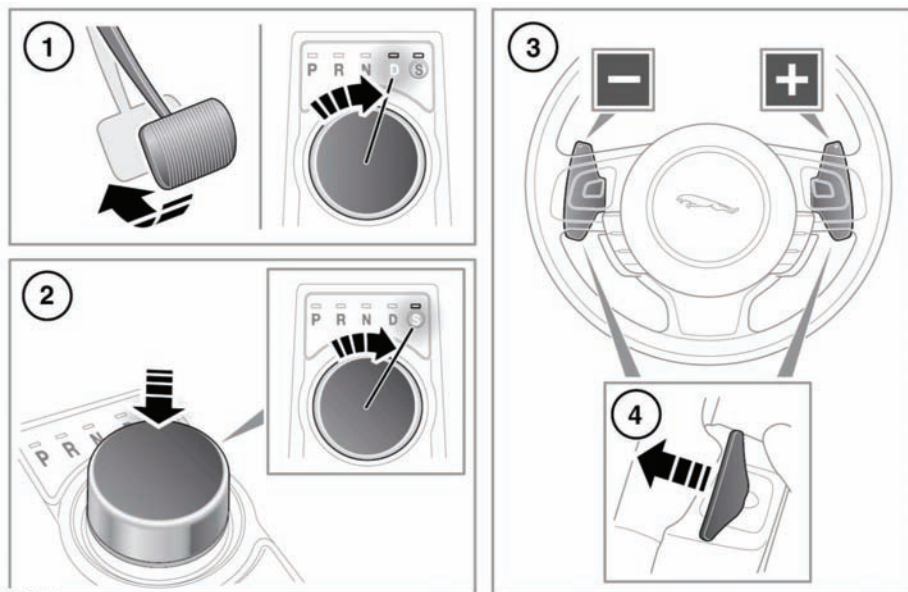

1. To select drive (**D**) or reverse (**R**) gear, press the brake pedal and rotate the rotary drive selector.
2. To select sport mode, from **D** press the rotary drive selector down and rotate to **S**.
3. Gear shift paddles (left paddle for downshifts, right paddle for upshifts), see **75, MANUAL GEAR SELECTION**.

Note: The gear shift paddles can be configured to operate in '**S** only' or '**D** and **S**' via the Vehicle Set-up menu. See **55, INSTRUMENT PANEL MENU**.

4. Pull briefly to change gear.

To exit manual mode, either pull and hold the shift-up paddle for approximately one second (to return directly to automatic operation in **D** or **S**) or, if in **S**, rotate the gear selector to the **D** position.

Note: The selected gear will be displayed in the instrument panel, also see **76, DYNAMIC MODE**.

- ⚠ Never select the Park (**P**) position whilst the vehicle is in motion.
- ⚠ Never select the Reverse (**R**) position whilst the vehicle is in forward motion.
- ⚠ Never select a forward gear whilst the vehicle is moving backwards.
- ⚠ Do not rev the engine or allow it to run above normal idle speed while selecting **D** or **R**, or while the vehicle is stationary with any gear selected.
- ⚠ Do not allow the vehicle to remain stationary with a drive gear selected and the engine running. Always select **P** or **N** if the engine is to idle for a prolonged period.