

LUGGAGE COMPARTMENT FUSE BOX

Fuse No	Rating (amps)	Fuse Colour	Circuit
F1	40A	Orange	Electronic parking brake (EPB)
F2	-	-	-
F3	-	-	-
F4	10A	Red	Chassis control module
F5	-	-	-
F6	30A	Green	Power boot lid
F7	-	-	-
F8	30A	Green	Dual battery module
F9	-	-	-
F10	-	-	-
F11	25A	Clear	Front heated seat
F12	10A	Red	Seat movement logic and switch power
F13	10A	Red	Rear seat logic
F14	25A	Clear	Rear heated seat
F15	-	-	-
F16	10A	Red	Chassis control module
F17	10A	Red	CHCM VBATT2
F18	-	-	-
F19	30A	Green	Fuel pump, BCM LSD
F20	-	-	-
F21	10A	Red	HCM, Camera, AHD, LCMA, PAM, EC, Mirror
F22	10A	Red	ACC/CVD
F23	10A	Red	AWD, Traction control module
F24	-	-	-
F25	5A	Tan	Air suspension module
F26	-	-	-
F27	-	-	-
F28	-	-	-
F29	-	-	-
F30	-	-	-

Fuse No	Rating (amps)	Fuse Colour	Circuit
F31	40A	Orange	Power amplifier
F32	-	-	-
F33	40A	Orange	E-diff module
F34	40A	Orange	Front blower motor
F35	60A	Blue	QRB
F36	40A	Orange	Sun roof module
F37	40A	Orange	Air suspension
F38	60A	Blue	Air suspension control relay
F39	-	-	-