


DAB RADIO CONTROLS

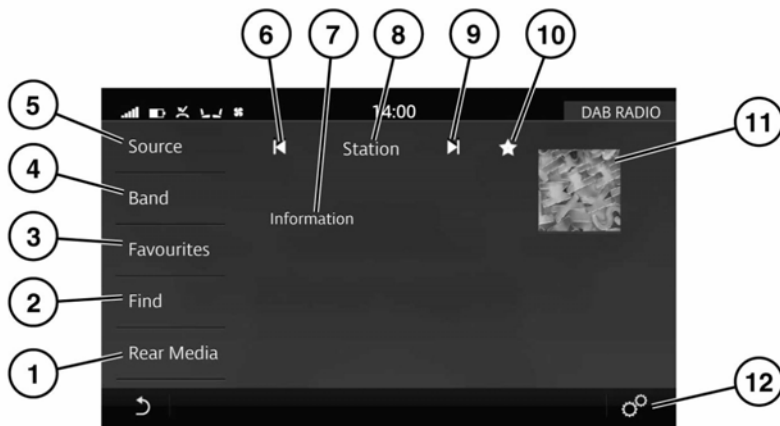

E162127



In the interest of safety, only operate or adjust the system when it is safe to do so.



Sustained exposure to high sound levels (greater than 85 decibels) can damage your hearing.

1. **Rear Media:** Select for rear media options.
2. **Find:** Touch to display options for finding a required station.
 - **DAB STATION LIST:** Touch to view a list of available channels. The list is arranged in alphabetical order; select the up or down arrows to scroll through the list.
 - **DAB GENRE:** Touch to list available genres. These are channels grouped into categories (**Pop Music**, **Travel**, etc.).
 - **SEARCH:** Touch to search using the keypad. Enter the required channel and select **OK**.

3. **Favourites:** Touch to display a single list of **AM**, **FM** and **DAB** favourite stations. To rearrange the order of the list, touch the Edit icon. Drag and drop selected items, to the desired position. Press **OK** to confirm.
4. **Band:** Touch to view and select a radio band; **AM**, **FM** or **DAB**. The radio will tune to the last used station on that radio band.
5. **Source:** Touch to display all media options.
6. **Seek down:**
 - Short touch or swipe the Touch screen from left to right, to select the previous channel.
7. **Display showing the current channel/frequency (FM).**
8. **Channel information:** Touch to view DAB text.
9. **Seek up:**
 - Short touch or swipe the Touch screen from right to left, to select the next channel.

10. Touch the Favourite icon to add to or delete from **RADIO FAVOURITES**. This will be highlighted when a tuned station is set as a favourite.
 11. Artist or station text/graphic displayed. If unavailable, a generic graphic is displayed. Touch to view further information; touch again to close the further information display.
 12. Select **DAB Settings** via the **SETTINGS** pop-up menu. Touch to manage the following features: **Link to FM Stations**, **Frequency Band** and **Announcements**. See **117, DAB RADIO SETTINGS**.
- Select **Announcements**, (Traffic, News, etc.) from the list. The selected announcements will interrupt the current programme, when broadcast.

Note: The Media system provides a 2-channel radio, enabling occupants to listen to 2 different radio stations at the same time (not available in all markets).

Note: Electronic devices used within, connected to, or within close proximity to the vehicle, may affect the performance of this system (e.g., radio reception, etc.).

DAB RADIO SETTINGS

In **DAB Settings**:

- If the **Link to FM Stations** setting is switched on and the signal strength for a channel falls below an acceptable level, the Media system will automatically switch to the FM version of this station (only when available).
- Choose **Frequency Band** if moving to a region that uses a different digital band. Available formats are:
 - Band 3.
 - Band L.
 - Band 3 & Band L.
 - Band 3 China.
 - Band 3 China & Band L.