



BY APPOINTMENT TO
HER MAJESTY QUEEN ELIZABETH II
MANUFACTURERS OF DAIMLER AND JAGUAR CARS
JAGUAR CARS LIMITED COVENTRY



BY APPOINTMENT TO
HER MAJESTY QUEEN ELIZABETH
THE QUEEN MOTHER
MANUFACTURERS OF DAIMLER AND JAGUAR CARS
JAGUAR CARS LIMITED COVENTRY



BY APPOINTMENT TO
HIS ROYAL HIGHNESS THE PRINCE OF WALES
MANUFACTURERS OF DAIMLER AND JAGUAR CARS
JAGUAR CARS LIMITED COVENTRY

Rear Multimedia Handbook

Publication Part No. **JJM 18 46 21 501**

Published November 2004 by Technical Communications, **Jaguar Cars Limited**

JAGUAR CARS LIMITED, as manufacturer, is dedicated to the design and production of vehicles which meet the expectations of the world's most discerning purchasers.

This handbook forms part of the owner literature supplied with your vehicle. It is designed to complement the relevant features and systems of the vehicle, and make them easy to understand and operate.

The information contained in this handbook applies to a range of vehicles and not to a specific vehicle. For the specification of a particular vehicle, owners should consult their Jaguar Retailer.

The manufacturer reserves the right to vary its specifications with or without notice, and at such times and in such manner as it thinks fit. Major as well as minor changes may be involved in accordance with the Manufacturer's policy of constant product improvement.

To cover changes, it is sometimes necessary to issue one or more handbook supplements. When reading this handbook, check the owner literature for possible supplements. Any further updates will be posted on the Jaguar Cars internet site and can be accessed at www.jaguar.com in the Owner information area.

For full details of the owner literature originally supplied with the vehicle, owners should consult their Jaguar Retailer.

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form, electronic, mechanical, photocopying, recording or other means without prior written permission from the Service Division of Jaguar Cars Limited.



This book is printed on paper that originates from sustainable forests, is recyclable, bio-degradable and acid-free. The wood pulp is chlorine-free and the effluent water is purified before being discharged.

Handbook Contents

Quick Overview

Quick Overview 7

Introduction

System Information 15

System Components 16

System Operation

Audio System 21




DVD/VCD Player 25

Auxiliary Inputs 34

Telephone 36

JaguarVoice (where fitted) 40

  
 
A comprehensive index is located at the back of this handbook.



Quick Overview

Quick Overview

Introduction	7
Switching On	7
Operating Modes	7
System Locked	9
Audio Selection	9
Radio Controls	9
CD, MiniDisc and Tape Controls	10
Auxiliary Inputs	10
Video Display Screens	11
Video Selection	11
DVD Controls	12
Front Audio Control	12

  

Quick Overview

Introduction

The Rear Multimedia System fitted to your Jaguar allows you to control all of the available audio and video signals via the switchpack fitted within the rear armrest.

The control options allow rear seat passengers to control the output for the vehicle interior as a whole, or independently for left or right headphones and video screens.

Note: For complete operation and safety information refer to the individual sections of this handbook.

Switching On



WARNING:

Do not run the engine in enclosed spaces such as a garage as there is a danger of carbon monoxide poisoning.

Ensure that the ignition is switched to position I or II (or the engine is running)

 
Caution: Always run the engine during prolonged use of the Rear Multimedia System, otherwise the vehicles battery may become discharged, preventing the engine from starting.

Operating Modes

There are two modes of operation/control:

1. **Cabin (speakers) mode** - controls the output from the speakers inside the vehicle.
2. **Headphone mode** - controls the output from the left or right headphones.

Cabin (speakers) mode

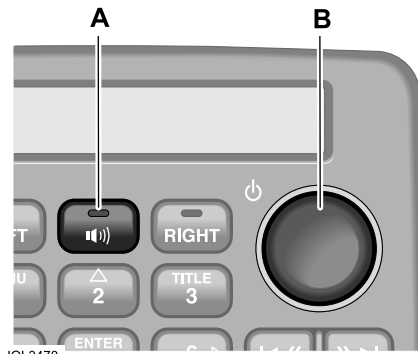

Press the rotary control **(B)** to switch on.

Press button **(A)** to select cabin mode.

When in cabin mode, all subsequent key presses on the switchpack will control the audio output to the cabin speakers.

Rotate the control **(B)** to alter the volume level.

When the system is in cabin mode the LED will illuminate on button **(A)**, and the switchpack display will show a single display.

 
Quick Overview

Headphone mode

Headphone mode controls the operation of left and right headphones (where supplied).

In headphone mode the tell-tale LED on the **LEFT** or **RIGHT** buttons (**D**) or (**F**) will indicate which side is currently being controlled. The switchpack display will be split into two - showing left and right settings.

Left headphones

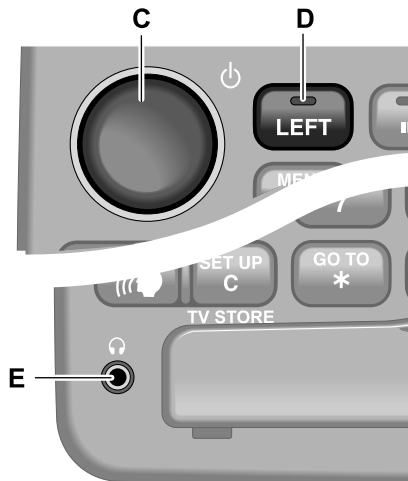

JOL3471

Plug the headphones into (**E**), the left headphone connector.

Press the rotary control (**C**) to switch on.

Press button (**D**) to select **LEFT** headphone mode.

Rotate the control to alter the volume level.

Right headphones



JOL3472

Plug the headphones into (**G**), the right headphone connector.

Press the rotary control (**B**) to switch on.

Press button (**F**) to select **RIGHT** headphone mode.

Rotate the control to alter the volume level.

Tip: Check the switchpack display and tell-tale LED's to verify which mode the system is in.

Quick Overview

System Locked

If **SYSTEM LOCKED** is displayed on the switchpack display the system has been locked from the front audio unit.

There are two levels of lockout:

1. **Off** - prevents any operation from the rear.
2. **Headphones only** - allows control and use of the rear headphones, but not cabin (speakers) mode.

See *Audio Systems Handbook* or *Touch-screen Display Handbook* (where applicable).

Audio Selection




JOL3474

Press button (H) repeatedly until the name of the audio source that you wish to listen to is shown on the switchpack display.

Tip: Using the **AUDIO SELECT** button will change only the audio, and will not alter the selection of video media shown on the video display screens.

See **Video Selection**, page 11.

 Radio Controls

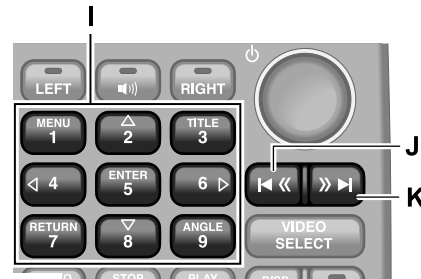

JOL3475

Press and release button (K) to seek up, or button (J) to seek down, to the next station.

 
Press and release a number from (I) to select a preset station from 1 - 9.

Tip: Storing preset stations can only be carried out from the front audio unit.

See *Audio Systems Handbook* or *Touch-screen Display Handbook* (where applicable).

Quick Overview

CD, MiniDisc and Tape Controls

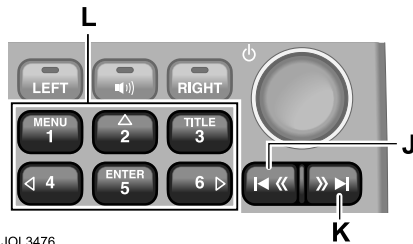

JOL3476

 
Once a CD, MiniDisc or cassette tape has been inserted and selected as the audio source, play will commence automatically. To stop play select another audio source.

Press and hold button (**J**) or (**K**) to fast rewind/fast forward. Press and release button (**J**) or (**K**) to skip forward/backward to the next/previous track.

If a CD changer is fitted and selected as the audio source, use buttons (**L**) to change the disc selected (1 - 6).

See *Audio Systems Handbook* or *Touch-screen Display Handbook* (where applicable).

Auxiliary Inputs

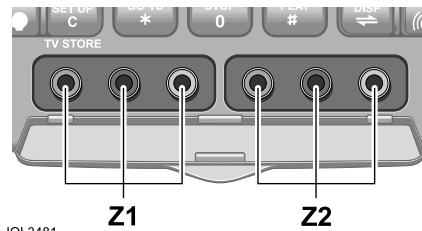


JOL3481

- Z1** AUX 1 connectors for suitable auxiliary input devices (e.g. games console).
- Z2** AUX 2 connectors for suitable auxiliary input devices (e.g. games console).

Quick Overview

 Video Display Screens

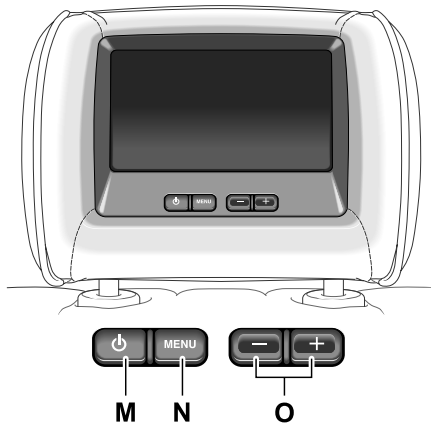

JOL3473

 
Press button **(M)** to switch on the video display screen.

If adjustments are required, press button **(N)** to display the screen settings menu. Once the settings menu is displayed press button **(N)** repeatedly to scroll through the options.

Press buttons **(O)** to alter the settings.

Video Selection

Left or right selection

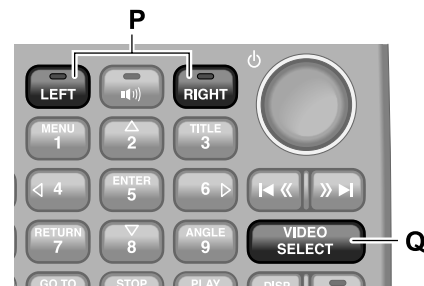


JOL3477

Press one of the **(P)** buttons to select **LEFT** or **RIGHT** screen.

Press button **(Q)** repeatedly until the name of the video source that you wish to view is shown on the switchpack display.

 Transferring audio to cabin (speakers)

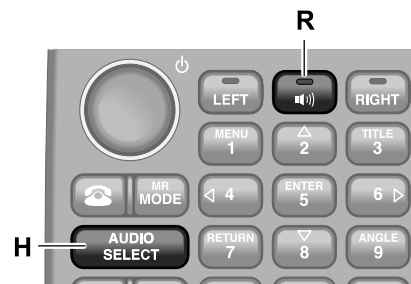

JOL3482

Press button **(R)** to select cabin (speakers) mode.

 
Then press button **(H)** repeatedly until the name of the video source is displayed.

Quick Overview

DVD Controls

Caution: When playing a DVD for long periods it is recommended that the engine is running. Playing a DVD with the engine not running may cause the vehicle's battery to discharge, preventing the engine from starting.

Inserting/ejecting a disc

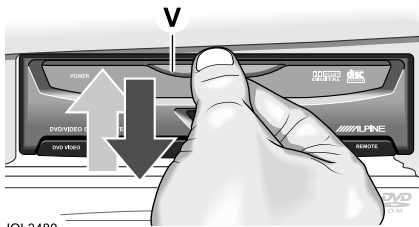

Note: The ignition switch must be in position 'I' or 'II' to insert or eject a DVD.

 
To insert a DVD into the DVD player push the flap (V) down and insert the disc with the playing side facing down (label up).

Caution: Do not use force to insert the disc, it will be drawn in by the player.

To eject a disc from the DVD player open the flap (V) and wait for the disc to be ejected (depending on the DVD player's status this may take 7 seconds).

Caution: To prevent accidental damage to the DVD player's mechanism the flap (V) should be closed following inserting or ejecting a disc.

Playing a movie

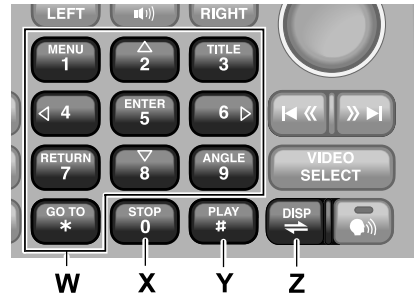

JOL3483

Press button (Y) to start movie.

Press button (X) to stop movie.

Use buttons (W) for DVD operation and control when playing a movie.

Picture format

The DVD player is capable of playing DVD's or VCD's recorded in either PAL or NTSC formats.

To switch between formats press and hold button (Z) (for 8 seconds).

Note: If the incorrect format has been selected **VIDEO SYSTEM SIGNAL IS NOT CORRECT** will be displayed.

Front Audio Control

To recover control to the **front** audio unit after playing a DVD:

- Press the associated AM/FM, CD, MD or tape switch, on the front audio unit.

See **Audio Selection**, page 9.



Introduction

System Information

Introduction	15
Warnings, Cautions and Notes	15

System Components

Switchpack	16
Audio system	16
JaguarVoice (where fitted)	16
Jaguar In-car telephone (where fitted)	16
Jaguar Navigation (where fitted)	16
Video Display Screens (where fitted)	17
DVD Player (where fitted)	18

  

System Information

Introduction

The Rear Multimedia System fitted to your Jaguar has been designed to provide rear seat passengers with a range of entertainment and communications options. The options available to the rear passengers will vary according to the level of equipment fitted to the vehicle. The Rear Multimedia System switchpack can control the following units:

- Audio (Cassette/CD/MiniDisc/Tuner/CDC - where fitted).
- DVD (where fitted).
- Telephone (where fitted).
- Auxiliary equipment (connected through AUX 1 and 2).
- JaguarVoice (where fitted).

Although most of the Rear Multimedia System operation is intuitive, it is recommended that both front and rear seat occupants take the time to read this Rear Multimedia Handbook, in addition to the other related handbooks.

Caution: Always run the engine during prolonged use of the Rear Multimedia System, otherwise the vehicles battery may become discharged, preventing the engine from starting.

Warnings, Cautions and Notes

Take particular note of **WARNINGS**, **Cautions** and **Notes** given throughout this handbook.



WARNING:

 
A warning is a procedure which must be followed precisely to help avoid the risk of personal injury.

Caution: A caution is a procedure which must be followed precisely to reduce the possibility of damage to the vehicle and resultant risk of personal injury or inconvenience.

Note: *A note is a procedure which will help avoid difficulties in the operation of the vehicle.*

System Components

Switchpack

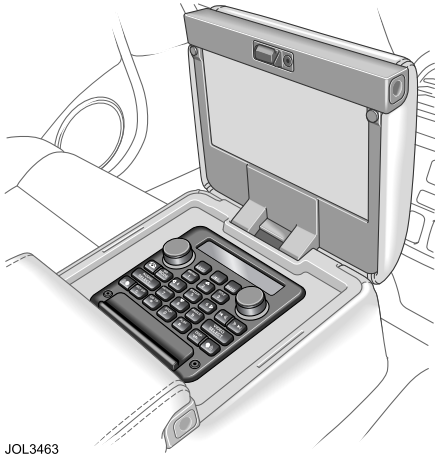

JOL3463

The switchpack fitted within the rear armrest forms the main control centre for the Rear Multimedia System and is used to operate all of the system functions.

Audio system

The audio system head unit is mounted in the centre of the fascia. All of the audio system functions controlled from the rear are operated using the switchpack mounted within the rear armrest.

For full instruction on the audio system fitted to your vehicle, it is recommended that you read the dedicated Audio Systems Handbook or Touch-screen Display Handbook (where fitted).

JaguarVoice (where fitted)

For full instruction on the JaguarVoice system (where fitted) it is recommended that you read the dedicated Jaguar Voice section in the Audio Systems Handbook or Touch-screen Display Handbook (where fitted).

Jaguar In-car telephone (where fitted)

 
For full instruction on the Jaguar Telephone system (where fitted) it is recommended that you read the dedicated In-car Telephone Handbook.

Jaguar Navigation (where fitted)

For full instruction on the Jaguar Navigation system where fitted to your vehicle, it is recommended that you read the dedicated Touch-screen Display Handbook.

System Components

Video Display Screens (where fitted)

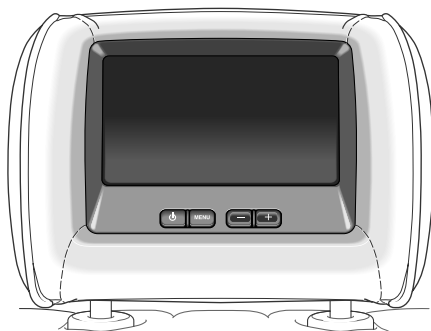

JOL3462

 
Where fitted, the two Video Display Screens are mounted in the rear of the front seat head rests. The Video Display Screens can be used to view DVD movies (where a DVD player is fitted) and any video signal supplied through the external AV connectors (AUX 1 and 2).

Caution: When rear seat passengers are entering or leaving the vehicle it is important that they do not hold the head rest to ease entry/exit. This may damage the Video Display Screens.

- 1. The Video Display Screens fitted to the rear of the front seat head restraints are NOT touch-screens. Avoid contact with the screen wherever possible.**
- 2. It is not possible to remove the front seat head restraints from the seat assembly.**
- 3. Only clean the screens using the Jaguar approved cleaning materials available from your Jaguar Retailer.**

System Components

DVD Player (where fitted)

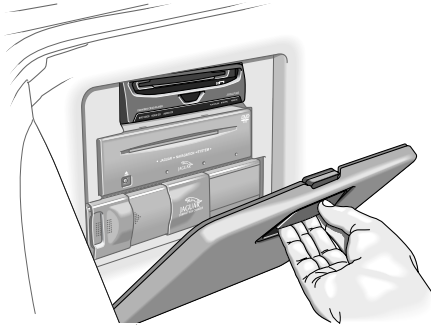

JOL3458

Where fitted, the DVD player is mounted within the luggage compartment on the left-hand side. It is mounted with the CD changer and navigation system CD unit (where fitted).

Note: *This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only, unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.*



WARNING:

You should ensure that when children have access to the Rear Multimedia System they are supervised at all times and only view/listen to media suitable for their age group.

System Operation

Audio System

Switchpack - Audio Mode	21
Switching On	22
Control Priority	22
Audio Source	22
Volume	22
Mute	22
Balance and Tone	23
Tuner Controls	23
RDDS	23
Cassette Tape	23
Cassette Tape (continued)	24
CD, MiniDisc and CD Changer	24
Audio System	24

DVD/VCD Player

Switchpack - DVD/VCD Mode	25
Switching On	26
Video Display Screens	26
Video Display Screens (continued)	27
Video Source Selection	27
DVD Player (where fitted)	28
Inserting/Ejecting a DVD/VCD	29
Playing a DVD	30
Menus	30
Functions Available During a Movie	31

Auxiliary Inputs

Switchpack - Auxiliary Inputs	34
Auxiliary Inputs	35

Telephone

Switchpack - Telephone Mode	36
Switching On	37
Telephone (where fitted with Multizone Voice)	37

JaguarVoice (where fitted)


Switchpack - JaguarVoice Mode	40
Switching On	41
Entering a Voice Command	41

L

Audio System

Switchpack - Audio Mode

 The switchpack fitted within the rear armrest forms the main control centre for the Rear Multimedia System.

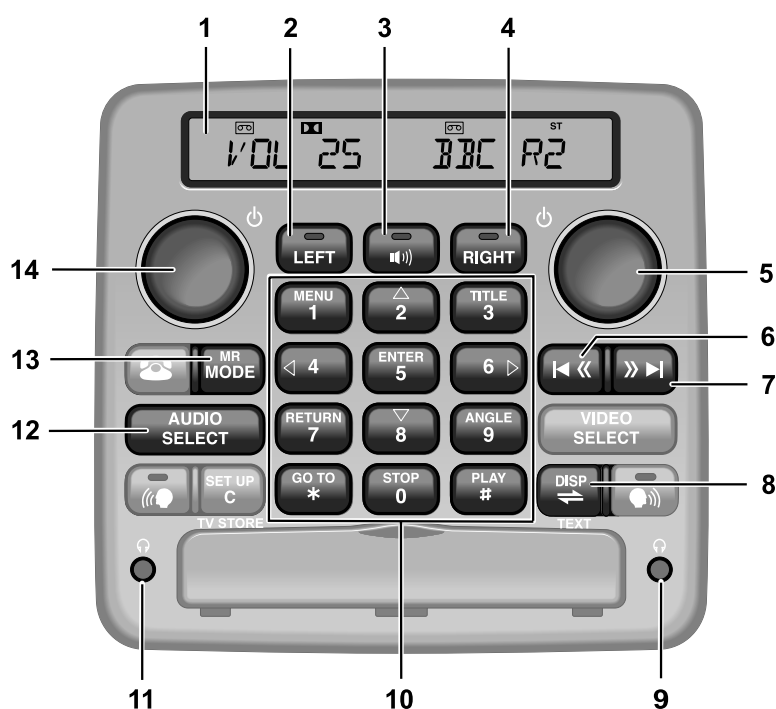

JOL3454

The Audio functions are operated using the above highlighted buttons:

1. Switchpack Display Screen.
2. Select left headphones as priority.
3. Select cabin mode or mute/demute rear speakers.
4. Select right headphones as priority.
5. Power On/Off and volume control.
6. Skip/seek down and reverse/rewind.
7. Skip/seek up and forward/fast forward.
8. Change cassettes direction of play.
9. Right passenger headphone socket.
10. 12-digit numerical keypad.
11. Left passenger headphone socket.
12. Audio source select.
13. Bass, Treble and Balance options.
14. Power On/Off and volume control.


Audio System



Switching On



To switch on the Rear Multimedia System ensure that the ignition is switched to position **I** or **II** (or the engine is running), then press either the left (**14**) or right (**5**) rotary control (refer to switchpack illustration on page 21).

Note: If after switching on **SYSTEM LOCKED** is displayed on the switchpack display screen, the Rear Multimedia System has been locked from the audio head unit allowing control only from the front. Please refer to the Audio System Handbook or Touch-screen Display Handbook (where fitted) for information on locking/unlocking.



Control Priority

Operation of the various functions listed later in this section are affected by your choice of output priority. To make changes to the audio system as a whole first, press the  button to select cabin mode and change the settings for the entire cabin.

To change the audio settings for the left or right rear passenger headphones (where fitted) first, press either the  or  button. The headphone sockets are shown as **11** and **9** on the switchpack illustration, page 21. The area that will be affected by your choice of volume level is indicated by the Red light illuminated on the chosen switch.

Note: To improve audio performance via the headphones, switch off the rear cabin speakers by pressing and holding the  button whilst in headphone mode. To switch the speakers back on press and hold the  button.

Audio Source

Select the desired audio source using the  button. Press the  button repeatedly in short presses until the desired source is shown on the switchpack display screen. You will be able to select from the tuner (AM/FM etc.), CD, cassette, and MiniDisc (depending on which option has been fitted), CD changer (where fitted) as well as the DVD player, TV or auxiliary inputs.

Volume

Rotate the rotary volume control (shown as **5** and **14** on the switchpack illustration, page 21) to select the desired volume level which will be shown on the switchpack display screen.


When in cabin mode using either volume control will increase/decrease the volume level. With headphones connected (where fitted) the left and right volume controls will alter the volume for the left and right headphones.



WARNING:

Ensure that the volume level is moderate when using headphones, as excessive volume levels can cause hearing damage.

Mute

If JaguarVoice is **not** fitted, the  button will act as a mute button.

To mute audio press the  button.

Audio System

Balance and Tone

To refine the selected sound source, press the **MR MODE** button to scroll through bass, treble and balance options whilst using the optional headphones. When listening to the selected sound source through the cabin speakers you can scroll through the additional options for adjusting Fade, SUB and DSP.

The adjustment mode will be displayed on the switchpack display screen and can then be adjusted by turning the volume control knob up or down.

Further information on these settings and their affects can be found in the Audio Systems or Touch-screen Display Handbook.

Tuner Controls

Band selection

To select the required band (AM, FM etc), press the **AUDIO SELECT** button repeatedly in short presses until the desired band is displayed.

Note: Only one band can be selected for all audio outputs. It is not possible to select different bands for the front and rear.

Preset station selection

To select a preset station press and release the desired preset number on the numerical keypad (shown as **10** on the switchpack illustration, page 21). The system can recall up to nine stations for FM and nine stations for AM.

Note: Storing frequencies can only be carried out from the head unit, please refer to the Audio Systems or Touch-screen Display Handbook for further information.

Manual tuning

To manually tune to a station, press and hold either the **»»▶** button or **◀◀◀** to seek up or down to the next available station.

RDDS

The settings and control of RDDS (Radio Data Broadcast System) are accessed from the audio head unit. Please refer to the Audio Systems or Touch-screen handbook for further information.

Cassette Tape

Playing/stopping a cassette tape

Ensure that a cassette tape has been inserted into the head unit. Once a cassette tape has been inserted, press the **AUDIO SELECT** button repeatedly until **TAPE** is selected. Once selected the tape will play automatically.

To stop playing the tape select another audio source.

Fast forward/rewind

Whilst the tape is playing, press and hold the **»»▶** button to fast forward, and the **◀◀◀** button to rewind.


Scan (skip) up and down

To scan (skip) forward to the next track, press and release the **»»▶** button. To scan (skip) back to the previous track, press and release the **◀◀◀** button. Multiple presses will scan (skip) the corresponding number of tracks (to a maximum of nine).

Audio System

Cassette Tape (continued)

Changing direction of play

To change the direction of play (play opposite side of tape) during play, press and release the  button.

Note: When the tape reaches the end of the current side it will automatically change to the other side and recommence playing.


Eject and Dolby functions

The eject and Dolby functions cannot be controlled from the switchpack. Please refer to the Audio Systems or Touch-screen Display Handbook for further information on these functions.

CD, MiniDisc and CD Changer



Playing/stopping a CD or MiniDisc

Ensure that your CD, MiniDisc or CD changer magazine (where fitted) is correctly inserted. For more information please refer to the Audio Systems or Touch-screen Display Handbook.

Once the CD, MiniDisc or CD changer magazine has been inserted, press the  button repeatedly until **CD**, **MD** or **CDC** (as required) is selected. Once selected the chosen disc will play automatically.

To stop playing the disc select another audio source.

Fast forward/rewind

Whilst the disc is playing, press and hold the  button to fast forward, and the  button to rewind.

Random track and repeat functions

It is not possible to select or cancel the random track select or repeat functions via the switchpack. Random track select and/or repeat must be set/cancelled via the audio head unit, please refer to the Audio Systems or Touch-screen Display Handbook for further information.

CD changer random disc and disc repeat functions

It is not possible to select or cancel the random disc select or disc repeat functions via the switchpack. Random disc select and disc repeat must be set/cancelled via the audio head unit, please refer to the Audio Systems or Touch-screen Display Handbook for further information.

Note: If another disc is manually selected random disc select will be cancelled.

CD changer direct disc select

When in CDC mode to manually change to another CD from those inserted in the CD changer, input the desired disc number using the numerical keypad (shown as **10** on the switchpack illustration, page 21).

Eject

It is not possible to eject a CD, MiniDisc or CD changer cassette via the switchpack.

Pause

 
It is not possible to pause a CD or MiniDisc manually via the switchpack.

Audio System

Note: For further information and explanation of the subjects covered in this section it is recommended that you read the Audio Systems or Touch-screen Display Handbook.

DVD/VCD Player

Switchpack - DVD/VCD Mode

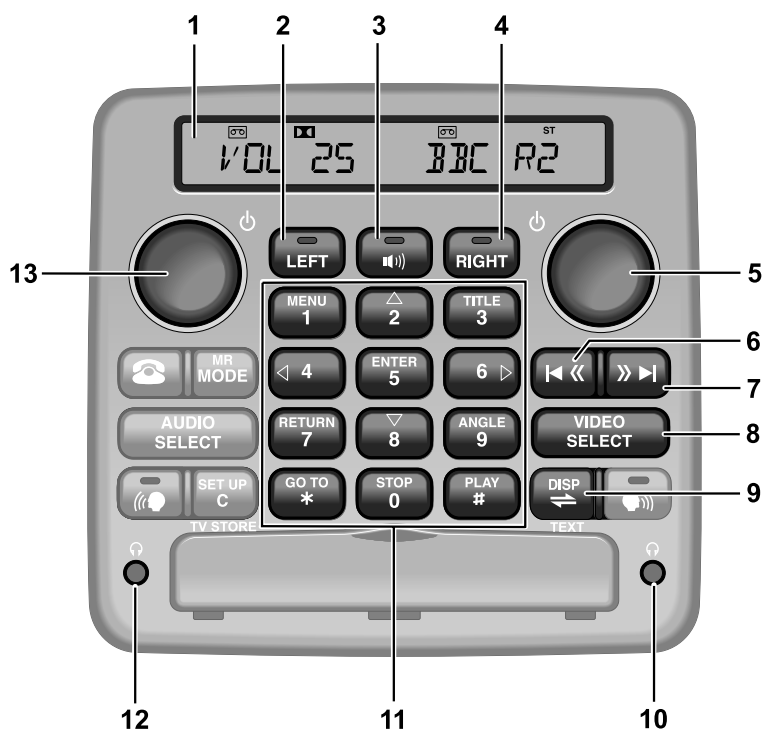

JOL3456

The DVD functions are operated using the above highlighted buttons:

1. Switchpack Display Screen.
2. Select left screen/headphones as priority.
3. Select cabin mode or mute/demute rear speakers.
4. Select right screen/headphones as priority.
5. Power On/Off and volume control.
6. Skip/seek down and reverse/rewind.
7. Skip/seek up and forward/fast forward.
8. Select video source.
9. Switch between **PAL** and **NTSC** formats.
10. Right passenger headphone socket.
11. 12-digit numerical keypad.
12. Left passenger headphone socket.
13. Power On/Off and volume control.

DVD/VCD Player

Switching On

 
To switch on the Rear Multimedia System ensure that the ignition is switched to position **I** or **II** (or the engine is running), then press either the left (**13**) or right (**5**) rotary control (refer to switchpack illustration on page 25).

Note: If after switching on **SYSTEM LOCKED** is displayed on the switchpack display screen, the Rear Multimedia System has been locked from the audio head unit allowing control only from the front. Please refer to the Audio Systems or Touch-screen Display Handbook for information on locking/unlocking.

Caution: When rear seat passengers are entering or leaving the vehicle it is important that they do not hold the head rest to ease entry/exit. This may damage the Video Display Screens.

1. The Video Display Screens fitted to the rear of the front seat head restraints are **NOT** touch-screens. Avoid contact with the screen wherever possible.
2. It is not possible to remove the front seat head restraints from the seat assembly.
3. Only clean the screens using the Jaguar approved cleaning materials available from your Jaguar Dealer.


Video Display Screens

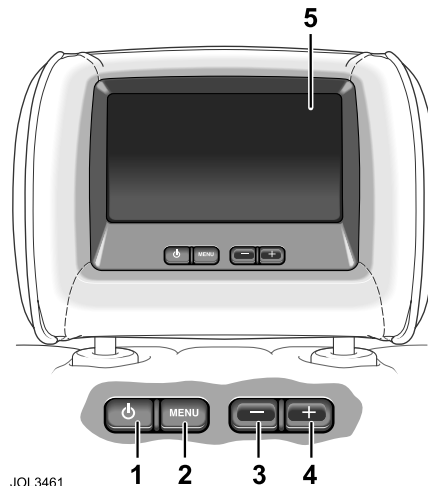




1. Power On/Off (LCD screen).
2. Select on-screen menu (for display options).
3. Decrease/left. Used to navigate on-screen menu (for display options).
4. Increase/right. Used to navigate on-screen menu (for display options).
5. Video Display Screen.

DVD/VCD Player




Video Display Screens (continued)

In order to view any video source it is necessary to switch on the screen or screens as required. To do this press the  button.


Once a picture is displayed (see following information), press and hold the  button to display the on-screen menu. From this menu you will be able to adjust such settings as the brightness and contrast by using the  and the  buttons to navigate and alter the settings.

Note: *It is recommended that the setting **AUTO** (if available) should be used for each of the options. If a setting is chosen manually ensure that it is reset to **AUTO** once the current session is finished.*

Video Source Selection

Before selecting the desired video source you must select  or . If the system is already in cabin mode, or the  button is pressed, **SELECT L/R** will be shown on the switchpack display. To listen to the audio for the video source selected it will be necessary to connect the headphones (using the connectors shown as **10** and **12** on the switchpack illustration, page 25).

Once the source and settings have been made for the first side chosen (left or right), the same procedure must be followed for the other side, if required.

 
To select a video source, press the  button momentarily. Press repeatedly to scroll through the options (TV, DVD, AUX 1, AUX 2) depending on the options fitted to your vehicle.

Once the required video source is shown on the switchpack display there will be a short delay before the audio signal is heard.

Note: *It is possible to select an alternative audio source to that which accompanies the video source.*

DVD/VCD Player

DVD Player (where fitted)

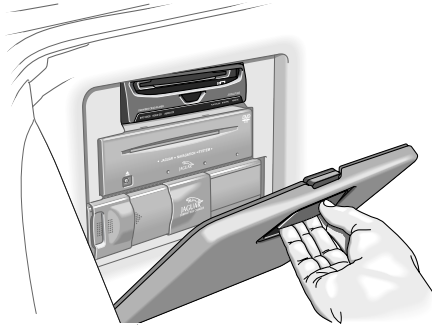

JOL3458

Note:

1. The DVD player will play 8 cm or 12 cm DVDs, Video CDs (VCDs) and audio CDs. Video CDs (VCDs) will have less options available from their menus.
2. The DVD player will only play pre-recorded discs. It is not compatible with DVD-ROMs, DVD-RAMs, CD-ROMs, recordable, re-writable, or photo CDs.

Caution: When playing a DVD for long periods it is recommended that the engine is running. Playing a DVD with the engine not running may cause the vehicle's battery to discharge, preventing the engine from starting.

Disc region codes

Most discs are coded to allow them to play only in the region in which they are sold. Some are coded to allow them to play in any region. Consult the information/packaging of your DVD/VCD disc to check for region encoding.

 
Note: The DVD player fitted to your jaguar vehicle will only play discs marked with the region code for the area in which your vehicle was purchased, or discs coded for all regions.

It is not possible to play discs marked with region code 5.

If an incorrect region code disc is inserted the message '**REGION CODE VIOLATION**' will be displayed on the video display screen/s.

DVD/VCD Player

Inserting/Ejecting a DVD/VCD

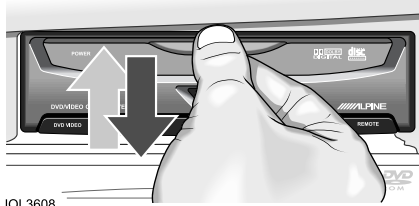

Note: The ignition switch must be in position 'I' or 'II' to insert or eject a DVD.

To insert or eject a DVD/VCD it will be necessary to open the flap covering the insertion slot on the DVD player. If the flap is already open it will be necessary to first close the flap, and then open it.

 
Insert the DVD/VCD into the DVD player located in the luggage compartment with the label facing upwards.

Note: When ejecting a disc there will be a delay (typically up to 7 seconds) before the disc is released. The length of the delay will depend upon the DVD players current status.

Caution: Do not use force to insert a disc into the DVD player. The player will automatically draw in the disc unless a disc is already loaded or a fault has occurred.

1. Ensure that any disc inserted into the DVD player is clean.
2. Do not expose the DVD player to moisture.
3. Do not place any device emitting a magnetic field near to the DVD player.

4. Do not insert any object other than the recommended discs into the DVD player for any reason.

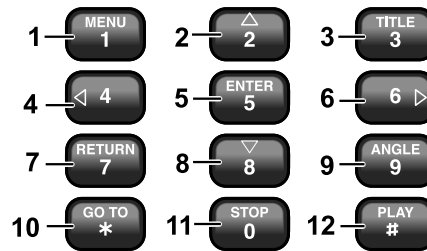

Additional numerical keypad functions

1. Display 'on-screen' menu.
2. Menu navigation 'up'.
3. Depending on disc format, displays **TITLE** menu.
4. Menu navigation 'left'.
5. Select/enter highlighted option.
6. Menu navigation 'right'.
7. Returns to previous display/choice.
8. Menu navigation 'down'.
9. Switches viewing angle (depending on disc format).
10. Displays 'chapter' or 'title' selection menus.
11. Stops movie play.
12. Starts movie play.

DVD/VCD Player

Playing a DVD

Starting and stopping a movie

Once a DVD has been selected as the video source and a DVD has been inserted into the DVD player, press the **PLAY #** button to start the movie.

Note: Some discs may play automatically upon insertion.

To stop the movie, press and release the **STOP 0** button and **PRE-STOP** will be displayed. Provided that the DVD is not ejected, the switchpack turned off, or the ignition switched off, when the **PLAY #** button is pressed the movie will recommence from the position at which it was stopped.

If you wish to stop the movie completely, press the **STOP 0** button a second time when in **PRE-STOP**.

Note: The pre-stop function cannot be used for DVD's and Voids with Playback Control (PBC). For DVD's and Voids with Playback Control (PBC) when the **STOP 0** button is pressed the menu will appear.

Menus

Note:

1. Some DVDs and VCDs movies with Playback Control (PBC) will display an 'on-screen' menu automatically as soon as **DVD** is selected if a DVD is already in the DVD player.

If **DVD** has been selected but no DVD inserted then the menu may appear upon insertion of the DVD. To display the 'on-screen' menu manually, press the **MENU 1** button.

2. DVD status and menus will be displayed on the Video Display Screen/s and not on the switchpack display.

Navigating menus

Once the 'on-screen' menu is displayed, to navigate the menu options, press and release the **2** button to move up, the **8** button to move down, the **4** button to move left, the **6** button to move right, and the **ENTER 5** button to select/enter the highlighted option.

Note:

1. The numeric keypad (shown as **11** on the switchpack illustration, page 25) cannot be used to input numbers whilst in the DVD menu.
2. Some discs may not allow access to menus at certain points during play. If this happens the invalid operation symbol **⊘** will be displayed. Normal play will resume after a few seconds.

DVD/VCD Player

Functions Available During a Movie

Fast forward/reverse

During a movie, press and hold the **»|** button to fast forward, or the **◀◀** button to fast reverse. During fast forward/reverse no sound or subtitles are available.

Note: If the DVD or VCD has Playback Control (PBC) the menu screen may appear during fast forward/reverse.

Chapter/track up and down

During a movie, press and release the **»|** button to move forward to the next chapter/track, or the **◀◀** button to move back to the preceding chapter/track.

Note: If the DVD or VCD has Playback Control (PBC) the menu screen may appear during fast forward/reverse.

Multiple angle views

Some DVD's are recorded from more than one angle allowing the viewer to switch between angles whilst viewing.

To switch between angles, press and release the **ANGLE 9** button.

The angle of view will change each time you press and release the **ANGLE 9** button.

Note: There may be a delay whilst changing view angles.

Subtitles

To show or hide the on-screen subtitles, simultaneously press the **GO TO *** button and the **STOP 0** button.

Navigating by title, chapter, time, or track number

To view the movie from a specific title number, press and release the **GO TO *** button. From the 'on-screen' menu, select **TITLE** and input the number of the required title by pressing and holding each number required until the correct number is displayed. Press the **ENTER 5** button to start playing the movie from the selected title number.

To view the movie from a specific chapter number or time, press and release the **GO TO *** button. From the 'on-screen' menu, select **CHAPTER** or **TIME** and input the number of the required chapter by pressing and holding each number required until the correct number is displayed. Press the **ENTER 5** button to start playing the movie from the selected chapter number or time.

If playing a VCD (Video CD), to view the movie from a specific track number, press and release the **GO TO *** button. From the 'on-screen' menu, select **TRACK** and input the number of the required track by pressing and holding each number required until the correct number is displayed. Press the **ENTER 5** button to start playing the movie from the selected track number.


Note:

1. You can only navigate in this way through discs on which title, chapter or track numbers have been recorded.
2. You cannot search by track number when viewing a VCD that has Playback Control (PBC) enabled.

DVD/VCD Player





 
 
Picture format

The DVD player is capable of playing DVD's or VCD's recorded in either PAL or NTSC formats.

To switch between formats, press and hold the  button (for 8 seconds)

Note: *If the incorrect format has been selected **VIDEO SYSTEM SIGNAL IS NOT CORRECT** will be displayed.*

Viewing preferences

The factory default settings for the following options can be changed by pressing and releasing the  button to enter the menu, and pressing and releasing the  button to move up, the  button to move down, the  button to move left, the  button to move right, and the  button to select/enter the highlighted option.

Language

The language used for audio output, subtitles and menus.

The factory default settings are, Audio-Original, Subtitles-Auto, Menu-Auto.

Video display screen size

The screen aspect ratio can be selected from 4:3 Letterbox, 4:3 Pan Scan and 16:9 Widescreen. The default setting is 16:9.

Country code

This is set prior to leaving the factory for the regional default value.

Rating level

This setting will restrict the movies viewable to rear passengers based on the censors age restrictions for the DVD or VCD. The default is set to **OFF**, if you require a censorship level enter the menu and choose the appropriate level.

Note:

1. *For further information on the country code and rating levels that are used in your area please consult the information supplied with your movie, or the movie vendor.*
2. *Rating level protection is not available with all DVD discs.*



WARNING:

You should ensure that when children have access to the Rear Multimedia System they are supervised at all times and only view/listen to media suitable for their age group.

Down sampling

This option is set to default **ON**, changing the setting to **OFF** will have no effect on the high output quality.

Digital out

This option is set to default **AUTO**, changing the setting will have no effect on the high output quality.

LED indicator

This option will allow the indicator LED's on the front panel of the DVD player to be switched on or off. The default setting is **ON**.

DVD/VCD Player

Custom set up

 
Within custom set up you will be able to turn **ON** or **OFF** the **CLOSED CAPTION** function. **CLOSED CAPTION** displays a scene description on the Video Display Screens for the hard of hearing.

Note:

- 1. *CLOSED CAPTION*** describes background noise and should not be confused with subtitles which display dialogue.
- 2.** This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only, unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Auxiliary Inputs

Switchpack - Auxiliary Inputs

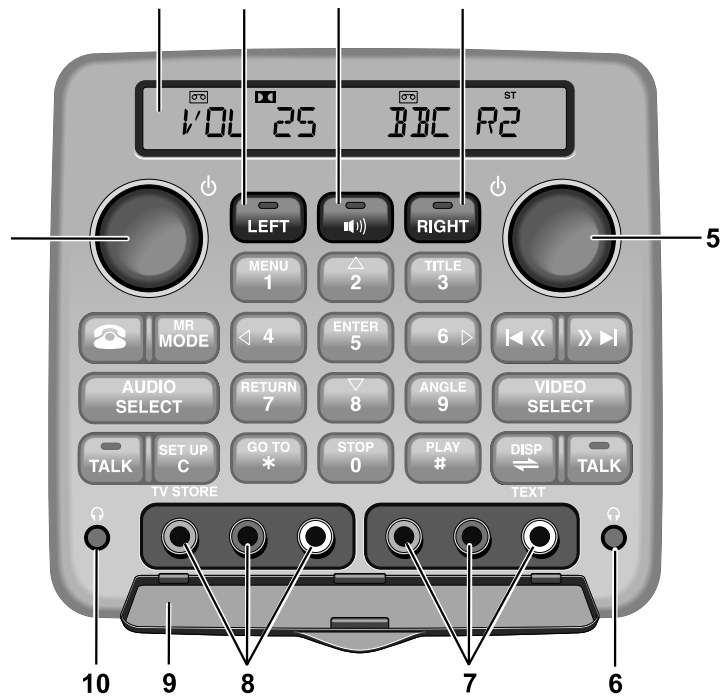

The switchpack fitted within the rear armrest forms the main control centre for the Rear Multimedia System.

The Auxiliary Input functions are operated using the above highlighted buttons:

1. Switchpack Display Screen.
2. Select left screen/headphones as priority.
3. Select cabin mode or mute/demute rear speakers.
4. Select right screen/headphones as priority.

5. Power On/Off and volume control.
6. Right passenger headphone socket.
7. Auxiliary sockets 'AUX 2'.
8. Auxiliary sockets 'AUX 1'.
9. Access flap.
10. Left passenger headphone socket.
11. Power On/Off and volume control.

Auxiliary Inputs

Auxiliary Inputs

Note: Take care when opening and closing the access flap.

Connecting auxiliary input devices

The two auxiliary input points (shown as 7 and 8 on the switchpack illustration, page 34) will allow separate external devices to be used by the right and left rear seat passengers, or one device can be used by both rear seat passengers.

There are three separate sockets for each auxiliary input. The White socket is for left audio channel, the Red socket is for right audio channel, and the Yellow socket is for video.

To play an audio source it will be necessary to connect the White lead for mono, or the White and Red leads for stereo. For a video source it will also be necessary to connect the Yellow lead.

Auxiliary input devices

Rear seat passengers may wish to use such devices as games consoles, personal cassette/CD/MiniDisc/DVD players, access suitable material stored on a memory stick or playback recorded film from a camcorder.

Caution:

1. Ensure that any auxiliary input devices are suitable for use within a vehicle before using them.
2. Ensure that you have read and understood the warranty information supplied with any auxiliary input devices that are used.

3. Any auxiliary input devices that are used will require their own power source or a suitable adapter to use power from your vehicle. Power supplies, transformers, adapter leads etc. must be purchased separately and should be fitted professionally to ensure safe operation, and avoid damage to the vehicles electrical system.



WARNING:

Auxiliary input devices may generate heat whilst operating. Do not place devices on the vehicles upholstery or carpets.

 
1. Ensure that you have read the operating instructions for any input devices that are used, and follow any safety precautions that are recommended by the manufacturers.
2. Do not leave any auxiliary input devices where they can be seen if the vehicle is left unattended.
3. Do not place any auxiliary input devices in a position where they can move or cause a hazard whilst the vehicle is in motion.
4. Loose objects within the passenger compartment can cause death or injury in the event of an accident or sudden braking. Ensure that all auxiliary input devices are securely fixed in position.

Telephone

Telephone

Switchpack - Telephone Mode

The switchpack fitted within the rear armrest forms the main control centre for the Rear Multimedia System.

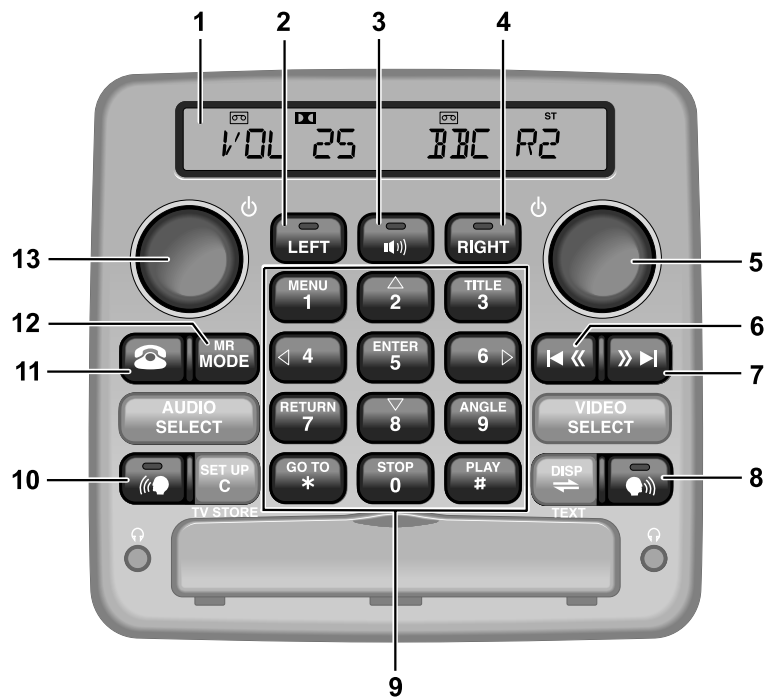

JOL3469

The Telephone functions are operated using the above highlighted buttons:

1. Switchpack Display Screen.
2. Select left headphones as priority.
3. Select cabin mode or mute/demute rear speakers.
4. Select right headphones as priority.
5. Power On/Off and volume control.
6. Scroll down.
7. Scroll up.
8. Make/receive phone calls for right passenger.
9. 12-digit numerical keypad.
10. Make/receive phone calls for left passenger.
11. Phone mode key.
12. Telephone memory recall.
13. Power On/Off and volume control.

Telephone

Switching On


To switch on the Rear Multimedia System ensure that the ignition is switched to position **I** or **II (or the engine is running)**, then press either the left (**13**) or right (**5**) rotary control (refer to switchpack illustration on page 36).

Note: If after switching on **SYSTEM LOCKED** is displayed on the switchpack display screen, the Rear Multimedia System has been locked from the audio head unit allowing control only from the front. Please refer to the Audio Systems or Touch-screen Display Handbook for information on locking/unlocking.


Telephone (where fitted with Multizone Voice)

Caution: Before attempting to operate the in-car telephone it is recommended that you read the dedicated In-car Telephone Handbook.

Phone mode

To enter phone mode from the rear multimedia switchpack, press and release the  button. The switchpack display screen will then show **NO SERVICE** if no signal is available, or, if a signal is available the switchpack displays **SIG** for minimum signal strength ranging up to **SIG ******* for maximum signal strength (best reception).

PIN code

Enter the PIN (Personal Identity Number) code (when required) through the switchpack using the numerical keypad (shown as **9** on the switchpack illustration, page 36). Then press the  button.

Note: If the PIN code is entered incorrectly more than three times you will need to enter the PUK (Personal Unblocking Key) code.

For further information on PIN and PUK codes please refer to the In-car Telephone Handbook.

Making a call using the handset

For detailed information on making and receiving telephone calls using the handset please refer to the In-car Telephone Handbook.


Handsfree calls

Note: Handsfree calls can only be made if your vehicle has been fitted with Multizone voice.


Making a call


Ensure you have selected 'Phone Mode'.

Manual dialling

To make a telephone call input the telephone number that you wish to call using the numerical keypad (shown as **9** on the switchpack illustration, page 36). Once the number has been input, press the  button. The switchpack display will show **CALLING** and if the connection is successful the signal strength of the connection will be displayed, for example **SIG *******.

Last number redial

To redial the last number called, press and hold the  button. If a name was stored for that number it will be displayed followed by the telephone number. If no name is stored then only the telephone number will be displayed.



To make the call, press the  button.

Telephone

Calling a number stored on the SIM card

All of the memory locations on the SIM (Subscriber Identity Module) card are accessible from the switchpack. To access stored numbers, press and release the **MR MODE** button, then input the stored numbers location using the numerical keypad (shown as **9** on the switchpack illustration, page 36). The name for the stored location will be displayed after two seconds, after a further two seconds have elapsed the stored number will be displayed.

To make the call, press the  button.

To scroll through the memory locations, press and release the **MR MODE** button to access the memory locations, then input the stored numbers location using the numerical keypad (shown as **9** on the switchpack illustration, page 36) and use the **PLAY #** button, or the  button to scroll up, and the **GO TO *** button, or the  button to scroll down.


Speed dialling

To call a number stored for speed dialling use the numerical keypad (shown as **9** on the switchpack illustration, page 36). Press and hold the number key for the stored speed dial number, the stored name will be shown on the switchpack display, followed two seconds later by **CALLING**. If the location selected has no stored number, **EMPTY** will be displayed.


For further information on storing and accessing names and numbers within the speed dialling and stored numbers functions please refer to the In-car Telephone Handbook.

Receiving a call

When a call is received, **INCOMING CALL** will be shown on the switchpack display. If the number has been stored in a memory location the callers name (when stored) and number will be displayed.

To accept an incoming call, press the  button.

Ending a call

A call may be ended at any time during the call by pressing the  button.


Audio mute

When phone mode is selected, or a call is received the cabin speakers will be muted. The audio signal through the headphones (where fitted) will not be affected.

Phone in use

If a passenger in the vehicle attempts to use the telephone whilst another passenger is making or receiving a call, **PHONE IN USE** will be displayed on the switchpack display and the audio head unit.

Scratchpad

During a call it will be possible to note a telephone number using the numerical keypad (shown as **9** on the switchpack illustration, page 36). Once the current call has ended it will be possible to dial the number noted by pressing the  button.

Note: *The number will be stored until it is called, the ignition switch is turned off or the engine is cranked (ignition position III).*

Telephone

Telephone volume control

 
If the telephone volume is changed via the switchpack during a call the new volume will be memorized by the headunit as the preset volume irrespective of whether the headphones (where fitted) are in use, or cabin mode is selected.

JaguarVoice (where fitted)

JaguarVoice (where fitted)

Switchpack - JaguarVoice Mode

The switchpack fitted within the rear armrest forms the main control centre for the Rear Multimedia System.

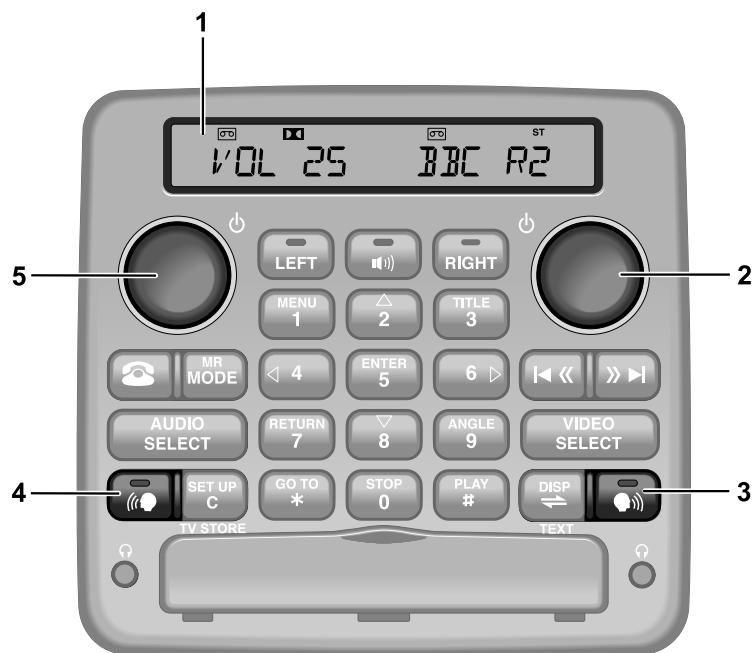

JOL3468

The JaguarVoice functions are operated using the above highlighted buttons:

1. Switchpack Display Screen.
2. Power On/Off and volume control.
3. Activate JaguarVoice (where fitted).
4. Activate JaguarVoice (where fitted).
5. Power On/Off and volume control.

JaguarVoice (where fitted)


Switching On

To switch on the Rear Multimedia System ensure that the ignition is switched to position **I** or **II (or the engine is running)**, then press either the left **(5)** or right **(2)** rotary control (refer to switchpack illustration on page 40).


Note: If after switching on **SYSTEM LOCKED** is displayed on the switchpack display screen, the Rear Multimedia System has been locked from the audio head unit allowing control only from the front. Please refer to the Audio Systems or Touch-screen Display Handbook for information on locking/unlocking.

Entering a Voice Command


It is only possible to operate the JaguarVoice system when ignition position **II** has been selected.


Note: It is possible to enter a voice command from the rear without first switching on the Rear Multimedia System. To do this press the  button. The switchpack will turn on and show **LISTENING** on the switchpack display. If the command is related to the audio system the switchpack will remain on. If not, it will shut down once the command session is completed.

In cabin mode

When in cabin mode, press the  button. The cabin speakers will be muted and **LISTENING** will be shown on the switchpack display. The voice command can now be entered. Any changes made in cabin mode will affect the settings for the cabin.

Using headphones (where fitted)

When in using headphones (where fitted), press the  button on the required side. **LISTENING** will be shown on the switchpack display and both the cabin speakers, and the headphones on the relevant side will be muted. The voice command can now be entered.

Note: The 'tell tale' light on the  buttons will not illuminate whilst using them to enter voice commands.

Voice training

Voice training is not available from the Rear Multimedia System.

 
 
Voice in use

If an attempt is made to use the voice system whilst another vehicle occupant is using the system the switchpack display will show **VOICE IN USE**.

Volume control

If the volume level is adjusted whilst operating the voice system via the switchpack the new volume level will be memorized in the head unit.

For further information (including a command list) please refer to the Audio Systems and JaguarVoice Handbook or Touch-screen and JaguarVoice Handbook.



Index

Audio source	22	DVD/VCD player.	18, 28
Audio system.	21, 24	chapter/track up and down	31
Auxiliary inputs		country code	32
auxiliary input devices	35	custom set up	33
connecting auxiliary input devices	35	digital out	32
Balance and Tone	23	disc region codes	28
Cassette tape		down sampling	32
changing direction of play	24	fast forward/reverse	31
eject and Dolby functions	24	functions available during a movie.	31
fast forward/rewind	23	inserting/ejecting a DVD/VCD	29
playing/stopping a cassette tape	23	language	32
scan (skip) up and down	23	LED indicator	32
CD, MiniDisc and CD changer		menus - navigating	30
CD changer direct disc select	24	multiple angle views	31
CD changer random disc and disc		navigating by title, chapter, time, or	
repeat functions	24	track number	31
eject	24	picture format	32
fast forward/rewind	24	rating level	32
pause	24	starting and stopping a movie	30
playing/stopping a CD or MiniDisc	24	subtitles	31
random track and repeat functions	24	video display screen size	32
Control priority	22	viewing preferences	32
		Introduction	15
		JaguarVoice	
		entering a voice command	41
		using headphones	41
		voice in use	41
		voice training	41
		volume control	41
		Mute	22
		Switching on	
		audio	22
		DVD/VCD player	26
		JaguarVoice	41
		telephone	37
		Switchpack	
		audio	21
		auxiliary inputs	34
		DVD/VCD player	25
		JaguarVoice	40
		telephone	36
		System components	16

Index

Telephone	
audio mute	38
calling a number stored on the SIM card	
38	
ending a call	38
handsfree calls	37
last number redial	37
making a call	37
making a call using the handset . . .	37
manual dialling	37
phone in use	38
phone mode	37
PIN code	37
receiving a call.	38
scratchpad	38
speed dialling	38
volume control.	39
Tuner controls	
band selection.	23
manual tuning	23
preset station selection.	23
RBDS.	23
RDS.	23
Video Display Screens	17, 26
video source selection	27
Volume control	
audio	22

Index
