

Using VoiceNotes™

The VoiceNotes™ feature allows you to record up to 3 minutes of personal voice messages or to record part of a phone call. This is useful when you don't have a pen and paper to hand for taking directions or a message. Recording is available during the following call scenarios:

- Phone idle (no calls).
- Single active call (includes conference calls).
- Active call plus waiting call.
- Can be used with either the handset or in handsfree mode.

Recording a VoiceNote™

To record a VoiceNote™, press the Start/Stop Record button (Ⓜ). You will hear a short tone to indicate that recording has started and the display will show the message **Recording** and the remaining recording time available.

If you are recording during a call, the person you are speaking to will hear a tone every 10 seconds to warn them that you are recording the call.

During the recording of an active call, both parties can be recorded at the same time.

To stop recording a call, press the Start/Stop Record button (Ⓜ) or . The display shows the message **VoiceNote XX Stored** where XX is the number of the storage location. VoiceNotes™ are stored in sequential locations.

Recording stops immediately with no further notification if:

- You choose to accept an incoming call while you are recording (the Call Waiting alert is played).
- You choose to initiate a call during recording a VoiceNote™.

VoiceNote™ storage capacity

The **Show Time Available** option in the Messages, VoiceNotes™ menu displays the amount of recording time available, see **Messages menu** (page 9-17 to page 9-21).

During recording, ten seconds before the recording capacity is reached you will hear a warning tone. If you do not stop recording within the time limit, recording will automatically stop and a single, one second tone will be heard, accompanied by the **Storage Full** message.

Playing VoiceNotes™

To play your VoiceNotes™, select the **Play VoiceNotes** option in the Messages, VoiceNotes™ menu or the Quick Access menu item (Ⓜ).

The first VoiceNote™ will begin to play after two seconds. The display will show **VoiceNote XX playing... Go to next?**

8-2 Handset voice features

Press **3** to stop playing a VoiceNote™. A message showing the current VoiceNote™ is displayed (VoiceNote XX), together with a prompt Go to next?. Press **3** and then **3** to skip to the next VoiceNote™.

If you selected Play VoiceNotes from the Quick Access Menu, the phone will simply return to its idle state.

If you press **3** (top) during playback, the message will start to replay from the beginning. Press **3** (top) twice rapidly to skip back to the previous message.

Press **3** to play the next VoiceNote™. To skip to the next VoiceNote™ during playback, press **3**.

To play a VoiceNote™ stored at a specific location, press the appropriate digit key to **3**.

It is not possible to playback VoiceNotes™ during a call.

Erasing VoiceNotes™

To erase your VoiceNotes™, select the Erase All VoiceNotes option in the Messages, VoiceNotes™ menu. You will be requested to confirm the deletion with the message Erase All VoiceNotes - Select?. Press **3** to confirm the deletion.

The confirmation message VoiceNotes Erased is displayed.

You cannot erase individual VoiceNotes™.

Using Voice Activation

With Voice Activation, you can call up a phone number or activate a Quick Access feature with a single spoken command.

The single spoken command is called a Voice Tag.

You can assign Voice Tags to call any of the Phone Book numbers in your phone memory, and you can also assign Voice Tags to activate any of the Quick Access features.

You cannot assign Voice Tags to call any of the numbers in your SIM card memory.

When you are recording a Voice Tag, you cannot make or receive any calls.

For best results, when you record a Voice Tag, make sure there is no wind or background noise and speak in a clear, natural voice. Your phone allows you about two seconds for each Voice Tag.

Voice Activation for phone book entries

You can add a new Voice Tag when you set up a new Phone Book entry or when you amend an existing Phone Book entry. Alternatively, you can overwrite an existing Voice Tag or delete it completely.

You cannot record a Voice Tag if you have set Prevent Access To Phone Memory.

Add Voice Tag

This option is available from the Phone Book menu and allows you to add a Voice Tag to a new Phone Book entry.



When you select **Add To Phone Memory**, your phone prompts you to enter a number, name and location and then stores the entry. For more details, see **The Phone Book menu**, page 9-2 to page 9-11.

After the prompt **Stored XXX**, your phone then prompts you for a Voice Tag as follows:

1. Add Voice Tag?

Press **OK** to continue.

If there are already 25 Phone Book Voice Tags in your phone, **Voice Tag Storage Full** appears and your phone returns you to the **Add To Phone Memory** menu option. You must delete a Voice Tag before you can add another.

If there are Voice Tags available, your phone prompts you to:

2. Press OK When Ready

Press **OK** to continue.

3. Say Name After Tone. . .

Wait for the tone to finish and then say the name. For best results, use in an area with minimal wind or background noise.

4. Press OK When Ready

Press **OK** to continue.

5. Say Name After Tone. . .

Wait for the tone to finish and then say the name as you did in step 3 above. For best results, use in an area with minimal wind or background noise.

6. If the recording is successful, Please Wait appears after two seconds followed by Voice Tag Stored.


When a Voice Tag recording is successful, your phone returns you to the **Add To Phone Memory** menu option.

If the recording is not successful, for example, the name you used is too similar to another Voice Tag name, the phone displays the reason for not accepting the name and returns you to the **Press OK When Ready** prompt.

Add or Edit Voice Tag and Delete Voice Tag

These options are available from the Phone Book menu or the Quick Access menu. First, select either **Find Entry by Name** or **Find Entry by Location**.

After you enter the name or location details, you can select the appropriate Voice Tag menu option.

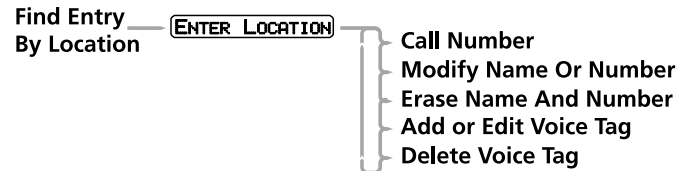

8-4 Handset voice features

Add or Edit Voice Tag

This option does not appear if the phone number is not in phone memory.

Select this option to add a Voice Tag to the Phone Book entry or to overwrite an existing Voice Tag. If an entry already has a Voice Tag, the symbol)) appears after the location number.

When you select this option, the phone prompts you with **Press OK When Ready**.

To complete the Voice Tag recording, follow the same process as for 'Add Voice Tag'.

Delete Voice Tag

This option does not appear if the phone number is not in phone memory or if there is no Voice Tag to delete.

Select this option to delete the Voice Tag from the Phone Book entry.

When you press **Del**, the phone deletes the Voice Tag and returns the prompt **Voice Tag Deleted**.

Using Voice Activation with phone book entries

You can use either the Smart button (**S**) or you can use the Phone Book menu followed by **Voice**.

Voice Activation using the Smart button (**S**)

Press **S**.

If there is a Phone Book entry with a Voice Tag, the following prompt appears:

1. Say Name After Tone . . .

Wait for the tone to finish and then say the name. For best results, use in an area with minimal wind or background noise.

If you press a key, you return to the Phone Book.

If the phone does not find a matching Voice Tag, **No Match Found** appears and you return to the Phone Book.

2. If the name you say matches a Voice Tag, the phone repeats the name and displays the Phone Book entry.

3. Do one of the following:

- Wait for two seconds and the phone makes the call.
- Press **End** to make the call or **Cancel** to cancel the call.
- Press **Next** to display the next entry in the Phone Book.

When you scroll to a Phone Book entry that has a Voice Tag, your phone replays the Voice Tag through the speaker.

Voice Activation using the Phone Book menu

Select Voice Dialling from the Phone Book menu.


When you press **Voice**, the phone displays the message **Press Smart Button When Ready**.

To complete the voice activation, follow the same process as for 'Voice Activation using the Smart button (**S**)'.

Voice Activation for Quick Access Features

You can use Voice Tags to activate any of the Quick Access features on your phone. You are not restricted to the nine Quick Access keys.

Quick Access Setup

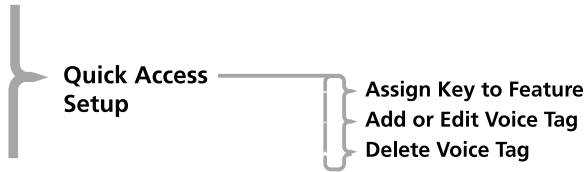

This option is available from the Phone Setup menu and allows you to do the following:

- Customise your Quick Access menu.
- Set up and change the Voice Tag allocation for the Quick Access features.

When you select Quick Access Setup, your phone displays a list of the Quick Access features. If a feature already has a Voice Tag, the symbol)) appears with the feature name.

Use **Left** to highlight the feature you require and then press **Enter**. You can then assign a key or change the Voice Tag setup.

Assign Key to Feature

Select this option to assign a key to the Quick Access feature. Your phone displays the prompt Enter 1-9: .

Press **Left** to assign a key and then press **Enter**.

If you assign a valid key, your phone displays Completed and then returns you to the Quick Access feature list.

As an alternative, you can also assign a key using the Quick Access key (**Left**). See Chapter 10: **Handset quick access menu**.

Add or Edit Voice Tag

Select this option to add a Voice Tag to the Quick Access feature or to overwrite an existing Voice Tag.

If you attempt to add another Voice Tag when there are already 9 Quick Access Voice Tags in your phone, Voice Tag Storage Full appears and your phone returns you to the Quick Access feature list. You must delete a Voice Tag before you can add another.

If there are Voice Tags available, your phone prompts you to:

1. **Press OK When Ready**
Press **Enter** to continue.
2. **Say Name After Tone. . .**

Wait for the tone to finish and then say the name. For best results, use in an area with minimal wind or background noise.

8-6 Handset voice features

3. Press OK When Ready

Press **OK** to continue.

4. Say Name After Tone...

Wait for the tone to finish and then say the name as you did in step 2 above. For best results, use in an area with minimal wind or background noise.

5. If the recording is successful, Please Wait appears after two seconds followed by Voice Tag Stored.

When a Voice Tag recording is successful, your phone returns you to the Quick Access feature list.

If the recording is not successful, for example, the name you used is similar to another Voice Tag name, the phone displays the reason for not accepting the name and returns you to the **Press OK When Ready** prompt.

Delete Voice Tag

This option does not appear if there is no Voice Tag to delete.

Select this option to delete the Voice Tag from the Quick Access feature.

When you press **Delete**, the phone deletes the Voice Tag and returns the prompt **Voice Tag Deleted**.

Using Voice Activation with Quick Access Features

To activate a Quick Access feature using Voice Activation:

1. Press **OK**.

If there is a Quick Access feature with a Voice Tag, the following prompt appears:

2. Say Name After Tone...

Wait for the tone to finish and then say the name. For best results, use in an area with minimal wind or background noise.

At this point, you can press **OK** to return to the idle screen; press a numeric key or **OK** to activate the appropriate Quick Access feature; press **Cancel** to display the Quick Access menu list.

If the phone does not find a matching Voice Tag, **No Match Found** appears and you return to the Quick Access menu.

3. If the name you say matches a Voice Tag, the phone repeats the name and displays the entry for the Quick Access feature.

4. Do one of the following:

- Wait for two seconds and the phone activates the feature.
- Press **OK** to activate the feature or **Cancel** to return to the idle screen.
- Press **Next** to display the next entry in the Quick Access menu.

When you scroll to a Quick Access feature that has a Voice Tag, your phone replays the Voice Tag through the speaker.