

## To remove or install the handset

To remove the handset, slide it forward to release it from the rear of the cradle, then lift the rear of the handset, slide it rearward and remove it from the cradle.

To install the handset, locate the top in the front of the cradle, slide it forward and finally position it in the cradle by lightly pressing downward until it fully engages in the cradle.

When changing to handsfree mode during a call, the handset must be muted before it is returned to the cradle. For more information please refer to pages 7-6 and 10-2.

Upon replacing the handset handsfree control will default to the front.

## SIM card insertion and removal


The phone is supplied with a Subscriber Identity Module (SIM) card.

### Removing the SIM card

1. Switch off the handset by pressing and holding the **key**.
2. Withdraw the SIM card holder (B) from the left-hand side of the handset.
3. Remove the SIM card (A) from holder.

### Inserting the SIM card

1. Ensure that the handset is switched off.
2. Ensuring the notched corner is positioned top left, place the SIM card (A) in the holder (B).
3. Push the holder into place so that it is flush with the side of the handset.

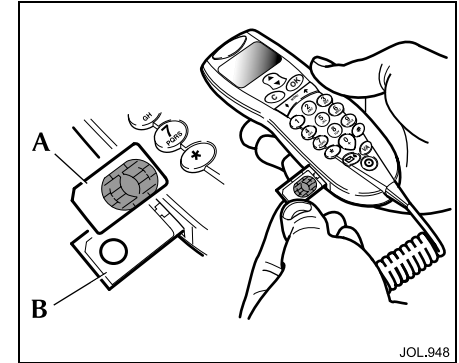

If the SIM card is damaged or inserted incorrectly, Check Card will be displayed. In this event, remove the card, check that it is the right way round, then re-insert it into the handset.

If Bad Card See Supplier or Blocked See Supplier is displayed, contact your Cellular Service Provider.

## 3-2 Handset – general information

---

### Electronic lock feature


 

For details of the electronic phone lock facility, see **Phone Lock** on page 9-24.

When the electronic phone lock has been selected, the unlock code is lost when the engine is started (unless the 5-minute safety time has been enabled). This renders the phone inoperable until the code is re-entered.

If the phone is locked, the handset display will show **LOCKED** on entering phone mode.

To unlock the phone, enter the unlock code using the handset keypad.

### Volume button

The Volume button (  ) is on the front of your phone, under the display. The button is used for adjusting the keypad and ringer volume. A volume meter will display the current volume setting. The meter will disappear after a short time, or if you press  or .


- To adjust the keypad volume, press the button with no other features selected.
- To adjust the ringer volume, first select the 'Adjust Ring Volume' option in the Phone Setup Menu and then use the button to set the required volume.

The volume button can also be used to scroll through the Phone Book entries after pressing the Smart button.


The volume button is also used to scroll through menu items after pressing the Menu button.


If you receive a call and you do not want to answer it immediately, you can press the volume button to stop the phone from ringing. This will not answer the call.


### The Start/Stop Record button

The Start/Stop Record button is on the bottom right of your phone (  ) above the Power button. Press it to start and stop recording VoiceNotes™. Refer to **Using VoiceNotes™** on page 8-1 for more information.


### Special keys


 Turns the phone on and off.


 Accept call, setting, option.


 Reject call, setting, option.


 Enter the Quick Access menu.

 Press to access the Options and Phone Book menus.

 Use to scroll left and right.

 Press the top to scroll up and press the bottom to scroll down.

 Press to access Voice Annotator or VoiceNotes™.

 Press to call Voicemail.


The shape of the keys that appear in the manual may vary slightly from those on the phone.

## The Smart button

The Smart button ( ) is on the left-hand side of your phone, below the Clear ( ) button. Press it to quickly access all your Phone Book entries, and then either scroll through the entries using the volume button or press one of the alphanumeric keys to search for a specific name – for example, press to search for the name *Pam*, or press four times to search for the name *Sam*.

If a Phone Book entry does not have a name, it will not be displayed.

## The display

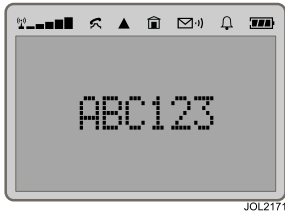

The display on your phone can show alphanumeric characters as well as useful information symbols. The various elements of the display are as follows:

**ABC123** Characters are used to display messages and telephone numbers.

**In Use.** Displayed when a call is in progress.

**Roam.** Displayed when you are registered on a system other than your home system.

**Home Zone.** Availability depends on your service provider.

**Short Message Service.** Displayed when the phone has received a message. The symbol will flash when your message storage area is full.

**Voicemail Waiting Indicator.** Displayed when you have a voice message waiting. The availability of this feature depends on your service provider.

**Ringer On.** Displayed when the call ringer is selected. If you select the No Ring option this symbol will not be displayed.

... Icons are displayed when you are in the Quick Access menu.

Indicates that a menu item is currently selected.

In addition, when you are expected to press the key, a prompt will appear in the display, for example **Comp1 et ed.**

## 3-4 Handset – general information

---

### Low temperature use

The liquid crystal display used in your phone will behave differently at extremely low temperatures. You may notice that the display responds slowly to key presses; this is to be expected and does not affect the phone operation in any way.

### Communicating with external devices

To communicate with an external device, such as a personal computer or a fax machine, your phone includes a serial data port.

### Looking after your phone

- Never leave your phone in extreme temperatures (over 60°C – 140°F), for example behind glass in very hot, direct sunlight.
- To clean your phone, use a moistened or antistatic cloth. Do **not** use a dry or electrostatically charged cloth.

### Your SIM card

You will not be able to make or receive calls if you do not have a SIM card inserted in your phone.

The SIM card is a ‘Smart Card’ that contains your phone number, service details and memory for storing Phone Book numbers and messages. You can therefore use your SIM card in someone else’s GSM phone and you will be charged for the call.

Like a bank or credit card, you should keep your SIM card secure. Do not bend or scratch your card and avoid exposure to static electricity or water.

**Switch off your phone before inserting or removing the SIM card. Failure to do so may damage the memory on your SIM card.**

### SIM/Phone number memory

The stored number memory is divided into two parts, one on your SIM card, and one in the phone.

The number capacity of your SIM card is 99. Therefore if you transfer your SIM to/from another phone you will only have access to the first 99 stored number positions.