

## Audio panel controls

1. ON/OFF switch and volume control.
2. Phone send/end calls.
3. Phone mode button.
4. Phone memory recall button.
5. Cancel/correct telephone numbers.
6. Display.
7. Phone keypad – buttons 0 to 9 (except where touch-screen is fitted – see page 5-5).
8. Scroll memory location.

The telephone can be operated either direct from the handset in the conventional manner, or in hands-free mode using the audio panel keypad or steering wheel mounted control buttons, and an overhead microphone.

### Display messages


Messages that may be displayed:

**CALL** – There is an incoming call.

**CALLING** – A call is being established.

**EMPTY** – Memory location is empty.

**INSERT SIM** – SIM card missing or incorrectly installed.

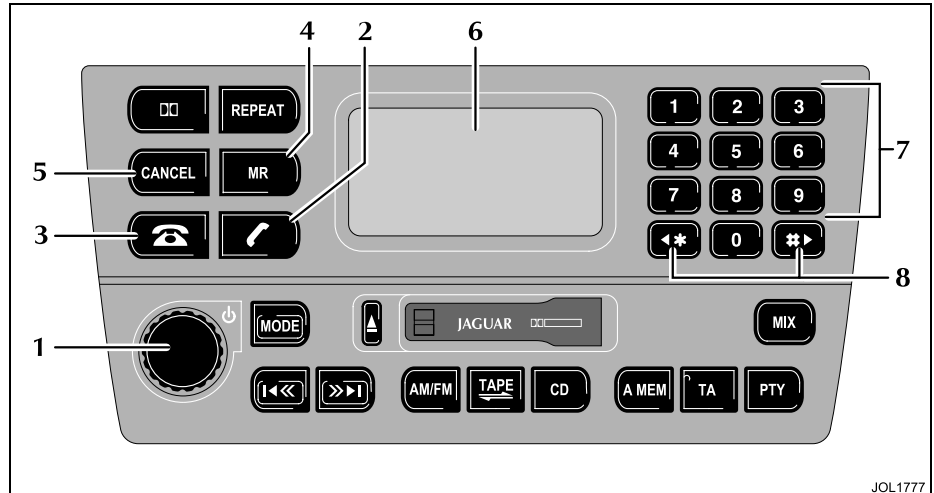

**LOCATION** – Memory location number or prompt for memory location number.

**NO SERVICE** – No cellular service available.

**PHONE** – System entering phone mode.

**PIN** – PIN required – enter the PIN on the sound system keypad.

Press  button to enter PIN.

**PLEASE WAIT – phone book information loading** – A short delay will be experienced whilst information is transferred from the SIM card.

**PUK REQUIRED** – SIM card is barred from use.

**ROAM** – Phone connected to different network from ‘home’ system.


**SIG** – Indication of signal strength.

Messages on the audio panel display may not be in the same language as the messages on the phone display.

## 4-2 Handsfree controls

---

### Steering wheel controls

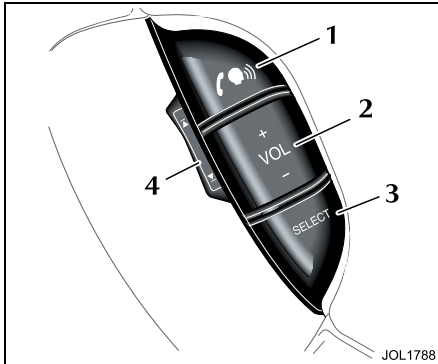

Four control switches situated on the left-hand side of the steering wheel, duplicate the functions of similar controls on the audio panel to provide finger-tip control when driving.

1. Press to make/answer/end handsfree calls when in the main phone mode screen.  
Press to answer/end handsfree calls from any screen.
2. During phone call, press top or bottom to increase or decrease volume.
3. Press and hold for 2 seconds to select phone mode. When the button is pressed again and released, the system will change audio mode.
4. In phone mode main screen, press the upper or lower part of the control to scroll up or down through the numbers stored in the phone memory. If pressed whilst any screen other than the phone mode main screen, it will operate scrolling of audio information.

## Audio panel control functions

### Volume control and fader mode

Phone volume can be adjusted from the audio panel volume control or the steering wheel switches and the volume set is memorised for future calls (this will not alter the other audio volume settings).


**To adjust:** During a phone call, press **MODE** on the audio panel repeatedly until **FADE** is displayed. Using the volume control knob or the steering wheel button, set fade to personal preference.



### Phone mode

This button will activate the phone mode, ready to make a call and the display will indicate that phone mode has been selected.

This function can also be controlled from the steering wheel (press and hold button 3 shown on the preceding page).

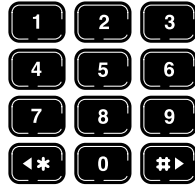

### Keypad

Press digits to enter the required telephone number. Each key press will beep and the digits are displayed on the audio panel.

The keypad can also be used in Memory Recall (**MR**), to enter a location number, or to scroll up/down the memory locations.



### Cancel

Press and release **CANCEL** to clear the last digit of a telephone number. Press and hold to clear all digits entered.



### Send/end

Press this button to send the entered telephone number. Also used to end a call that is in progress.

This function can also be controlled from the steering wheel by using button 1 shown on the preceding page.

## 4-4 Handsfree controls

---



### Memory recall

Press to access the phone memory and recall a number. Either a memory location number can be entered from the keypad, or memory locations can be scrolled up and down from the keypad scroll keys.

Memory locations can only be scrolled numerically.

This function can also be controlled from steering wheel button **4** shown on page 4-2. Press the upper or lower part of the control to seek up or down through the numbers stored in the phone memory.

Last number redial may also be activated by pressing and holding the **MR** button.



### Radio/Tape/CD

When a call has ended, press one of these buttons to select radio, tape or CD.

These buttons are inoperative during a 'handsfree' telephone call.