

General Information

The touch-screen provides touch-control of vehicle climate, audio, navigation, television and telephone systems, as fitted. A small LCD screen below the touch-screen provides a digital display of the ambient temperature and vehicle cabin set temperature.

This handbook describes every option and model variant available and therefore some of the items covered may not apply to your particular vehicle.

The touch-screen setup and user menus, clock setting, headlight setting, door locking mode and auto fold door mirrors information is described within this section (Section 1) of this handbook.

Automatic climate control

The climate control system can be controlled from the touch-screen buttons (accessed via the **CLIMATE** button to the left of the touch-screen) and is described in Section 2 of this handbook.

Audio systems

The vehicle audio system interacts with the JaguarVoice, Navigation, In-car Telephone and Climate Control systems via data on the multiplex communications vehicle network.

The audio system can be controlled from the radio front panel buttons, the touch-screen buttons accessed via the **AUDIO** button on the left of the touch-screen and from multi-function controls on the left-hand side of the steering wheel, where fitted. These controls are described in Section 3 of this handbook.

The sound system antenna is an integral part of the vehicle rear screen and serves both FM and AM radio wavebands.

Audio security code number

For the United Kingdom and European countries, the audio head unit is protected by an anti-theft security code. If power to the radio drops to 5 volts or less (dead battery), or there is a power interruption/disconnection, the touch-screen display will indicate **Enter System PIN**. At this point the radio will not operate until the correct security code is re-entered.

The four-digit code, which is listed on an audio security card supplied with the vehicle, is entered by pressing the appropriate numeric buttons **0** to **9** displayed on the touch-screen followed by the **ENTER** button.

If the code is entered incorrectly, two further attempts at code entry will be permitted. If, after three successive attempts, the code has not been properly entered, the display will indicate **PLEASE WAIT**. In this condition the radio will not accept further entries until it has been left on for at least 30 minutes. After 30 minutes in the ON position the radio will accept three further entries.

Note: In the event of loss of your radio security card, contact your Jaguar Dealer who, for security reasons, will require proof of vehicle ownership.

1-2 Introduction

Navigation system

This Jaguar navigation system assists the driver by providing a route to a selected destination. Guidance is given by means of audible instructions (voice guidance), complemented by map and turn information, which is displayed on the touch-screen. Digital map information is held on the Navigation System Digital Versatile Disc (DVD), which is loaded into the navigation control unit housed in the luggage compartment.

The system has an extremely comprehensive range of features, yet is easy to use. Some time spent reading Sections 4 to 13 of this handbook will ensure that the best results are obtained. The touch-screen is used to control the system by means of menus, text screens and map displays.



WARNING:

- 1. The navigation Database reflects reality as existing before you received the Database and it comprises data and information from government and other sources, which may contain errors and omissions. Accordingly, the Database may contain inaccurate or incomplete information due to the passage of time, changing circumstances, and due to the nature of the sources used. The Database does not include or reflect information on – amongst other things – neighbourhood safety; law enforcement; emergency assistance; construction work; road or lane closures; vehicle or speed restrictions; road slope or grade; bridge height, weight or other limits; road or traffic conditions; special events; traffic congestion; or travel time.**
- 2. Only operate, adjust or view the system when it is safe to do so.**

Television system

The TV tuner provides TV viewing when the vehicle is stationary or moving slowly. TV is only available in certain countries. The TV system is described in Section 14 of this handbook.

In-car telephone features

In this handbook, some features shown are only available when the vehicle is fitted with the Jaguar in-car telephone installation. These features include the display of the telephone button, the end call button, and one-touch dialling of points of interest (POI) numbers or memory points.

The telephone is described in the separate In-car Telephone Handbook.

JaguarVoice

JaguarVoice provides a safe and convenient way for the driver and/or rear occupants to control the following vehicle systems (where fitted):

- Sound system (radio, cassette tape player, CD player, MiniDisc player and CD changer – as applicable).
- In-car telephone.
- Climate control system (front user only unless 4-zone climate control is fitted).
- Television and Teletext.
- Display screen (front user only).
- Navigation (front user only).

The system is controlled in the front of the vehicle by the steering wheel voice button, and, when fitted in The XJ, in the rear of the vehicle by the rear multimedia switchpack voice buttons, see Section 15.

Rear multimedia (The XJ only)

For details of this system, see the separate Rear Multimedia Handbook.

Note: The operation of certain functions from the rear multimedia system will cause a pop-up to appear on the touch-screen. This is for information only: the pop-up will disappear automatically after a few seconds (it does not allow control of the rear multimedia system).

Window Tinting



WARNING:

Do not have your vehicle windows tinted with a metal oxide tinting (for maximum heat reduction from sun load) if you have a Navigation system fitted to your vehicle.

Metal oxide tinting prevents the reception of the Global Positioning Satellite (GPS) signals by the antenna causing the navigation system to stop functioning.

A non-metal tinting should be used if you require window tinting and if in doubt, contact your Jaguar Dealer for advice.

About this Handbook

This handbook shows the on-screen menus, explains how to operate the controls, and gives an example showing how to set a destination. After becoming familiar with the controls, follow the on-screen menus and prompts, to operate the system as required.

To find a particular menu, see **Menu Structure** on page 13-2.

Throughout the handbook, the expression 'Select an item' (or similar wording), means 'Touch the on-screen button adjacent to the item required'.

1-4 Introduction

Touch-screen Display

Touch-screen use and care

When the ignition switch is initially turned to position 'I' or 'II', the touch-screen will display the Jaguar logo screen followed by activation and display of the mode previously used. Display of buttons for other systems can be obtained by pressing the appropriate perimeter button. Functions of the **MENU** button are described on the following pages.



WARNING:

In the interests of road safety, only operate, adjust or view the system when it is safe to do so.

Caution: Care must be taken to avoid spilling or splashing drinks onto the screen. In the event of such an occurrence advise your Jaguar Dealer.

Note: When operating touch-screen buttons, always extend the tip of one finger, and withhold the thumb and remaining fingers from the screen. Touching the screen with more than one finger at a time may cause false inputs.

The touch-screen and inner bezel must be kept clean to maintain optimum performance. Finger marks and attracted dust should be regularly removed using a soft cloth and a Jaguar approved cleaning agent.



Touch-screen (S-TYPE and The XJ)

See next page for the X-TYPE touch-screen.



Touch-screen (X-TYPE)

Vehicle differences

The main differences between Jaguar model touch-screens are:

- Climate control
X-TYPE has single temperature control
S-TYPE has dual-zone temperature control
The XJ has dual-zone or four-zone controls
- Clock
X-TYPE and S-TYPE have the clock displayed on the touch-screen
The XJ has an analog clock.
- Rear Multimedia
Only The XJ has rear multimedia.

1-6 Introduction



JOL2022a


Menu

Pressing the **MENU** perimeter button will display the system menu screen.

The screen display can be blanked out by touching the **Screen Off** button.

Touch the screen, or press any of the perimeter buttons, to restore the display.

Alternatively, the Jaguar logo can be displayed by touching the **Logo Screen** button.

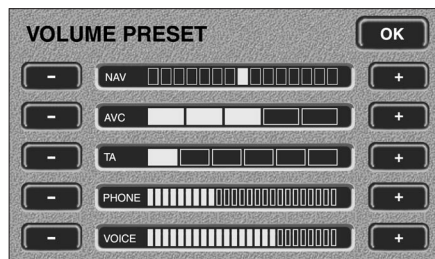

JOL1640

Volume Preset

After touching the **Volume** button, the screen displays the buttons for adjustment of volume associated with the navigation system, JaguarVoice, telephone, traffic announcements and automatic volume control (AVC).

Adjustment of AVC varies the rate at which volume is increased or decreased relative to vehicle speed.

Touch and hold the '+' or '-' button to adjust the volume of the selected function.

Note: If any of the volume slides are adjusted to the fully '-' position, then the volume is turned fully off.

Confirm your selection by touching **OK**.



JOL2555

Brightness/Contrast

After touching the **Brightness/Contrast** button, the screen displays the buttons for adjustment of the screen display characteristics. The centre window shows the currently selected navigation view.


Touch the '+' or '-' button to adjust the selected function.

Screen brightness and contrast can also be dimmed for night driving.

This is achieved either manually via the **Day**, **Night** or **Twilight** buttons (independent of the exterior light switch position), or automatically via the **Auto** button (controlled by the exterior light switch position).

Touch the **Default** button to restore the default settings.

Confirm your selection by touching **OK**.

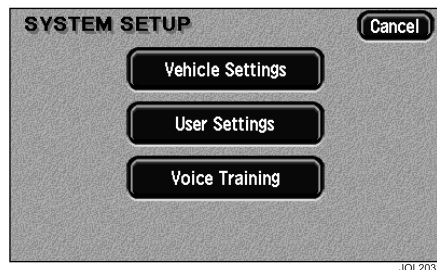


JOL2033

System Setup

After touching the **System Setup** button, the screen displays the buttons for selecting user settings or vehicle settings (see page 1-8).

Note: Vehicles which have the JaguarVoice system fitted will have an additional button on the system setup screen for voice training. This is described in Section 15.

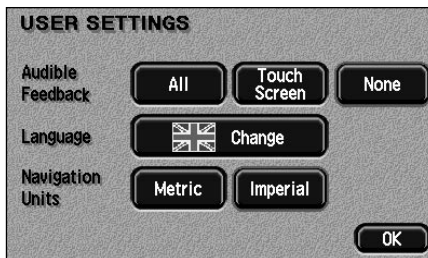

JOL1306Z

User settings

After touching the **User Settings** button, the screen displays the buttons for the selection of audible feedback, language, and units of measurement.

All selects audible feedback on the perimeter buttons and touch-screen buttons. **Touch Screen** selects audible feedback on the touch-screen buttons only. **None** selects no audible feedback.

To select another language, touch the **Change** button and, if the language is not shown, scroll the screen as required.

To select a language, touch the flag of the country required.

Navigation Units provides either imperial or metric units for use with the navigation system.

Confirm your selection by touching **OK**.



JOL1306Z


Set clock

Clock adjustment on S-TYPE and X-TYPE is made by touching the hour or minute up or down arrow button.

Touch the **12/24** button to select twelve or twenty-four hour display.

Confirm your settings by touching **Set**.

1-8 Introduction

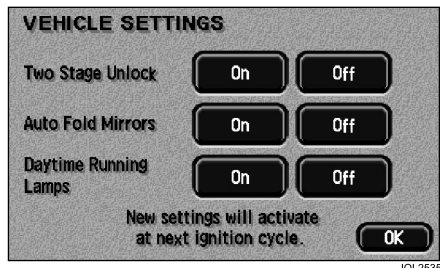

The XJ vehicle settings

After touching the **Vehicle Settings** button, the screen displays the buttons that switch certain functions on or off.

Two-stage unlock

If this function is switched on, the first press of the key transmitter 'unlock' button will only unlock the driver's door. Press the unlock button a second time to unlock the remaining doors.

If the function is switched off, pressing the unlock button once will unlock all of the doors.

Daytime running lamps

Where fitted, daytime running lamps will be activated. It is particularly useful when visiting countries where daytime running lamps are compulsory.

Auto fold door mirrors

When this function is switched on, the door mirrors will automatically fold flat when global closing is performed (refer to **Security and Locks**, Section 2 of the Driver's Handbook).