



Changing the Display Language

The screen text and voice guidance are available in a number of languages.

- Switch the ignition OFF and then ON, to display the initial Jaguar logo on the touch-screen.
- To select a different language, press the **NAV** button, then touch the language button.
- On the **User Settings** screen, touch the change button and, if the language is not shown, scroll the screen as required.
- To select a language touch the flag of the country required and then touch the **OK** button.
- A pop-up will ask you to confirm your selection. Touch **YES** to continue or **NO** to return to the **User Settings** screen.

This procedure changes the on-screen language for all the touch-screen systems.

Search Area/Country Change

To reduce the time taken to calculate a route, some map databases are divided into countries, or in the case of some larger countries, into areas of countries, called Search Areas. When setting a route, the destination (or way point) being entered must be in the currently selected search area.

The first time that the navigation system is used, the driver should confirm that the correct country/area has been selected. Once set, it will remain correct for all future use; unless the battery is disconnected.

The search area is changed at the Destination Entry screen. Access to this screen is described with illustrations in steps 1 to 4. See **Route Setting Example** on page 6-1.

The procedure is briefly as follows:

- Switch ON the Ignition and press the **NAV** button located on the perimeter of the touch-screen panel.
- Press **Agree** on the Caution screen, press the **Nav Menu** button on the Initial Map screen, press **Destination Entry** on the Nav Menu screen.



The currently selected area is shown highlighted on the map.

To change the search area, press **Change**.

- From the list displayed, select the button required for the desired country or area of a country.
- Touch the **OK** button to confirm your selection, or **CANCEL** to make no change to the search area.

The new selected country or area will now be shown highlighted.

12-2 Navigation System – Advanced Functions

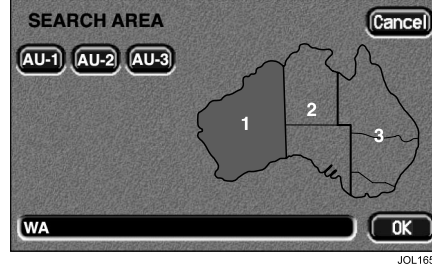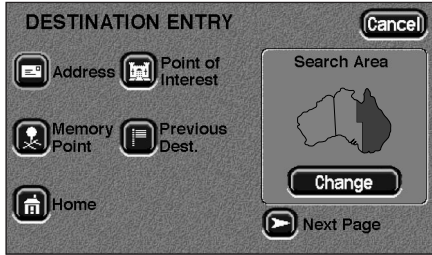

Search area change Australia

Australia is shown as an example of a large country divided into search areas.

Australia is divided into three search areas. The currently selected area is shown highlighted on the Destination Entry screen.

To change the search area, press **Change**.

The areas which are available for selection are shown on the screen.

- Select the **AU-1**, **AU-2** or **AU-3** button as required for the desired area.

The new selected area will now be shown highlighted.