
About this handbook	1-3	Cassette tape player operation	3-12
– in-car telephone features	1-2	– change tape side	3-12
Advanced features of the system		– Dolby B	3-12
– avoid areas	4-7	– eject	3-12
– memory points	4-7	– fast forward and rewind	3-12
– points of interest	4-7	– model controls	3-1
– screen guidance	4-7	– tape button	3-12
– voice guidance	4-7	CD changer	3-16
– way points	4-7	– CD changer mode	3-17
Air conditioning	2-7	– CD check sequence	3-16
Audio security code number	1-1	– CDC button	3-17
Audio system		– ejecting the magazine	3-16
– change audio system source	3-6	– inserting the magazine	3-16
– setup	3-15	– mix and CD mix	3-17
– steering wheel controls	3-3	– pause	3-17
		– repeat	3-17
Blower speed	2-7	– seek up and down	3-17
Brightness/contrast	1-6	CD player	
		– CD button	3-13
Care of the audio system		– eject	3-13
– cassettes	3-19	– mix	3-13
– compact discs (CDs)	3-19	– operation	3-13
– MiniDiscs (MDs)	3-19	– pause	3-13
– radio	3-19	– repeat	3-13
		– seek up and down	3-13

Index

Climate control	2-1	Digital Signal Processing – DSP	3-6
– air conditioning	2-7	Display language	12-1
– air recirculation	2-5	Display options	7-8
– AUTO mode	2-4	– guidance options	7-8
– blower speed	2-7	– map options	7-8
– dual zone	2-5	Dual temperature zones	2-5
– heated screens and mirrors	2-6	Example – route setting	6-1
– ram air	2-8	Ferries	6-4
– rear climate panel	2-9	Frequently used functions	13-1
– smog sensing	2-9	General information	1-1
– temperature selection	2-4	Getting started	
– windscreen defrost	2-6	– initial map screen	4-6
Contrast/brightness	1-6	– zoom button operation	5-2
Control panel	4-5	Heater controls	2-1
Dealership locations	9-2	Home position	10-4
Defrost	2-6	Jaguar Dealership locations	9-2
Destination entry menu	8-1		
– address	8-2		
– change search area	12-1		
– home	8-5		
– intersection	8-8		
– memory point	8-4		
– motorway entrance/exit	8-7		
– point of interest	8-1		
– postcode	8-6		
– previous destination	8-5		
– select from map	8-6		

JaguarVoice	
– general information	15-1
– how to say numbers	15-11
• disc and track numbers	15-11
• phone numbers	15-12
• radio stations	15-11
• teletext	15-12
• television	15-12
• temperatures	15-12
– language and accent	15-1
– training command list	15-28
– trouble-shooting error messages	15-29
– using the system	15-4
• initialisation	15-4
• nametags	15-9
• volume level adjustment	15-10
– voice command list	15-13
• automatic climate control commands	15-19
• cassette tape player commands	15-15
• CD changer commands	15-16
• display commands	15-20
• general commands	15-13
• generic track commands	15-16
• MiniDisc commands	15-15
• nametag features within the navigation system	15-23
• navigation commands	15-21
• navigation traffic information commands	15-22
• radio commands	15-13
• single CD commands	15-15
• teletext commands	15-20
• television commands	15-20
– voice training	15-26
• training procedure	15-26

Index

Language change	12-1	On-screen control buttons	5-3
Loading the navigation system DVD	4-5	– volume adjustment	5-4
Memory points	9-7	Quick points of interest	9-1
Menu structure	13-2	– cancelling POI icon display	9-2
MiniDisc (MD)		– changing the categories	9-2
– eject	3-14	– POI icon display	9-1
– MD button	3-14	– POI information	9-2
– mix	3-14	– selecting a category	9-6
– operation	3-14	Radio data system and traffic announcements	3-8
– pause	3-14	– priority programme type (PPTY)	3-10
– repeat	3-14	– programme type (PTY)	3-9
– seek up and down	3-14	– PTY31-Alarm	3-10
Navigation menu	7-1	– RDS trouble-shooting guide	3-11
– audible instructions	7-1	– RDS operation	3-9
– functions available on the move	7-1	– TA and priority PTY interrupt skip	3-10
Navigation set up menu	7-5	– TA – preset minimum volume	3-9
– average speed settings	7-5	– TA operation	3-9
– calibration	7-7		
– map version	7-6		
– quick POI selection	9-1		
– restore system defaults	7-6		
Navigation system DVD	4-4		

Radio operation	3-4	Route options menu	7-2
– A MEM with RDS selected	3-7	– calculate	7-4
– AM/FM mode	3-6	– cancel guidance	7-4
– auto memory (A MEM)	3-7	– delete next way point	7-4
– automatic volume control (AVC)	3-5	– detour	7-2
– balance and tone adjustment	3-6	– display whole route	7-3
– band switch AM/FM	3-7	– route preferences	7-2
– on/off control	3-4	Safety information	4-2
– presetting memorised radio stations	3-7	Screen displays	5-1
– reception	3-4	– initial map display	5-1
– seek and manual tuning	3-7	– menus	5-5
– volume control	3-4	– name lists	5-5
– volume preset adjustments	3-5	– scrolling the map	5-2
Rear multimedia system settings	3-5	Screen types	11-9
Route calculation	11-1	– guidance screen	11-9
– calculating the route	11-1	– map screen	11-9
– confirm destination	11-1	Smog sensor	2-9
– confirm route	11-2	Source tone memory	3-6
Route guidance	11-5	Stored locations menu	10-1
– arrival guidance	11-8	– avoid area	10-5
– auto reroute	11-8	– destination and way point	10-7
– avoiding points	11-5	– home	10-4
– breaks in journey	11-5	– memory points	10-2
– distance units	11-5	– previous destination	10-6
– message centre guidance	11-5	Storing way points	11-3
– time/distance to destination	11-5	– additional way points	11-3
– touch buttons	11-6	– calculate route	11-4
– way points	11-8	– first way point	11-3
– whole route display	11-5		

Index

Television	
– adjusting contrast, brightness or colour	14-5
– basic controls	14-2
– change screen mode	14-9
– country of operation	14-8
– general information	14-1
– icons used in basic controls	14-5
– inhibit while moving	14-1
– introduction	14-1
– manual tuning	14-7
– selecting a preset channel	14-4
– setting the volume	14-4
– switching off	14-3
– switching on	14-2
– telephone end call function	14-12
– teletext	14-10
– tuning	14-6
– tuning icons	14-7
– voice activation of TV	14-1
Text input	5-6
– character input	5-6
– number input	5-6
Toll roads	6-4
Touch-screen display	1-4
Using a point of interest (POI)	
– categories/sub-categories	9-5
– entry by category	9-3
– entry by POI name	9-3
– entry by town	9-3
– other selection methods	9-4
– POI list	9-5
Using the system	4-1
– alternative routes	4-3
– errors in vehicle position	4-3
– languages and distance units	4-4
– navigation system DVD	4-4
– reception of GPS signals	4-2
– road junction layouts	4-4
– route guidance precision	4-3
– screen cleaning	4-4
– time and distance to destination	4-2
– town name lists	4-4
Vehicle differences	1-5
Vehicle settings	1-8
– auto fold mirrors	1-8
– daytime running lamps	1-8
– two-stage unlock	1-8
Volume adjustment	1-6
Window tinting	1-3

JJM 10 42 26/40