

Navigation Menu



The Navigation menu is the top level menu of the system, showing the functions that are available:

Destination Entry – see page 8-1.

Route Options – see page 7-2.

Navigation Set Up – see page 7-5.

Display Options – see page 7-8.

Stored Locations – see page 10-1.

- Select the menu item required.



Audible instructions

The highlighted button shows whether the setting for voice guidance is currently On or Off.


- To change the voice guidance setting, touch the button required.

Functions available on the move

For safety reasons, only certain functions are available while the vehicle is on the move.

7-2 Navigation System – Menu Structure

Route Options Menu

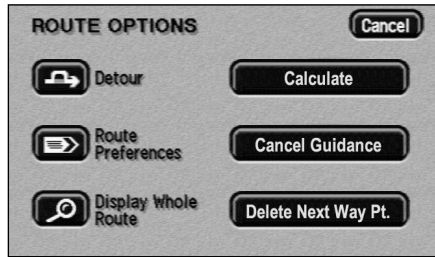

The menu shows the route options available:

Detour

Route Preferences

Display Whole Route

Calculate

Cancel Guidance

Delete Next Way Pt.

- Select the menu item, or touch the button for the option required.

These options are described as follows:

Detour

While driving under guidance, this feature allows you to make a detour from the calculated route for a specified distance. The screen shows the detour distance settings available for residential roads and motorways. The current selections are shown highlighted.

Residential: 1, 2, 3, 4, 5, 10, 15 kilometres (or miles).

Motorway: 5, 10, 15, 20, 25, 50, 100 kilometres (or miles).

- Touch the appropriate buttons to change the detour settings as required.

Route detour

- Touch the **Detour** button.

The route ahead is recalculated using the current detour distance settings.

Alternative route

- Touch the **New Route** button.

The system uses different combinations of the route preference settings to calculate an alternative route (where possible).

Note: The detour settings are only used when you touch **Detour** and only apply to the current route.

Route preferences

The screen shows the route preferences available, with the current settings highlighted.

Minimise Time/Dist. – Time/Dist.

Use Major Roads – Yes/No.

Use Toll Roads – Yes/No.

Use Ferries – Yes/No.

- To select a route preference, touch the button for the setting required.
- Touch **Store Setting** to apply the new settings (this is only available if no route was set previously).
- Touch **Calculate** to apply the new settings to an existing route.
- Touch **Cancel** to keep the old settings.

Note: The system will use your route preference settings wherever possible. However in some circumstances, to calculate a satisfactory route, one or more of the alternatives may have to be used.


Route Options Menu (continued)



Display whole route

After selecting **Display Whole Route**, the screen shows the whole route, with the total route distance, and estimated travelling time displayed at the top of the screen. Where the route includes a ferry crossing, a ferry icon is shown.

- To view the destination, touch **Dest Map**.
- To view the turn list, touch **Turn List**.

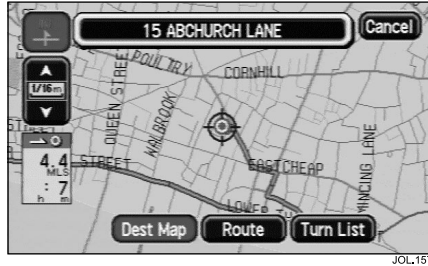

End of route display

After touching **Dest Map**, the screen shows the last portion of the route, with the destination address displayed at the top of the screen.

- To return to the whole route display, touch **Route**.
- To view the turn list, touch **Turn List**.



Turn list


After touching **Turn List**, the first portion of the route turn list is displayed.

- To view the rest of the entries, scroll the list as required.
- To recalculate the route, touch **Reroute**. See **Calculating the Route** on page 11-1.

Avoid point/area – See next page.

7-4 Navigation System – Menu Structure

Route Options Menu (continued)

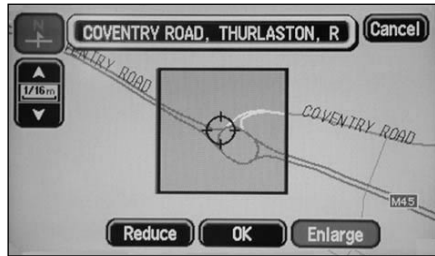

JOL2071

Turn list (continued)

Avoid point/area – Any point on the route can be avoided if required.

- Touch the **Avoid** button next to the required entry in the turn list.

The map screen is displayed showing the location and address of the selected point.

- Scroll the map to adjust the location if required.
- Use the **Enlarge** and **Reduce** buttons to create an avoid area if required.
- Touch **OK** to confirm.

Note:

1. The selected points or areas will not be avoided until the route is recalculated (touch **Reroute**).
2. The points or areas selected in this way are only avoided for the current route. Permanent avoid areas are created from the Store Avoid Area menu, see **Avoid Area** on page 10-5.
3. In some circumstances, to calculate a satisfactory route, it may not be possible to avoid all the selected points or areas.

Calculate

This is a quick way to start a route calculation after making changes to the route preferences. For more information, see **Route Calculation** on page 11-1.

Note: The route will be calculated using the destination and/or way point addresses previously entered.

Cancel guidance


The map showing the whole route is displayed.

- Touch **Yes** to cancel the route.

Delete next way pt.

Deletes the next way point (if way points have been chosen) from the route which is currently being followed.

Navigation Set Up Menu

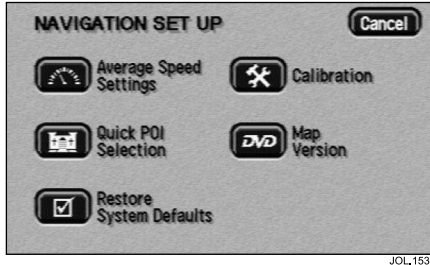

The menu shows the setup options available:

Average Speed Settings

Quick POI Selection

Restore System Defaults

Calibration

Map Version

- Select the menu item required.

These options are described as follows:

Average speed settings

The screen shows the current average speed settings. Speeds can be selected in the range from 5 km/h (5 mph) to 240 km/h (150 mph). The default settings are:

Residential Road: 30 km/h (20 mph).

Main Road: 60 km/h (40 mph).

Motorway: 100 km/h (60 mph).

- Select the average speeds required using the arrow buttons.
- Touch **OK** to apply the new settings.
- Touch **Default** to apply the default settings if required.

Note: These settings do not affect route calculation, they are only used in displaying the time to destination. Choose your own usual speeds, so that the time shown matches your own driving style as closely as possible.

7-6 Navigation System – Menu Structure

Navigation Set Up Menu (continued)

Restore system defaults

The default settings are as follows:

Guidance Voice: On.

Search Area: Belgium.

Route preferences:

- Minimise Time/Dist.: Time.
- Use Major Roads: Yes.
- Use Toll Roads: Yes.
- Use Ferries: No.

Detour:

- Residential Road: 4 km (4 miles).
- Motorway: 20 km (20 miles).

Average speed settings:

- Residential Road: 30 km/h (20 mph).
- Main Road: 60 km/h (40 mph).
- Motorway: 100 km/h (60 mph).

Quick POI categories:

- Petrol.
- Parking.
- All Restaurant.
- Hotel.
- Shopping Centre.
- Golf Course.

Guidance Options:

- Map Screen: Split Screen.
- Guidance Screen: Turn Arrows.

Map Options:

- Memory Point Icons: Show.
- Time To Destination: Show.
- Message Centre Guidance: Off.
- Low Fuel Warning: On.
- To select the complete set of default settings, touch **OK**.


Calibration

See next page.

Map version

The screen shows the issue date of the Navigation System DVD currently loaded.

Navigation Set Up Menu (continued)

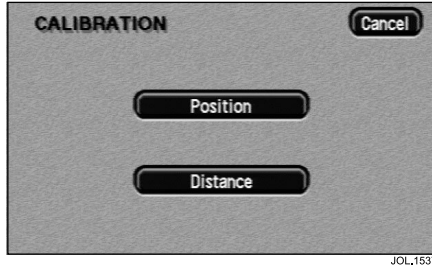


Calibration

Sometimes the vehicle position may not be correct. This can occur, for example, if the vehicle has been moved on a trailer or by ferry. If the new position is not found automatically by the system, it can be corrected by using the calibration procedures (Position first).

- Touch **Position** to adjust the vehicle position. See **Position procedure** on this page.
- Touch **Distance** to recalibrate the system.

The screen briefly shows 'Distance Calibration is in Progress'. Calibration is carried out during normal driving. No notification is given that distance calibration has been completed.

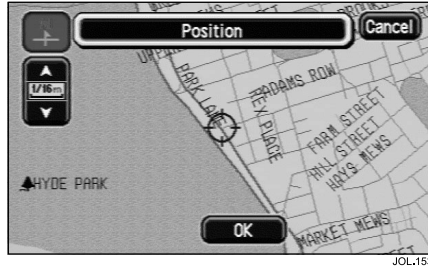

Position procedure

The map showing the current vehicle position is displayed.

- Scroll the map until the navigation symbol (vehicle position) is in the correct geographical location.
- Touch **OK** to confirm the new position and display the map screen for heading adjustment.

Note: If a route is set, a new route calculation will be carried out.



Position (heading)

The map screen showing the heading adjustment arrows is displayed.

- Adjust the vehicle heading using the arrows (clockwise or anticlockwise), until the navigation symbol is shown in the correct alignment.
- Touch **OK** to confirm the new heading.

7-8 Navigation System – Menu Structure

Display Options



JOL2525

The screen shows the display options available, with the current selections highlighted:

Guidance Options

Map Options

Guidance options

Turn Arrows – When set to Turn Arrows, the guidance screen overlay shows the on-route arrow and next turn icon. Before each manoeuvre point, the next junction diagram is displayed automatically.

Turn List – When set to Turn List, the guidance screen overlay shows the current portion of the route turn list. Before each manoeuvre point, the next junction diagram is displayed automatically.



JOL1935

Map options

The options that can be set are:

Memory Point Icons – Show/Hide.

Time To Destination – Show/Hide.

Message Centre Guidance – On/Off – provides supplementary information, displayed on the vehicle message centre, located beneath the speedometer and tachometer.

Low Fuel Warning – On/Off – displays the petrol station icons (see below) automatically, when the fuel level is down to the normal low level warning.



Petrol station icon.