


Call Related Functions

SELECTING PHONE MODE

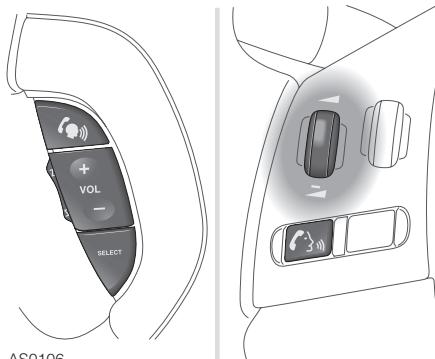

AS0106

 Once a phone is docked in the cradle, you must tell the system to use the phone in the cradle by pressing the 'Telephone/Voice recognition' switch until an audible response is heard.

Note: If you subsequently want to use a phone that is 'paired' to the vehicle via Bluetooth, use the phone handset to re-establish a connection to the vehicle.

ANSWERING/REJECTING CALLS

Answering an incoming call

 When an incoming call is received, the output from the audio system will mute (if switched on) and the ring tone will be heard from the front speakers. Press and release the 'Telephone/Voice recognition' switch to accept the incoming call.

Rejecting an incoming call

 An incoming call can be rejected by pressing the 'Telephone/Voice recognition' switch for at least 2 seconds. When a call is rejected, the audio system will return to the volume level set prior the call.

Ending a call

 An incoming call can be rejected by pressing the 'Telephone/Voice recognition' switch for at least 2 seconds. When a call is rejected, the audio system will return to the volume level set prior the call.

Adjusting the call and ring tone volume

Adjustment can only be made during a call or when the phone is ringing.

 Use the volume adjustment button on the steering wheel to either increase (+) or decrease (-) the volume of the call or the ring tone to your individual requirements.

MAKING A CALL

 Phone calls are made via the voice control system. To activate voice control, press and release the 'Telephone/Voice recognition' switch, an audible signal is heard (the audio system will mute at this point, if switched on). For further details see **VOICE RECOGNITION, 14**.