


# Quick Overview

## STEERING WHEEL CONTROLS

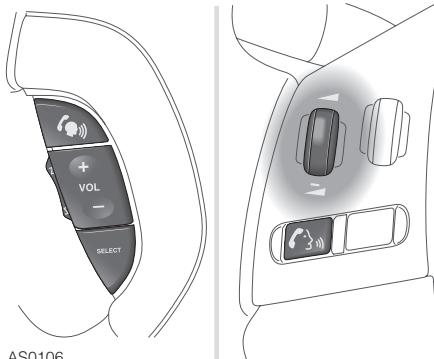

Telephone/Voice recognition

## MAKING/ANSWERING AND ENDING CALLS

The preferred method of making, answering or ending a call is by using the steering wheel controls. This method is preferable as both hands can be kept on the steering wheel.

The following functions are available once the phone is either attached to the docking cradle or 'Bluetooth' connected to the vehicle.

### Answering an incoming call

Press and release the 'Telephone/Voice recognition' switch to answer an incoming call.

Press and hold the 'Telephone/Voice recognition' switch for at least 2 seconds to end a call or reject an incoming call.

### Making a call

Press the 'Telephone/Voice recognition' switch to activate the voice control system.

## BLUETOOTH

### **Supported features**

- Make a call
- Receive a call
- Reject an incoming call
- End active call
- Last number redial

### **Unsupported features**

- SMS (send and receive text messages)
- Call stacking - e.g. SMS, last called number, call waiting.
- Phone book
- Hold/Unhold active call

### **'Pairing' your phone**

If your mobile phone supports Bluetooth connectivity, it will need to be 'Paired' to the vehicle. See **BLUETOOTH OPERATION, 13** for further details. The 'Pairing' process will also be described in your mobile phone instructions.

**Note:** A maximum of 4 mobile phones can be 'Paired' to the vehicle.

**Note:** If more than one 'Paired' Bluetooth phone is in range, then the system will automatically select the last phone used in Bluetooth mode (if present).

**Note:** The last method of connection (Bluetooth or cradle) to the system will take priority next time the system is used.

### **Bluetooth access code**

The four-digit access code required for Bluetooth 'Pairing' operation is 0000.