

## LABEL LOCATIONS



Warning labels attached to your vehicle bearing this symbol mean: Do not touch or adjust components until you have read the relevant

instructions in the handbook.




Labels showing this symbol indicate that the ignition system utilises very high voltages. Do not touch any ignition components

while the starter switch is turned on.

Labels are applied to draw your attention to important subjects (e.g. tyre pressures, airbags, engine compartment hazards, etc.).

Additional information labels may also be found at these locations.

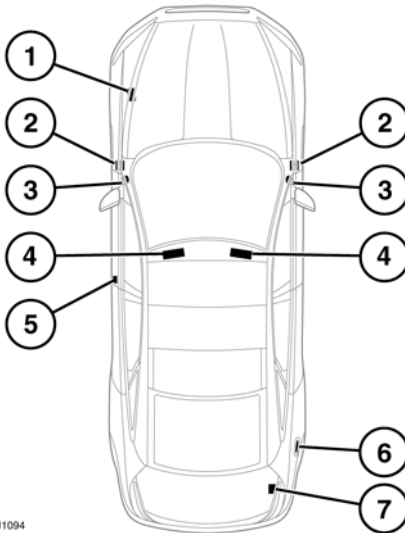

SJ1094

1. Left-hand inner wing - Air conditioning label

2. Vehicle Identification plate, including the Vehicle Identification Number (VIN) and recommended maximum vehicle weights.

- **Left-hand A pillar:** All markets except China.
- **Right-hand A pillar:** China.

**Note:** The VIN number is also stamped on a plate, visible through the bottom left hand side of the windscreen.

3. End of fascia (passenger side) - Passenger airbag label
4. Sun visor - Airbag label
5. Base of B pillar on the driver's side - Tyre pressure label, Airbag warning label.
6. Inner face of fuel filler flap - Fuel specification label
7. Top face of battery - Battery warning symbols

It is important that you are familiar with these subjects to ensure that your vehicle and its features are used safely. Using the index at the back of this handbook, refer to the relevant topic for more information.

## ENGINE NUMBER (PETROL ENGINES)

The number is located on the front of the right-hand cam cover.

## ENGINE NUMBER (DIESEL ENGINES)

The number is located on a metal label attached to the top of the left-hand camshaft cover.

## TRANSMISSION NUMBER

The transmission number is located on a label attached to the transmission casing.

## VEHICLE BUILD DATE PLATE

The vehicle built date is shown on the VIN plate.