


## FRONT

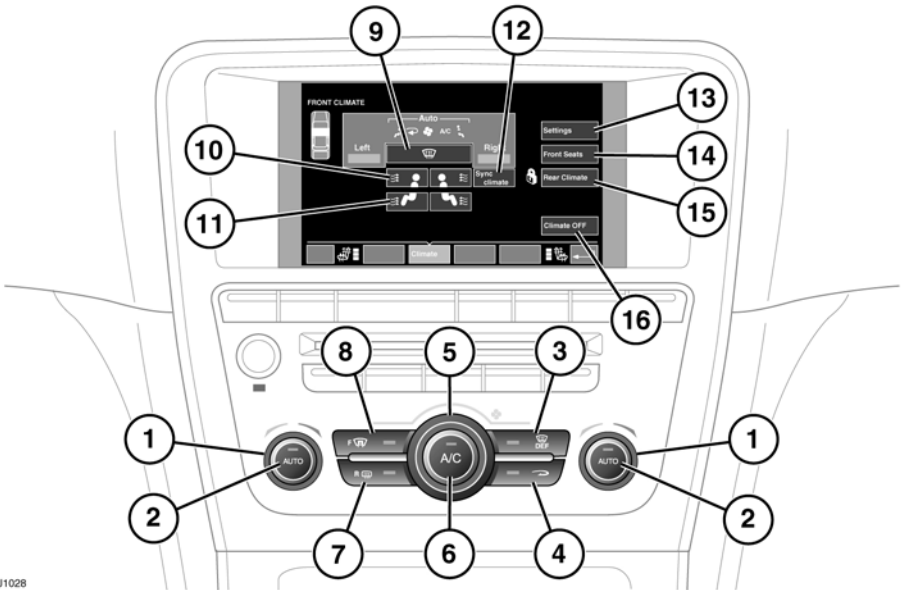

SJ11028

To access the front climate menu on the touch screen, select **Climate** from the home menu.

1. Temperature control: Rotate to adjust temperature (16°C - 28°C [59°F - 83°F]). The temperature is displayed on the touch screen (**HI** or **LO** is displayed when the maximum or minimum setting is selected).
2. AUTO control: Press to switch automatic operation on/off. This will also turn on the heating and ventilation system if it has been turned off.
3. Defrost: Press to remove frost or heavy misting from the windscreen. This setting activates the blowers, air-conditioning, front and rear screen heaters and prohibits recirculation, to achieve a rapid defrost.

4. Recirculation: Press briefly to select timed recirculation. Press and hold to select latched recirculation. Press again to switch off.
5. Blower speed: Rotate to adjust blower speed.  
Blower speed is automatically set in Auto mode. Adjusting the blower speed will cancel Auto mode.  
With blower speed at minimum, rotate the control anticlockwise to switch the climate system off.
6. Air conditioning: Press to switch on/off. The air conditioning system can be switched on/off independently of the other climate control functions.
7. Rear screen heater: Press to switch on/off.
8. Front screen heater: Press to switch on/off.

# Heating and ventilation

9. Air distribution to screen: Touch to turn on/off.
10. Air distribution to face: Touch to turn on/off.
11. Air distribution to feet: Touch to turn on/off.
12. Sync climate: Select to change all front and rear passenger climate settings to match that of the driver's. Select again or change a passenger's settings to cancel.
13. Settings: Select to alter the sensitivity of the air quality sensor, or to select °C or °F as the default temperature unit.
14. Front seats: Select to adjust the front seat temperature, ventilation and massage settings.
15. Rear climate: Select to view the rear climate control menu. Select the Back button to return to the front climate menu.
16. Climate off: Select to switch off the climate control systems. Select again to turn on.

In addition to the selectable controls, the climate menu displays symbols that indicate the status of heating and ventilation functions.

**Note:** *If the climate control system is switched off, pressing an AUTO button or the Defrost button, will switch the climate system on.*

## HEATED SCREENS

With the engine running, the front (F) and rear (R) screen heaters, may be switched on and off in any mode, including with the climate control system off.

The front screen heater switches off automatically after 5 minutes, the rear screen heater after 21 minutes.

In cold ambient conditions, the screen heaters will switch on automatically when the engine is started. The screen heaters will also activate automatically at temperatures below 5°C (41°F).

## RECIRCULATION

- Press briefly to activate timed recirculation. The button indicator illuminates when recirculation is on.
- Press and hold the button to activate latched recirculation. The button indicator will flash and then illuminate constantly.
- To cancel recirculation, press the button briefly.

When selected, the air is recirculated inside the vehicle. This helps to maintain a high or low temperature, and is useful for preventing fumes from entering the vehicle.

**Timed recirculation:** Recirculation will switch off automatically after a set time (dependent on the ambient temperature).

**Latched recirculation:** Recirculation will remain on until the button is pressed again.

**Note:** *Prolonged use at low temperatures may cause the windows to mist.*

Recirculation may also be selected in AUTO mode, if the climate control system detects high levels of pollution in the atmosphere outside the vehicle (if an air quality sensor is fitted). Manual operation of the recirculation control will override the automatic setting.

## AIR QUALITY SENSOR

If the air quality sensor detects pollution, air recirculation is selected automatically to reduce pollutants entering the vehicle.

The sensitivity of the sensor can be adjusted using the touch screen:

1. Select **Settings** from the Climate menu.

2. Touch the +/- buttons on the screen to increase/decrease sensitivity.

To switch the function off, decrease sensitivity to the minimum setting.

## EXTERNAL TEMPERATURE

The external temperature is displayed at the top of the Climate menu and in the instrument panel.

When the external temperature is low enough that ice may be present on the road, an amber snowflake warning lamp will illuminate in the instrument panel.

## AUTO MODE

AUTO mode should be used as the normal operating mode. The air conditioning, heating and ventilation controls automatically provide an optimum environment at the selected temperature.

**Note:** *Screen heating and timed air recirculation may be selected in AUTO mode. Any other manual adjustment cancels AUTO operation.*

**Note:** *Water expelled by the air conditioning may collect underneath the vehicle when parked. This is not cause for concern.*

## TEMPERATURE CONTROLS

The driver and three separate passenger zone temperatures can be independently adjusted using the rotary controls. Alternatively, using the touch screen, touch the red button to increase and the blue button to decrease temperature.

The temperature for each zone is displayed on the relevant (front or rear) climate menu.

**Note:** *The maximum possible temperature differential between the driver and passenger settings is 3°C (5.4°F).*

## SEAT MASSAGE

**Note:** *Seat massage will only operate when the engine is running.*

*Seat massage may not operate when the vehicle interior temperature is below 0° c or above 50° c.*


Seat massage is controlled through the touch screen:

- Either, press the seat menu button on the fascia or;
- From the Climate menu, select **Front seats**.
- Select **Start** or **Stop** for the relevant seat to switch the seat massage on or off.

After 10 minutes, the seat massage will stop automatically.

# Heating and ventilation

## REAR

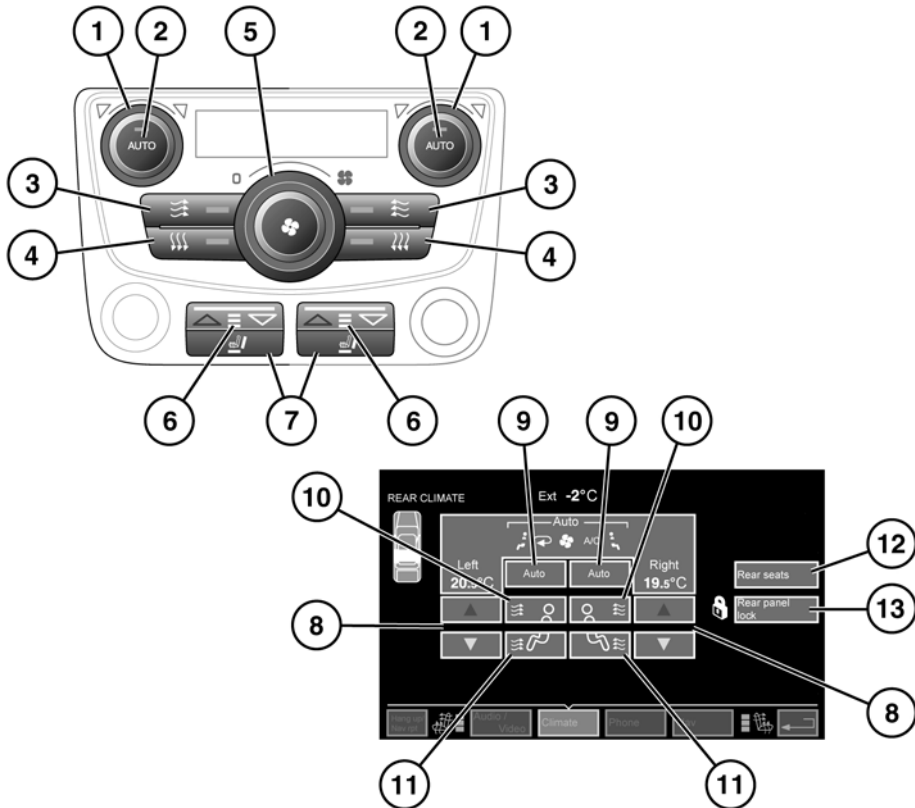

SJ1528

To access the rear climate touch screen menu, select **Rear climate** from the front climate menu.

1. Temperature control: Rotate to adjust temperature (16°C - 28°C [59°F - 83°F]). The temperature is displayed on the touch screen (rear climate menu).
2. AUTO control: Press to switch automatic operation on.

3. Air distribution to face: Press to switch on/off. Switch indicator illuminates when on.
4. Air distribution to feet: Press to switch on/off. Switch indicator illuminates when on.
5. Blower speed: Rotate to adjust blower speed.

With blower speed at minimum, rotate the control anticlockwise to switch the climate system off. Press AUTO to turn on again.

6. Seat temperature control: Press the red arrow to increase and the blue arrow to decrease temperature. The LEDs illuminate to indicate current setting.
7. Climatic seat zone control: Press to select full seat or backrest only ventilation. The switch indicators illuminate accordingly.
8. Temperature adjustment: Select the red arrow to increase and the blue arrow to decrease temperature. The temperature setting is displayed above the arrows.
9. Auto: Select to switch automatic operation on/off.
10. Air distribution to face: Touch to turn on/off.
11. Air distribution to feet: Touch to turn on/off.
12. Rear seats: Select to adjust the rear seat temperature and ventilation settings.
13. Rear panel lock: Select to disable the rear climate control switches, to prevent the rear passengers from adjusting the rear climate settings (padlock symbol is displayed). Select again to re-enable the controls.

In addition to the selectable controls, the rear climate menu displays symbols that indicate the status of heating and ventilation functions.

**Note:** If the climate control system is switched off, pressing a rear AUTO button will switch the climate control system on.

**Note:** If the system is in Defrost mode, all rear controls are disabled and no airflow is available to the rear occupants.

## SEAT MENU BUTTON



Press to access the front seat heating, ventilation and massage controls on the touch screen.

## HEATED SEATS

**Note:** The seat heaters will only operate when the engine is running.

The heated seats are controlled through the touch screen.

To access the heating controls for front seats:

- Press the seat menu button on the fascia.
- Or, select the seat icon on the touch screen navigation bar.
- Or, from the Climate menu, select **Front seats**.

To access the heating controls for rear seats from the front touch screen:

- From the Climate menu, select **Rear climate**, then select **Rear seats**.

To adjust the seat temperature:

- Touch the upper (red) or lower (blue) arrow for the relevant seat repeatedly, to select one of three temperature settings (as indicated by the bars adjacent to the arrows).
- If no bars are illuminated, the seat heaters are switched off.

## CLIMATE SEATS

**Note:** The climate seats will only operate when the engine is running.

Seat ventilation is controlled through the touch screen or by the buttons in the rear control panel. Ventilation can be heated or cooled and can be selected for the whole seat or backrest only.

To access the ventilation controls for front seats:

- Press the seat menu button on the fascia.
- Select the seat icon on the touch screen navigation bar.
- From the Climate menu, select **Front seats**.

# Heating and ventilation

To access the ventilation controls for rear seats from the front touch screen:

- From the Climate menu, select **Rear climate**, then select **Rear seats**.

To adjust seat ventilation temperature:

- Touch the upper (red) arrow or lower (blue) arrow for the relevant seat repeatedly, to select from three heated and three cooled settings (as indicated by the bars adjacent to the arrows).
- If no bars are illuminated, seat ventilation is switched off.

To select backrest ventilation only:

- Select **Seat zone**. Only the backrest area of the seat icon will be illuminated.
- Select **Seat zone** again to activate full seat ventilation.