


# Rear seat entertainment

## CONTROLS (FRONT TOUCH SCREEN)

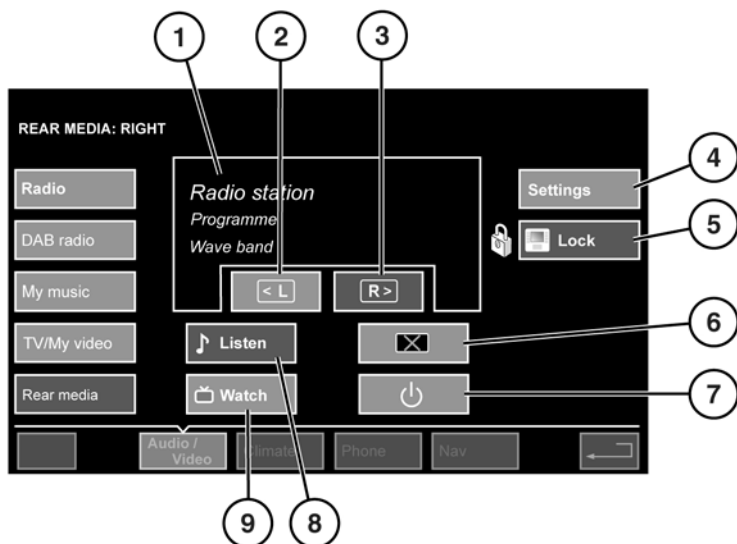

SJ1278

1. Current media display.
2. Left rear screen select.
3. Right rear screen select.
4. Settings screen.
5. Remote control lock.
6. Turns off the selected screen.
7. Rear media on/off.
8. Audio source select.
9. Video source select.

### REAR MEDIA CONTROL FROM THE TOUCH SCREEN

When the main rear media control screen is displayed on the touch screen, the rear media remote control will be locked out. No part of the rear media system will operate until it is turned on via the touch screen.

### REAR MEDIA SETTINGS

The rear media settings screen allows **Limousine Mode** and **Parental Control** to be turned on or off, and the **Age Warning** threshold to be set.

When **Limousine Mode** is on, the rear passengers will have control of the total cabin audio system via the remote control.


When **Parental Control** is on and the age limit is set, a message is sent to the touch screen if the content is unsuitable.



It remains the responsibility of the parent or guardian to ensure that the content is suitable for viewing by children.

**Note:** When **Parental Control** is off the age limit slider is hidden.

## TOUCH SCREEN REMOTE CONTROL

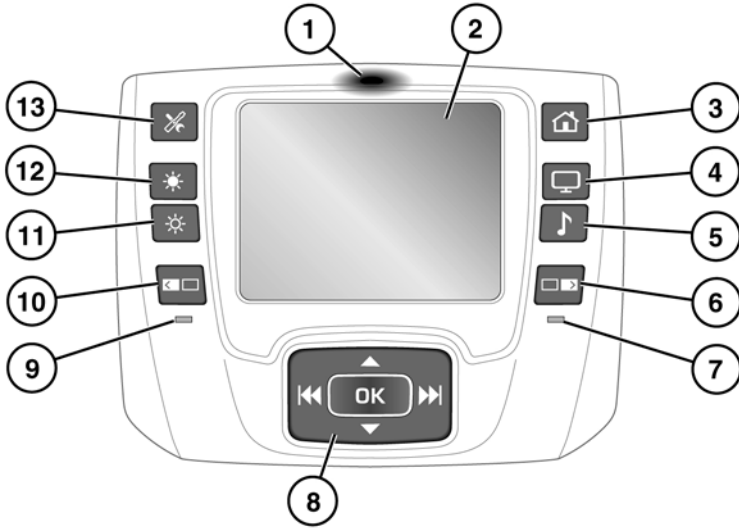

SJ1541

1. Press to undock remote control.
  - ⓘ Do not press the touch screen to undock the remote control.
2. Touch screen.
3. Home screen.
4. Video source.
5. Audio source.
6. Right screen select.
7. Right screen tell-tale. Illuminates when right screen has been selected.
8. Cursor movement and option select buttons.
9. Left screen tell-tale. Illuminates when left screen has been selected.
10. Left screen select.
11. Touch screen brightness decrease.
12. Touch screen brightness increase.
13. Touch screen settings.


## USING THE SYSTEM

The system is operated using the remote control either while it is docked in the rear seat arm rest, or when it is removed and hand-held. The remote is removed from the arm rest by pressing the top of the remote (1) to unlatch it.

ⓘ Do not attempt to pull the remote control out of its docked position.

When the system is activated the remote control touch screen becomes active.

# Rear seat entertainment

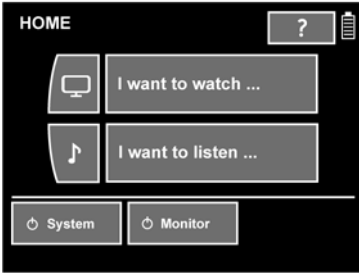

SJ1276

Using the appropriate button (**6** or **10**) or on screen soft key (right or left) to select the required screen, will allow options to be set and selected.

**Note:** A help screen is available from each screen/menu. To view the help screen for guidance on the available functions and options, touch the question mark (?) icon.



SJ1277

## REMOTE CONTROL BATTERY

The remote control battery is automatically recharged while the remote is docked. The battery is not serviceable and should not be changed or removed by the user.

## HEADPHONES

The volume control for each set of headphones is adjusted on the headphones.