


## TELEPHONE SYSTEM OVERVIEW

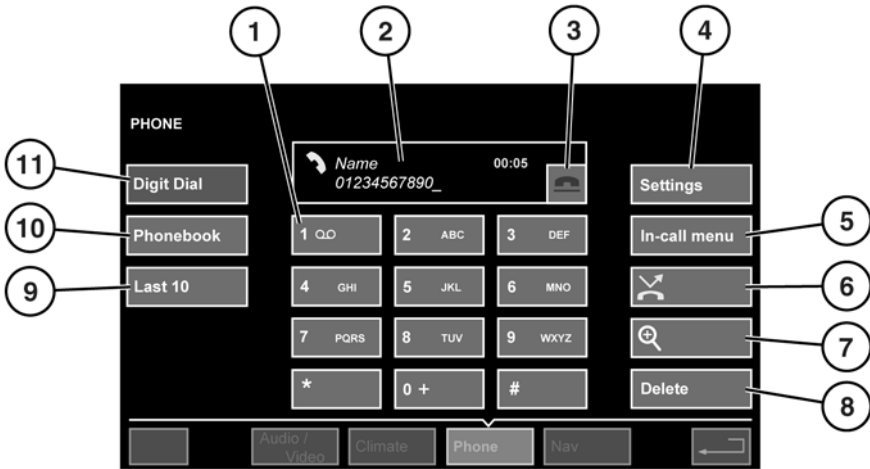

SJ1092

1. Touch and hold to retrieve your Voice mail.
2. Status display. Displays the name and/or number dialed and call duration.
3. Call Connect/Disconnect icons. Touch to send/accept or end/reject a call.
4. Select to access the Settings options; Devices, Voice mail, Answer options and Phone options.
5. Select to access the in-call menu options; Mute microphone and Privacy mode.
6. Touch to activate/deactivate Auto reject. When active, any incoming calls will be rejected or diverted to voice mail (depending on mobile phone settings).
7. Select to enlarge the telephone keypad. Select again to return the keypad to the original size.
8. Touch and release to delete the last entered digit. Touch and hold to delete the whole entered number.
9. Select to access the last 10 dialed, received and missed calls.
10. Select to access the phonebook.
11. Select to access Digit Dial mode.

## BLUETOOTH® INFORMATION



Bluetooth® is the name for short-range radio frequency (RF) technology that allows electronic devices to communicate wirelessly with each other.

The Jaguar Bluetooth® system supports Bluetooth® Hands-Free Profile (HFP), Advanced Audio Distribution Profile (A2DP) and Audio Video Remote Control Profile (AVRCP).

**Note:** HFP and A2DP/AVRCP profiles can be connected independently, so a phone can be connected via one, while a media device can be connected via the other, at the same time.

Before use, your mobile phone must be paired and connected with the vehicle's Bluetooth® system. This is done via your mobile phone or the touch screen. See **118, PAIRING AND CONNECTING USING THE TOUCH SCREEN** or **118, PAIRING AND CONNECTING USING YOUR MOBILE PHONE**.

Once a mobile phone has been paired and connected with the vehicle, the system will attempt to connect with the last connected phone each time the ignition is switched on.

As these mobile phones have a wide range of audio and echo characteristics, it may take a few seconds for the vehicle's Bluetooth® system to adapt and deliver optimum audio performance.

To get the best performance and minimal echo and noise from the hands-free system, it may be necessary to reduce the in-vehicle volume and ventilation fan speed slightly.

## TELEPHONE SAFETY



**Switch off your telephone in areas with a high explosion risk. This includes filling stations, fuel storage areas or chemical factories, as well as places where the air contains fuel vapour, chemicals or metal dust.**



**The functioning of cardiac pacemakers or hearing aids may be impaired when the phone is in use. Check with a doctor or manufacturer whether any such devices you or your passengers are using, are sufficiently protected against high-frequency energy.**

The Health Industry Manufacturers' Association recommends that a minimum separation of 15 centimetres (six inches) is maintained between a wireless phone antenna and a pacemaker, to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by, and recommendations of, Wireless Technology Research.



**Always stow your mobile phone securely.**

## TELEPHONE COMPATIBILITY

The vehicle's Bluetooth® telephone system can be used with an appropriate Bluetooth® equipped mobile telephone.

***Note:** Some Bluetooth® mobile phones are better than others at utilising the full potential of the vehicle's Bluetooth® system.*

Please refer to the Ownership section of the Jaguar website at [www.jaguar.com](http://www.jaguar.com), for a list of compatible phones. Alternatively, please refer to your Dealer/Authorised Repairer.

***Note:** The Bluetooth® equipped phones listed on [Jaguar.com](http://Jaguar.com), have been tested for compatibility with Jaguar vehicles.*

*Performance will vary based on the phone's software version, battery condition, coverage and your network provider. Phones are warranted by their manufacturer, not Jaguar.*

The Bluetooth® system supports Bluetooth® Hands Free Profile 1.5 (HFP 1.5). If the mobile phone paired to the system also supports this profile, additional features will be available such as battery meter, signal strength and network operator. If the mobile phone does not support these features, they will not be available on the touch screen. However, you can refer to the mobile phone's display to determine these items.

## PAIRING AND CONNECTING USING THE TOUCH SCREEN

1. Switch on your mobile phone's Bluetooth® connection using the phone's menu. Make sure that your mobile phone is in Bluetooth® 'discoverable' mode, sometimes referred to as 'find me' mode (see your phone's operating instructions for more information).

2. Switch the ignition system on and ensure the touch screen is active.

3. From the home menu, select **Phone**.

4. A menu will appear. Select **Search new**.

5. Identify your phone from the displayed list and select the corresponding **Pair and connect** option.

**Note:** *If more than 5 phones are detected, it may be necessary to use the scroll bar to see the entire list.*

6. When prompted, enter the 4-digit code into your phone (see your phone's operating instructions for more information).

7. Once your phone is paired and connected to the system, a confirmation message will be displayed before switching to the Digit Dial screen.

**Note:** *Some mobile phones require the Bluetooth® pairing to be set as 'authorised' or 'trusted' in order to automatically connect. Please see your phone's operating instructions for further information.*

**Note:** *Due to the duration of a Bluetooth® search, it is advised that the timeout to home screen feature is switched off before attempting to search for Bluetooth® devices. This setting can be changed within **Vehicle, Syst settings, Display set, Timeout to home screen**.*

## PAIRING AND CONNECTING USING YOUR MOBILE PHONE

Rather than using the telephone system to search for your phone, you can choose to pair and connect to the system from your mobile phone.

**Note:** *The process of pairing and connecting your phone with the vehicle using the mobile phone will vary depending on the type of mobile phone used.*

1. Switch the ignition system on and ensure that the touch screen is active.

2. From the home menu, select **Phone**.

3. A menu will appear. Select **Use handset**.

**Note:** *The time that the vehicle's Bluetooth® system is discoverable is limited to 3 minutes.*

4. Using the mobile phone, search for Bluetooth® devices. On some phones, this is referred to as new paired device. See your phone's operating instructions for further information.

5. When the vehicle's Bluetooth® system is discovered (named Jaguar XJ) by the mobile phone, use the phone to begin pairing. Either the mobile phone or the vehicle's Bluetooth® system will ask you to enter a Personal Identification Number (PIN). Enter a PIN of your choice and press **OK**.

6. Enter the same PIN into the other device.

**Note:** *The vehicle's Bluetooth® PIN must be the same as entered on the phone.*

7. Once your phone is paired and connected to the system, a confirmation message will be displayed before switching to the Digit Dial screen.

**Note:** Some mobile phones do not automatically connect and will require to be manually connected via the handset or using the **Change phone** option.

## CHANGING THE CONNECTED PHONE

Up to 10 mobile phones can be paired with the vehicle in the same way. However, only one can be connected as a phone at any one time.

To connect a different paired phone to the vehicle, follow the steps below:

1. From the home menu, select **Phone**.
2. A menu will appear. Select **Change phone**.
3. Identify your phone from the displayed list and select the corresponding **Connect** option.
4. Once your phone is connected to the system, a confirmation message will be displayed before switching to the Digit Dial screen.

## TELEPHONE SYSTEM ICONS



Connect icon. Use to send or accept a call



Disconnect icon. Use to end or reject a call.



Phone signal strength indicator.



Phone battery level indicator.



Phone device icon - indicates that a detected Bluetooth® device is a phone.



Media player device icon - indicates that a detected Bluetooth® device is a media player.



Scroll bar arrows. Use to scroll up or down lists of detected phones, calls or phonebook entries.

## STEERING WHEEL CONTROLS



Connect switch. Press and release to send or accept a call or to access the last 10 dialled list. Press and hold to access the phonebook.



Disconnect switch. Use to end or reject a call.



No phone connected.



Voice control talk button.



Press to increase call volume.



Press to decrease call volume.



Press to scroll up or down lists of calls or phonebook entries.



# Telephone

## CALL VOLUME

The phone call volume is operated by the audio system's volume control.

If the audio system is in use when a phone call is active, the audio system source is suppressed for the duration of the call. Navigation instructions and parking aid warnings are not suppressed.

## DIGIT DIAL

Once your phone is connected to the vehicle's system, Digit Dial is the default screen in Phone mode.

Using the on-screen keypad, enter the required number and touch the connect icon to send.

**Note:** When entering a number, you can change the phone number shown on the touch screen using the **Delete** button. A momentary touch erases a single digit, a long touch erases the complete number.

## PHONEBOOK

The vehicle system will automatically download contact information from the mobile phone to the vehicle's phonebook each time the it is connected to the system.

To enable/disable the Auto download feature:

1. From the Phone menu, select **Settings**.
2. Select **Phone options**.
3. Select **Phonebook**.
4. Select Auto download **Off** or **On**.

**Note:** It is only possible to view the phonebook of the phone that is currently connected to the vehicle's system.

To access contacts from the phonebook:

1. From the Phone menu, select **Phonebook**.

2. Using the alpha keys, select the letter you wish to search under. Repeated selections of the same key scrolls through the letters displayed on the keys.
3. Select **OK** to confirm.
4. Identify the required contact from the displayed list and touch to call. If a contact has more than one number stored, select the required number from the list.

**Note:** It may be necessary to use the scroll bar to see the entire list.

There are also options to view more contact information, by selecting the corresponding *i* key.

Certain mobile phones store the phonebook in two different areas, the SIM card and the phone memory. The vehicle will only download contact information from the phone memory. To ensure all contacts are downloaded, they must be copied from the SIM card to the phone memory.

If your phone supports contact type data, you will be able to see a contact type icon in the vehicle's phonebook directory. These can be seen on the right-hand side of each contact in the directory and will indicate one of the following types:



Voice (Default).



Mobile.



Home.



Work.

## LAST 10 OPTION

The **Last 10** option allows you to view the last 10 calls made, received or missed.

1. From the Phone menu, select **Last 10**.
2. Select **Calls made**, **Calls received** or **Calls missed**.
3. Identify the required call from the displayed list and touch to call.

**Note:** *It may be necessary to use the scroll bar to see the entire list.*

There is also an option to view more contact information by selecting the corresponding **i** key.

**Note:** *The vehicle will display the list in the order the calls were recorded. If this information is not available, they will be displayed as they are sent from the mobile phone. Some phones may arrange the list in reverse or other order.*

**Note:** *If the mobile phone does not provide this list, the vehicle will create a Last 10 list. This list will be discarded when the phone is disconnected.*

## SETTINGS

Depending on vehicle specification, there are up to 4 options in the **Settings** menu.

1. The **Devices** option allows you to disconnect the phone from the system, change the connected phone, search for a new Bluetooth® enabled phone or to enable a phone to discover and pair to the vehicle's system.
2. The **Voice mail** option allows you to save or edit the number of the voice mail server for your specified network provider.
3. The **Answer options** allows you to enable/disable the Auto answer and Caller announce features.

4. The **Phone options** allow you to set your desired ring tone either to the preset car ring tone, or to the handset ring tone. The Phone options also gives you access to the Phonebook options. See **120**, **PHONEBOOK**.