
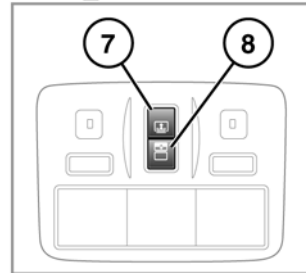
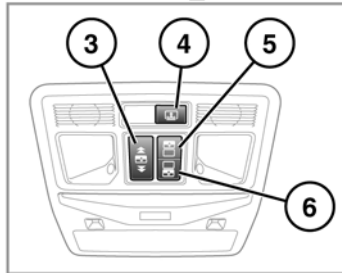
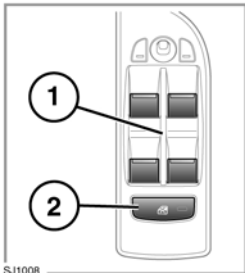



## ELECTRIC WINDOWS

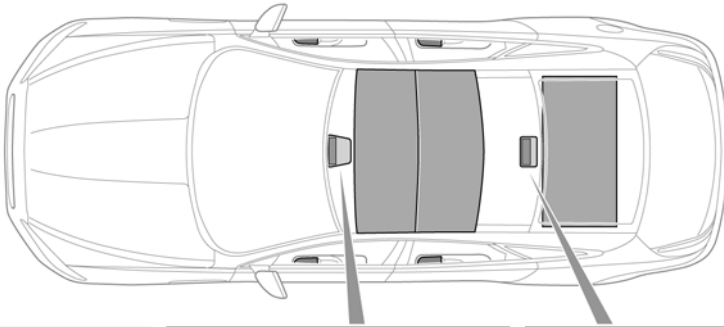


### 1. Window switches.

The windows will operate for five minutes after the engine is switched off, as long as none of the doors are opened.

 Any ice should be removed from the windows prior to operation.

### 2. Rear window/rear sunroof blind isolator.


 **If children are carried in the rear seats, the isolator switch should be used to prevent operation of the windows.**

### 3. Sunroof: Press once to tilt the roof. Once tilted, press again to open the roof.

Press to close the roof from tilt. From the fully open position, press once to close to the tilt position, then press again to close fully.

Roof movement can be halted at any time by pressing the button again.

**Note:** *The front roof blind will open when the roof is tilted or when the roof is fully opened.*

 The roof blinds are electrically operated. Do not try to operate them manually.

If the sunroof encounters resistance when closing it will stop, and then open fully. This is to prevent serious injury or damage to the mechanism.

### 4. Rear screen sun blind.

### 5. Rear sunroof blind. One push of the button will fully open or close the blind. Opening or closing cannot be halted part way.

6. Front sunroof blind. One push of the button will fully open or close the blind. Opening or closing cannot be halted part way.

**Note:** The blind cannot be closed when the sunroof is open.

7. Rear screen blind.
8. Rear sunroof blind. One push of the button will fully open or close the blind. Opening or closing cannot be halted part way.

## ONE-TOUCH WINDOW OPERATION

All four windows have one-touch operation. Briefly pull the switch up and release; the window will continue to raise until fully closed. Briefly press the switch down and release, the window will continue to lower until fully open. Pressing or pulling the switch again will stop the window.

## WINDOW ANTI-TRAP PROTECTION



**Before closing a window, ensure that no occupants have any part of their body in a position where it could be trapped. Death or serious injury could occur, even with an anti-trap system.**

Anti-trap protection is designed to stop window movement if an obstruction or resistance is detected. Check the window and its aperture and remove any obstructions. The override procedure is as follows:-

1. Attempt to close the window. Anti-trap will prevent closure and lower the window.
2. Within ten seconds, attempt to raise the window again. Anti-trap will prevent closure and lower the window.
3. Attempt to close the window for a third time, this time holding the switch in the close position. The window will raise whilst the switch is held. Hold until closed.

**Note:** If this procedure fails to remove the blockage, or if the windows do not operate correctly, the window operation may need to be reset. See **151, WINDOW RESET**.

## SUNROOF ANTI-TRAP MECHANISM

The anti-trap mechanism can be overridden to allow the roof to be closed when movement is restricted by dirt. To override the anti-trap mechanism, press and hold the front of the switch until the roof reaches the closed position.

If the sunroof fails to operate correctly, it may need to be reset. See **151, SUNROOF RESET**.