

OPERATION

JaguarVoice control allows you to operate the telephone, navigation and touch screen systems using spoken commands. A notepad facility also allows you to record notes.



The system is controlled by the Voice button, located on the steering wheel.

- Press briefly to start a Voice session.
- Press and hold to cancel a voice session.

Once a Voice session is started, a tone will sound and **LISTENING** is displayed in the message center, to indicate that the system is waiting for a voice command.

Wait for the tone to sound and give a command. The system will repeat the command (as understood by the system) back to you as confirmation. The command will then be acted on or the system will ask for further information. Always wait until after the tone before giving the next command.

If a command is not understood by the system, **SORRY** is displayed in the message center. Two further attempts to give the command are permitted before the Voice session is cancelled.

Once you are familiar with operating Voice control, you can skip to the end of a Voice system request (to when the tone sounds) by briefly pressing the Voice button. If the system is not ready to receive a command, **VOICE NOT READY** will be displayed.

The following table lists the basic commands for operating the system (including help and tutorial commands).

Note: Information on JaguarVoice operation of the telephone and navigations systems and details of phone and navigation voice commands are detailed later in this handbook.

Command	Description
VOICE HELP	Plays information on operating the Voice system.
VOICE TUTORIAL	Initiates a four-part Voice system tutorial.
DISPLAY HELP	Plays information on touch screen Voice commands.
DISPLAY ON	Turns on the touch screen.
DISPLAY OFF	Turns off the touch screen.
DISPLAY SHOW PHONE	The Phone menu is displayed on the touch screen.
PHONE HELP	Plays information on phone Voice commands.
DISPLAY SHOW NAVIGATION	The Navigation main menu is displayed on the touch screen (the navigation caution must be accepted beforehand).
NAVIGATION HELP	Plays information on navigation Voice commands.
NOTEPAD HELP	Plays information on notepad commands.
RECORD NOTE	Allows recording of a note, up to 30 seconds long.
PLAY NOTEPAD	Plays all currently stored notes.
CLEAR NOTEPAD	Deletes all currently stored notes.

VOICE TUTORIAL

To listen to a tutorial detailing the operation of the Voice system:

- Briefly press the Voice button to start a voice session.
- Wait for the tone to sound, then say **Voice tutorial**.

Alternatively, the tutorial can be selected using the touch screen, as follows.

- Select **Comms** from the touch screen Home menu.
- Select **Voice** from the Comms menu.
- Select **Operating guide** from the Voice menu.
- Select **Voice tutorial**.

The voice tutorial can be cancelled at any time by briefly pressing the Voice button and saying **CANCEL**. Using the commands **PREVIOUS** and **NEXT** allow you to skip to a previous or the next lesson of the tutorial.

VOICE SESSION INTERRUPTIONS

Certain conditions will cause the current voice session to be cancelled, as follows:

- If a phone call is received.
- If a high priority warning appears in the message center.
- If there is no user input for a sustained length of time.

Press the Voice button to start a new voice session.

NAMETAGS

Nametags enable the user to personalise the Voice system so that a single name can be used to call-up a navigation destination or waypoint, or a telephone number. Details of how to apply nametags are given later in this handbook.

To hear a list of all stored nametags, press and release the Voice button, then say **PHONE PLAY DIRECTORY** or **NAVIGATION PLAY DIRECTORY**.

NOTEPAD

The notepad can be used to record notes, each up to 30 seconds long, which can be subsequently recalled.

RECORDING A NOTE

1. Briefly press the Voice button, wait for the tone to sound, then say **RECORD NOTE**.
2. Speak the note, then press and hold the Voice button to end and save the note.

Note: If the note exceeds 30 seconds the recording will end automatically.

PLAYING NOTES

Briefly press the Voice button, wait for the tone to sound, then say **PLAY NOTEPAD**.

If multiple notes are stored; to skip to the next note, briefly press the Voice button during playback and say **NEXT**.

DELETING NOTES

To delete a single note, briefly press the Voice button during playback of the note and say **DELETE**.

To delete all stored notes, briefly press the Voice button and say **CLEAR NOTEPAD**.

VOICE VOLUME

Briefly press the Voice button to initiate a Voice session, then use the volume control on the thumbwheel to adjust Voice volume as required.

***Note:** Voice volume can also be adjusted in the Infotainment volume settings area of the touch screen.*

VOICE LANGUAGE

The language for JaguarVoice can be changed using the touch screen as follows:

1. From the Home menu, select **Comms**.
2. From the Comms menu, select **Voice** and then **Settings**.
3. Select **Change**, then select the desired language from the options available.

***Note:** Changing the Voice recognition language will not affect the language settings for the touch screen.*