

Panic alarm



Press and hold for three seconds, or press three times within three seconds, to activate the emergency alarm. The horn and hazard warning lamps will operate.

Once active for more than five seconds, the alarm can be cancelled by pressing and holding the button for three seconds.

The emergency alarm will also be cancelled if the Jaguar Smart Key is inserted into the starter control unit and the starter button is pressed, or if the vehicle detects a valid Jaguar Smart Key when the starter button is pressed.

Care of the Jaguar Smart Key

CAUTIONS



Do not expose the Jaguar Smart Key to extremes of heat, dust, humidity or allow contact with fluids.



Do not leave the Jaguar Smart Key exposed to direct sunlight.

Irregular operation

If difficulty is experienced with remote keyless entry, keyless entry, keyless starting or Jaguar Smart Key operation, it may be caused by:

- Internal battery low voltage. Replace the battery. See **CHANGING THE REMOTE CONTROL BATTERY** (page 21).
- High levels of localised external electrical interference, e.g. a radio transmitter.

Until the Jaguar Smart Key battery can be replaced, or until the vehicle is outside the area of electrical interference, the Jaguar Smart Key should be inserted into the starter control unit. See **DOCKING/UNDOCKING THE JAGUAR SMART KEY** (page 18).

UNLOCKING AND DISARMING THE VEHICLE



Your vehicle can be unlocked using either Single or Multi-point entry.

Single-point entry is a security feature that only unlocks the driver's door when the unlock button is pressed.

To change from single to multi-point entry (or vice versa), press both the lock and unlock buttons on the Jaguar Smart Key simultaneously for three seconds. The hazard warning lamps will flash twice to confirm the change. The change can also be achieved using the vehicle touch-screen. See **PROGRAMMING THE REMOTE CONTROL** (page 20).

Single-point entry

First press: Unlocks the driver's door and enables the passenger door to be opened from the inside. The hazard warning lamps will flash twice to indicate that the vehicle is unlocked and the alarm has been disarmed. The interior lamps will illuminate to assist entry to the vehicle.

Second press: Unlocks the passenger door and the luggage compartment.

Multi-point entry

Press briefly to unlock the doors and luggage compartment and to disarm the alarm. The hazard warning lamps will flash twice to indicate that the vehicle is unlocked and the alarm has been disarmed. The interior lamps will illuminate to assist entry to the vehicle.

Global open

Press and hold the unlock button to open all the windows on the vehicle.