


AUTOLAMPS WITH EXIT DELAY

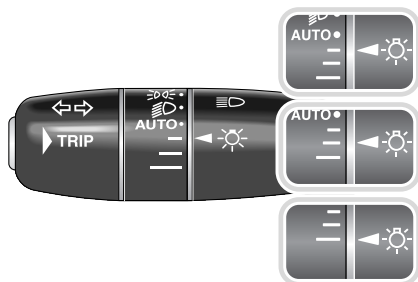

E91143

Three settings on the rotary collar set the time that the headlamps will remain on after the driver's door has closed:

- 30 seconds.
- 60 seconds.
- 120 seconds.

The message centre will display the change set delay **AUTOLAMP DELAY X:XX** or **AUTOLAMP DELAY OFF** when the autolamp delay function has been turned off.

Note: *If the lamp switch rotary collar is in the **AUTO** position there will be no exit delay and the headlamps will turn off when the ignition system is off.*

DAYLIGHT RUNNING LAMPS

With the rotary collar in the OFF position, the front daylight running lamps, will switch on automatically with the following conditions:

- The ignition is on.
- The engine is running.
- The vehicle gear selector out of **P** (Park).
- The parking brake is not applied (is released).

CONVENIENCE HEADLAMPS



This feature is activated by pressing the headlamp icon button on the Jaguar Smart Key. See

USING THE JAGUAR SMART KEY (page 16).

The headlamps will remain on for 25 seconds or until the button is pressed again, or until the engine START/STOP button is pressed.

Note: *In certain markets, the second press of the button will illuminate the reverse lamps and a third press will turn the convenience lamps off.*

DOOR GUARD AND PUDDLE LAMPS

Door guard lamps are fitted to each door to give warning of an open door to passing vehicles. Puddle lamps illuminate the step out area at night.

Each lamp comes on automatically when the door is opened. If the door is left open the lamps remain on for approximately 15 minutes after returning from convenience mode to power off.

CONDENSATION

In certain circumstances, misting may occur on the inside of a lamp lens. This is caused by natural changes in environmental conditions.

This misting is not detrimental to lamp performance and will clear during normal usage.