


Finding a subchannel

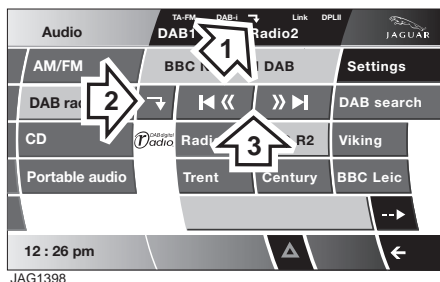

If subchannels are available under the current channel, the subchannel arrow icon (1) is displayed at the top of the touch-screen and the Subchannel button is enabled.

To access the subchannels, select the downward-pointing arrow (2). Select the seek buttons (3) to find the next/previous subchannel.

To return to the channel tier, select the upward-pointing arrow.

Note: When you select and play a subchannel, the subchannel icon is replaced by **SubCh**.

Note: You cannot store a subchannel as a preset.

Note: If you select the preset button for the channel containing the subchannel you are currently playing, you will be returned to the channel.

Finding an ensemble

Touch and hold (two seconds) the seek buttons to find the next or previous ensemble. See **AUDIO CONTROLS** (page 239).

After a few seconds pause, the first channel in the ensemble found will start playing.

DAB search


The DAB search menu enables you to view lists of available ensembles, channels and subchannels. You can also perform searches based on programme type (PTY).

Select **DAB search** to display the DAB search menu.

Auto-tune

Select **Auto-tune** to build a list of available ensembles and channels for your current location. See **CHANNEL AUTOMATIC TUNING** (page 241).

Ensemble list

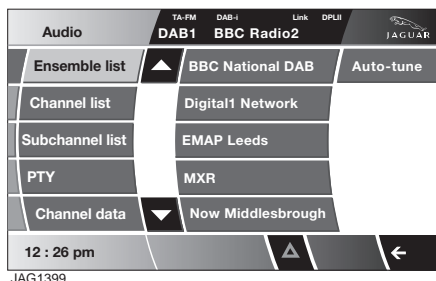

Select **Ensemble list** to display a list of all available ensembles. Select an ensemble name in the list to display a list of channels in that ensemble. Select a channel name to tune that channel.

Channel list

Select **Channel list** to display a complete list of all channels in all available ensembles. Select a channel name to tune that channel.