

## NAVIGATION SETUP

To access navigation:

- Select **Navigation** on the home menu.
- Read the caution screen and touch **Agree** or **Language** (if a change of language is required).
- Touching **Agree** gives access to the Main menu screen.


- Select the menu item required.

There are additional sections in this handbook specifically showing Points of Interest (POI's) and End User Licence Agreements.

**Note:** The buttons will disappear after approximately 12 seconds. To view the buttons again, select **Menu**. Touching the map will also remove the buttons.

## MAIN MENU

SJ1749

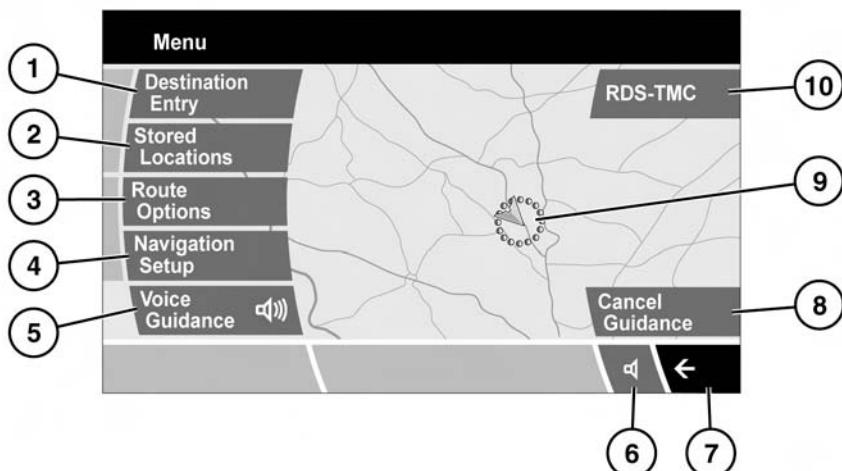

1. **Destination Entry** - Provides a choice of options for entering a destination.
2. **Stored Locations** - Provides access to any previously stored destinations.
3. **Route Options** - Allows the user to select various options for the route. Also allows the user to cancel guidance during the journey.
4. **Navigation Setup** - Provides access to user selectable settings for the navigation system.
5. **Voice Guidance** - Touch to turn voice guidance on or off.

6. Touch to repeat last voice instruction.
7. Return arrow, returns to the previous screen.
8. **Cancel Guidance** - Touch to cancel guidance.
9. Current vehicle position and direction of travel.
10. **RDS-TMC**, see 125, **SURVEILLANCE SETTING**.