

# Heating and ventilation

Recirculation may also be selected in **AUTO** mode, if the climate control system detects high levels of pollution in the atmosphere outside the vehicle (if an air quality sensor is fitted). Manual operation of the recirculation control will override the automatic setting.

## AIR QUALITY SENSOR

If the air quality sensor detects pollution, air recirculation is selected automatically to reduce pollutants entering the vehicle.

The sensitivity of the sensor can be adjusted using the touch screen:

1. Select **Settings** from the Climate menu.
2. Touch the +/- buttons on the screen to increase/decrease sensitivity.

To switch the function off, decrease sensitivity to the minimum setting.

## EXTERNAL TEMPERATURE

The external temperature is displayed in the **Home** menu of the touch screen.

When the external temperature is low enough that ice may be present on the road, an amber snowflake warning lamp will illuminate in the instrument panel.

## TEMPERATURE CONTROLS

The driver and front seat passenger zone temperatures can be independently adjusted.

The temperature for each zone is displayed on the relevant side of the touch screen.

**Note:** *The maximum possible temperature differential between the driver and passenger settings is 3°C (5.4°F).*

## HEATED SEATS

**Note:** *The seat heaters will only operate when the engine is running.*

The heated seats are controlled from the **Home** or **Climate** menu on the touch screen. See **50, TOUCH SCREEN HOME MENU**.

- Touch repeatedly to adjust to the desired temperature, the first press is fully on (3 red bars).
- Touch the red or blue arrows to adjust to the desired temperature.

## CLIMATE SEATS

**Note:** *The climate seats will only operate when the engine is running.*

Seat ventilation is controlled from the **Home** or **Climate** menu on the touch screen.

Heated ventilation:

- Touch the red arrow above the appropriate seat icon to switch heated ventilation on at maximum (3 red bars).
- Touch the blue arrow below the seat icon once or twice to reduce the ventilation setting (2 and 1 red bars).
- Touch the blue arrow a third time to switch off seat ventilation.

Cooled ventilation:

- Touch the blue arrow below the appropriate seat icon to switch cooled ventilation on at maximum (3 blue bars).
- Touch the red arrow above the seat icon once or twice to reduce the ventilation setting (2 and 1 blue bars).
- Touch the red arrow a third time to switch off seat ventilation.

To select seatback ventilation only:

- Select **Settings** from the **Climate** menu.
- Select the appropriate icon for full seat or seatback only ventilation.