

as in certain circumstances permanent soiling along the folds may occur.

**Cleaning:** Every 1,600 km (1,000 miles) vacuum clean and wash the convertible roof. Your Dealer/Authorised Repairer will be able to recommend suitable products.

**Reproofing:** Every 8,000 km (5,000 miles) reproof the convertible roof material. Your Dealer/Authorised Repairer will be able to recommend suitable products.

## WASHING THE VEHICLE PAINTWORK

- ⚠ Substances which are corrosive can damage the vehicle's paintwork and should be removed to prevent damage.

## USING AN AUTOMATIC WASH

- ⚠ Commercially operated automatic car washes, jet washes and power-operated mops, are not recommended.

## UNDER BONNET CLEANING

- ⚠ Do not use a high pressure washer or steam cleaner in the engine compartment.
- ⚠ Ensure that the brake fluid reservoir is kept dry at all times. Only use a clean, dry cloth to clean the brake fluid cap and reservoir.

## CLEANING GLASS SURFACES

Clean the rear window with a soft cloth to avoid damaging the heating element. Do not scrape the glass or use any abrasive cleaning fluid.

Mirror glass is particularly susceptible to damage. Wash with soapy water. Do not use abrasive cleaning compounds or metal scrapers to remove ice.

## CLEANING THE REAR SCREEN

To avoid damaging the heating and radio elements (coupe only), when cleaning the inside of the rear screen use only a damp cloth or chamois leather. Do not use solvents or sharp objects to clean the glass.

## REMOVING GREASE AND TAR

Remove grease or tar with Jaguar Tar Remover or methylated spirit (alcohol). White spirit is also effective, but must not be applied to rubber, particularly the windscreen wiper blades.

- ⚠ Ensure that after using methylated or white spirit, the area is washed immediately with soapy water, to remove all traces of spirit.

## POLISHING

- ⚠ Chrome polish, or other abrasive cleaners, must not be used on the vehicle's brightwork.

It is recommended that the vehicle is polished regularly using Jaguar polish and a polishing cloth.

## CLEANING THE INTERIOR

- ⚠ The steering wheel centre pad and other areas containing airbags should only be cleaned sparingly with a damp cloth, warm water and a non-detergent soap.

## LEATHER

To prevent ingrained dirt and staining, inspect the seat upholstery regularly and clean every one to two months, as follows:

- Wipe off fine dust from the seat surfaces using a clean, damp, non-coloured cloth. Change frequently to a clean area of cloth, to avoid abrasive action on the leather surface. Avoid over-wetting.