

## FORWARD ALERT (AMBER)



Illuminates when forward alert is active.

## AIRBAG (AMBER)



Flashes if the airbag system or the rollover protection system (convertible only) develops a fault, then illuminates continuously until the fault has been diagnosed and cleared. Seek qualified assistance as soon as possible.

## AUTOMATIC SPEED LIMITER (AMBER)



Illuminates when Automatic Speed Limiter is active.

## TYRE PRESSURE MONITORING SYSTEM (AMBER)



Illuminates when one or more tyres are significantly under-inflated. The vehicle should be stopped as soon as possible and the tyres checked and inflated to the recommended pressure.

The lamp flashes when a fault with TPMS is detected. See **79, TYRE PRESSURE MONITORING SYSTEM**.

## ADAPTIVE FRONT LIGHTING SYSTEM (AMBER)



Illuminates when there is a system fault. The headlamps will still operate, but without this feature operating correctly. Seek qualified assistance as soon as possible.

## HIGH BEAM (BLUE)



Illuminates when the high beam headlamps are switched on or flashed.

## SIDE LIGHTS (GREEN)



Illuminates when the side (parking) lamps are switched on.

## DIRECTION INDICATORS (GREEN)



The appropriate warning lamp will flash when the column stalk is moved up or down to signal a turn.

If a direction indicator bulb fails, the audible ticking and warning lamp will sound and flash at twice the normal rate, when that direction indicator is selected.