


## DAB RADIO CONTROLS

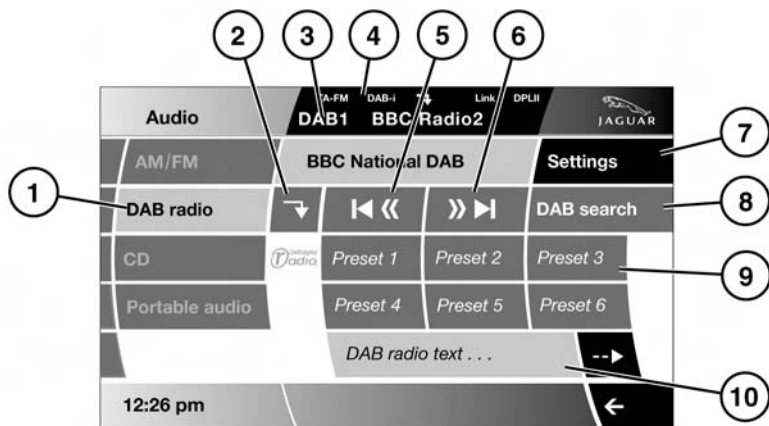

SJ1736

**Note:** When DAB is first used, you will be unable to listen to any digital broadcasts until you have completed the **Auto-tune** process, see **DAB search (8)**.

- 1. DAB Radio:** Touch to view and select a DAB band (**DAB1**, **DAB2** or **DAB3**). The radio will tune to the last used channel on that band. Touch again to close.
- 2. Subchannel:** The subchannel arrow will show at the top of the screen and this button will be enabled if a subchannel is available.
  - Touch to access subchannels and then use the seek up (**6**) or seek down (**5**) buttons to find a subchannel.
- 3.** Indicates currently selected DAB band and station title.
- 4.** Indicates options selected (TA-FM, DAB-i or Link).

- 5. Seek down:**
  - Short touch to seek previous available channel.
  - Long touch to seek previous available Ensemble. The first channel in the new Ensemble will be selected.
- 6. Seek up:**
  - Short touch to find the next available channel.
  - Long touch to find the next available Ensemble. The first channel in the new Ensemble will be selected.
- 7. Settings:** Touch to view the DAB settings menu:
  - **Sound and Bal/Fade:** see **92, AUDIO SETTINGS**.
  - **Options:** Touch to select:
    - Announcements:** Select up to four types of announcements from a list of eleven, for example, **News**, **Area/Weather**, **Traffic** and **Alarm**. When DAB announcement is broadcast, it will interrupt normal play