


DAB radio

DAB RADIO CONTROLS

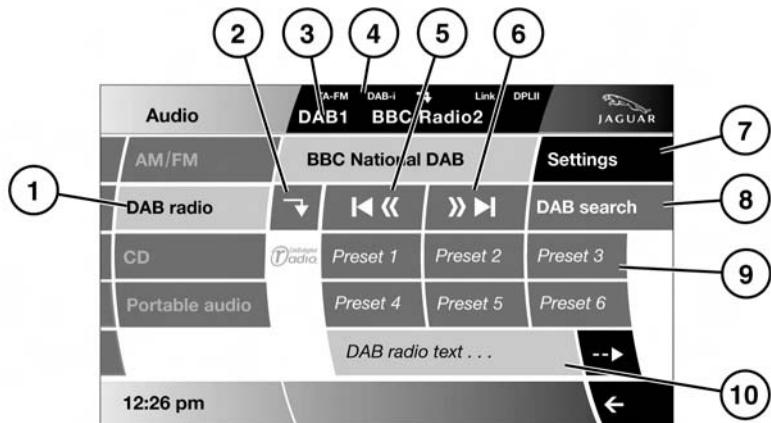

SJ1736

Note: When DAB is first used, you will be unable to listen to any digital broadcasts until you have completed the **Auto-tune** process, see **DAB search** (8).

1. **DAB Radio:** Touch to view and select a DAB band (**DAB1**, **DAB2** or **DAB3**). The radio will tune to the last used channel on that band. Touch again to close.
2. **Subchannel:** The subchannel arrow icon will show at the top of the screen and this button will be enabled if a subchannel is available.
 - Touch to access subchannels and then use the seek up (6) or seek down (5) buttons to find a subchannel.
3. Indicates currently selected DAB band and station title.
4. Indicates options selected (TA-FM, DAB-i or Link).

5. **Seek down:**
 - Short touch to seek previous available channel.
 - Long touch to seek previous available Ensemble. The first channel in the new Ensemble will be selected.
6. **Seek up:**
 - Short touch to find the next available channel.
 - Long touch to find the next available Ensemble. The first channel in the new Ensemble will be selected.
7. **Settings:** Touch to view the DAB settings menu:
 - **Sound and Bal/Fade:** see 92, **AUDIO SETTINGS**.
 - **Options:** Touch to select:
Announcements: Select up to four types of announcements from a list of eleven, for example, **News**, **Area/Weather**, **Traffic** and **Alarm**.
When DAB announcement is broadcast, it will interrupt normal play